# WEED EATER

® Tra

?

Please do not return unit to retailer. Por favor, no devuelva el aparato al lugar de compra. Veuillez ne pas retourner l'outil au détaillant.

1-800-554-6723

www.weedeater.com

# Operator's Manual Manual del Operador Manuel de L'utilisateur

TWIST N' EDGE ™ XT 35 ™



### WARNING:

Read and follow all Safety Rules and Operating Instructions before using this product. Failure to do so can result in serious injury.

# **ADVERTENCIA:**

Lea el manual del operador y siga todas las advertencias e instrucciones de seguridad. El no hacerlo puede resultar en lesiones graves.

# **AVERTISSEMENT:**

Lire le manuel de l'utilisateur et bien respecter tous les avertissements et toutes les instructions de sécurité. Tout défaut de le faire pourrait entraîner des blessures graves.

Frigidaire Home Products, Augusta, GA 30907 WCI Outdoor Products. Inc.

**530083927** 05/03/99

# **SAFETY RULES**

 
WARNING: When using gardening appliances, basic safety precautions should always be followed to reduce the risk of fire and serious injury. Read and follow all instructions. This power unit can be dangerous! Operator is responsible for following unit and manual instructions and warnings. Read entire Operator's Manual before using unit! Be thoroughly familiar with the controls and the proper use of the unit. Restrict the use of this unit to persons who read, understand, and follow unit and manual instructions and warnings. Never allow children to operate this unit.

 


**DANGER:** Never use blades, wire or flailing devices. Unit is designed for line trimmer use only. Use of any other accessories or attachments will increase the risk of injury.



**WARNING:**Trimmer line throws objects violently. You and others can be blinded/injured. Wear safety glasses and leg protection. Keep body parts clear of rotating line.





Keep children, bystanders, and animals 50 feet (15 meters) away. If approached stop unit immediately.

If situations occur which are not covered in this manual, use care and good judgement. If you need assistance, contact your Authorized Service Dealer or call 1-800-554-6723.

# **OPERATOR SAFETY**

- · Always wear safety eye protection.
- Always wear long pants, long sleeves, boots, and gloves. Wearing safety leg guards is recommended. Do not go barefoot or wear sandals. Stay clear of spinning line.
- Secure hair above shoulder length. Secure or remove loose clothing or clothing with loosely hanging ties, straps, tassels, etc. They can be caught in moving parts.

- Do not operate this unit when you are tired, ill, upset, or under the influence of alcohol, drugs, or medication.
- Wear hearing protection if you use this unit for more than 1-1/2 hours per day.
  Never start or run inside a closed room or
- Never start or run inside a closed room or building. Breathing exhaust fumes can kill.
   Keep handles free of oil and fuel.

# **UNIT / MAINTENANCE SAFETY**

- Disconnect the spark plug before performing maintenance except carburetor adjustments.
- Look for and replace damaged or loose parts before each use. Look for and repair fuel leaks before use. Keep in good working condition.
- Replace trimmer head parts that are chipped, cracked, broken, or damaged in any other way before using the unit.
- Make sure unit is assembled correctly as shown in this manual.
- Make carburetor adjustments with lower end supported to prevent line from contacting any object.
- Kéep others away when making carburetor adjustments.
- Use only recommended WEED EATER accessories and replacement parts.

# **FUEL SAFETY**

- Mix and pour fuel outdoors.
  - Keep away from sparks or flames.
- Use a container approved for fuel.
- Do not smoke or allow smoking near fuel or the unit.
- Wipe up all fuel spills
- Move at least 10 feet (3 meters) away from fueling site before starting engine.
- Stop engine and allow to cool before removing fuel cap.

## **CUTTING SAFETY**

- Use only for trimming, mowing, and sweeping. Do not use for edging, pruning, or hedge trimming.
- Inspect the area before each use. Remove objects (rocks, broken glass, nails, wire, etc.) which can be thrown by or become entangled in line. Hard objects can damage trimmer head and be thrown causing serious injury.
- Keep firm footing and balance. Do not overreach
- Keep all parts of your body away from spinning line and muffler. Keep engine below waist level. A hot muffler can cause serious burns.
- Cutting with the line on left side of the shield will throw debris away from the operator.

# TRANSPORTING AND STORAGE

- Allow the engine to cool; secure unit before storing or transporting in vehicle.
- Empty the fuel tank before storing or transporting the unit. Use up fuel left in the carbu-

retor by starting the engine and letting it run . Securely tighten wing nut onto bolt. until it stops.

- Store unit and fuel in an area where fuel vapors cannot reach sparks or open flames from water heaters, electric motors or switches, furnaces, etc.
- · Store unit so line limiter cannot accidentally cause injury. Unit can be hung by the tube.
- · Store the unit out of the reach of children

SPECIAL NOTICE: This unit is not equipped with a temperature limiting muffler and spark arresting screen which meets the re-quirements of California Codes 4442 and 4443. All U.S. forest land and the states of California, Idaho, Maine, Minnesota, New Jersey, Oregon, and Washington require by law that many internal combustion engines to be equipped with a spark arrestor screen. If you operate in a locale where such regulations exist, you are legally responsible for installing and maintaining the operating condition of these parts. Failure to do so is a violation of the law. If a spark arrestor is required in your area, contact your Authorized Service Dealer for the proper kit.


**SPECIAL NOTICE:** Exposure to vibrations through prolonged use of gasoline powered hand tools could cause blood vessel or nerve damage in the fingers, hands, and joints of people prone to circulation disorders or abnormal swellings. Prolonged use in cold weather has been linked to blood vessel damage in otherwise healthy people. If symptoms occur such as numbness, pain, loss of strength, change in skin color or texture, or loss of feeling in the fingers, hands, or joints, discontinue the use of this tool and seek medical attention. An anti-vibration system does not guarantee the avoidance of these problems. Users who operate power tools on a continual and regular basis must monitor closely their physical condition and the condition of this tool.

# **ASSEMBLY**

# ATTACHING THE SHIELD

WARNING: The shield helps to protect the operator and others from thrown objects, and is equipped with a line limiter blade which cuts excess line. This blade (on underside of shield) is sharp and can cut you.

- · Remove wing nut from shield.
- Insert bracket into slot as shown.
- Pivot shield until bolt passes through hole in bracket

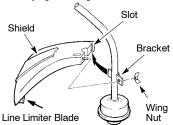

### **FUELING ENGINE**

This engine is certified to operate on unleaded gasoline. Gasoline must be mixed with a good quality 2-cycle air-cooled engine oil designed to be mixed at a ratio of 40:1. Poulan/Weed Eater brand oil is recommended. (A 40:1 ratio is obtained by mixing 3.2 ounces of oil with 1 gallon of unleaded gasoline). When mixing fuel follow the instructions printed on the container. Always read and follow the safety rules under FUEL SAFETY.

# OPERATION

For occasional use only.


### **HOW TO STOP YOUR UNIT**

Push and hold engine stop switch in the STOP or OFF position until the unit has fully stopped.

WARNING: The trimmer head will turn while starting the engine. A hot muffler can cause serious burns

# **HOW TO START YOUR UNIT**

WARNING: The trimmer head will turn while starting the engine. A hot muffler can cause serious burns.

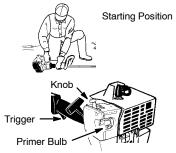

## COLD ENGINE STARTING OR STARTING AFTER REFUELING

- Set unit on a flat surface.
- Slowly press the primer bulb 6 to 8 times.
- Move knob to FULL CHOKE position.
- Squeeze and hold trigger through all remaining steps.
- Pull starter handle until engine attempts to start, but no more than 5 pulls.
- Move knob to HALF choke position.
- Pull starter handle until engine runs.
- Allow engine to run 10 seconds, then move knob to OFF choke position.

# **RESTARTING A WARM ENGINE**

- Move knob to OFF choke position.
- Pull starter handle until engine starts.
- If engine does not start in 5 pulls, follow instructions in STARTING A COLD ENGINE.

# **OPERATING POSITION**



Cut from your right to your left.

# ADVANCING THE CUTTING LINE

Advance line by tapping the bottom of the cutting head lightly on the ground while engine is running at full speed. A metal blade attached to the shield will cut the line to the proper length.


### TWIST-N-EDGE

- · Pull the tab toward the engine.
- Twist the tube to the edging position; release the tab.



# REPLACING THE LINE

- Remove spool by firmly pulling on tap button. Clean entire surface of hub and spool.
- Replace with a pre-wound spool, or cut a length of 20 feet of .080" (2 mm) diameter Weed Eater® brand line. Never use wire, rope, string, etc., which can break off and become a dangerous missile.
- Insert one end of the line about 1/2 inch (1 cm) into the small hole on the inside of spool.

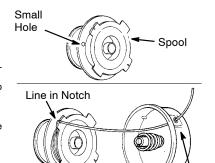

 Wind the line evenly and tightly onto the spool. Wind in the direction of the arrow found on the spool.

Line exit hole

- Push the line into the notch, leaving 3 to 5 inches (7 - 12 cm) unwound.
  Insert the line into the the exit hole in the hub
- as shown in the illustration.
- Align the notch with the line exit hole.

Hub

Push spool into hub until it snaps into place. Pull the line extending outside of the hub to release it from the notch.

# **MAINTENANCE**

We recommend all service and adjustments not listed in this manual be performed by an Authorized Service Dealer.

## CARBURETOR ADJUSTMENTS

Your carburetor is equipped with limiter caps. Carburetor adjustment is a complicated task. We recommend that you take your unit to an Authorized Service Dealer. Damage will occur if you turn the needles beyond the limiter stops.

### **IGNITION TIMING**

The ignition timing is fixed, non-adjustable.

# SPARK PLUG

Replace the spark plug yearly using a Champion RCJ8Y plug. Spark plug gap is .025".

### TROUBLESHOOTING

Engine will not start.

- Fuel tank empty.
- Engine flooded.
- · Spark plug not firing.
- Fuel not reaching carburetor.
- Carburetor requires adjustment.

  The state of the property.

  The state of the property of

Engine will not idle properly.

- Carburetor requires adjustment.Throttle trigger screw too tight.
- Engine will not accelerate, lacks power, or dies under a load.
  - · Air filter dirty.
  - Spark plug fouled.
  - · Carburetor requires adjustment.

Engine smokes excessively.

- Air filter dirty.
- Too much oil mixed with gasoline.
- Carburetor requires adjustment.

Line does not advance or breaks while cutting.

- · Line improperly routed in head.
- Line improperly wound on spool.
- · Line size incorrect.

Line welds onto spool.

- · Line size incorrect
- Line improperly wound on spool.
- Crowding line on material being cut.

Line pulls back into head

- Too little line outside of head.
- · Line size incorrect.

# Need Assistance?

Call 1-800-554-6723.

**Need Service Part?**Contact your dealer or place of purchase.

LIMITED WARRANTY

FRIGIDAIRE HOME PRODUCTS, Div. WCI Outdoor Products, Inc. warrants to the original purchaser that each new Weed Eater brand gasoline tool or attachment is free from defects in material and workmanship and agrees to repair or replace under this warranty any defective gasoline product or attachment as follows from the original date of purchase. 2 YEARS- Parts and Labor, when used for household purposes.

90 DAYS - Parts and Labor, when used for commercial, professional, or income producing purposes

**30 DAYS -** Parts and Labor, if used for rental purposes.

This warranty is not transferable and does not cover damage or liability caused by improper handling, improper maintenance, or the use of accessories and/or attachments not specifically recommended by **FRIGIDAIRE HOME PRODUCTS** for this tool. Additionally, this warranty does not cover tune-ups, spark plugs, filters, starter ropes, starter springs, cutting line, or rotating head parts that will wear and require replacement with reasonable use during the warranty period. This warranty does not cover predelivery setup or normal adjustments explained in the operator's manual.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

NO CLAIMS FOR CONSEQUENTIAL OR OTHER DAMAGES WILL BE ALLOWED, AND THERE ARE NO OTHER EXPRESS WARRANTIES EXCEPT THOSE EXPRESSLY STIPULATED HEREIN.

SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR THE EXCLUSION OR LIMITATIONS OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSION MAY NOT APPLY TO YOU.

FRIGIDAIRE HOME PRODUCTS policy is to continuously improve its products. Therefore, FRIGIDAIRE HOME PRODUCTS reserves the right to change, modify, or discontinue models, designs, specifications, and accessories of all products at any time without notice or obligation to any purchaser.

# U.S. EPA/CALIFORNIA EMISSION CONTROL WARRANTY STATEMENT

YOUR WARRANTY RIGHTS AND OBLIGA-TIONS: The U. S. Environmental Protection Agency/California Air Resources Board and POULAN/WEED EATER, DIVISION OF WCI OUTDOOR PRODUCTS are pleased to explain the emissions control system warranty on your lawn and garden equipment engine. All new utility and lawn and garden equipment engines must be designed, built, and equipped to meet the stringent anti-smog standards. POU-LAN/WEED EATER must warrant the emission control system on your lawn and garden equipment engine for the periods of time listed below provided there has been no abuse, neglect, or improper maintenance of your lawn and garden equipment engine. Your emission control system includes parts such as the carburetor and the ignition system. Where a warrantable condition exits, POULAN/WEED EATER will repair your lawn and garden equipment engine at no cost to you. Expenses covered under warranty include diagnosis, parts and labor.
MANUFACTURER'S WARRANTY COVER-AGE: If any emissions related part on your engine (as listed under Emissions Control Warranty Parts List) is defective or a defect in the materials or workmanship of the engine causes the failure of such an emission related part, the part will be repaired or replaced by POUL VEED EATER. OWNER'S WARRANTY RE-SPONSIBILITIES: As the lawn and garden equipment engine owner, you are responsible for the performance of the required maintenance listed in your Owner's Manual. POU-LAN/WEED EATER recommends that you retain all receipts covering maintenance on your lawn and garden equipment engine, but POU-LAN/WEED EATER cannot deny warranty solely for the lack of receipts or for your failure to ensure the performance of all scheduled maintenance. As the lawn and garden equipment engine owner, you should be aware that POULAN/WEED EATER may deny you warranty coverage if your lawn and garden equipment engine or a part of it has failed due to abuse, neglect, improper maintenance, unapproved modifications, or the use of parts not made or approved by the original equipment manufacturer. You are responsible for presenting your lawn and garden equipment engine to a POULAN/WEED EATER authorized repair center as soon as a problem exists. Warranty repairs should be completed in a reasonable amount of time, not to exceed 30 days. If you have any questions regarding your warranty rights and responsibilities, you should contact your nearest authorized service center or call

POULAN/WEED EATER at 1-800-554-6723 WARRANTY COMMENCEMENT DATE: The warranty period begins on the date the lawn and garden equipment engine is purchased. LENGTH OF COVERAGE: This warranty shall be for a period of two years from the initial date of purchase. WHAT IS COVERED: RE-PAIR OR REPLACEMENT OF PARTS. Repair or replacement of any warranted part will be performed at no charge to the owner at an approved POULAN/WEED EATER servicing center. If you have any questions regarding your warranty rights and responsibilities, you should contact your nearest authorized service center or call POULAN/WEED EATER at 1-800-554-6723 WARRANTY PERIOD: Any warranted part which is not scheduled for replacement as required maintenance, or which is scheduled only for regular inspection to the effect of "repair or replace as necessary" shall be warranted for 2 years. Any warranted part which is scheduled for replacement as required maintenance shall be warranted for the period of time up to the first scheduled replacement point for that part. DIAGNOSIS: The owner shall not be charged for diagnostic labor which leads to the determination that a warranted part is defective if the diagnostic work is performed at an approved POULAN/WEED EATER servicing center. CONSEQUENTIAL DAMAGES: POULAN/WEED EATER may be liable for damages to other engine components caused by the failure of a warranted part still under warranty. WHAT IS NOT COVERED: All failures caused by abuse, neglect, or improper maintenance are not covered. ADD-ON OR MODI-FIED PARTS: The use of add-on or modified parts can be grounds for disallowing a warranty claim. POULAN/WEED EATER is not liable to cover failures of warranted parts caused by the use of add-on or modified parts. HOW TO FILE A CLAIM: If you have any questions regarding your warranty rights and responsibilities, you should contact your nearest authorized service center or call POULAN/WEED EATER at 1-800-554-6723. WHERE TO GET WAR-RANTY SERVICE: Warranty services or repairs shall be provided at all POULAN/WEED EATER service centers. call: 1-800-554-6723 MAINTE-NANCE, REPLACEMENT AND REPAIR OF EMISSION RELATED PARTS: Any POULAN/ WEED EATER approved replacement part used in the performance of any warranty maintenance or repair on emission related parts will be provided without charge to the owner if the part is under warranty. EMISSION CONTROL WARRANTY PARTS LIST: Carburetor, Ignition System: Spark Plug (covered up to maintenance schedule). Ignition Module. MAINTE-NANCE STATEMENT: The owner is responsible for the performance of all required maintenance as defined in the owner's manual.