


Flymo®

HVT40

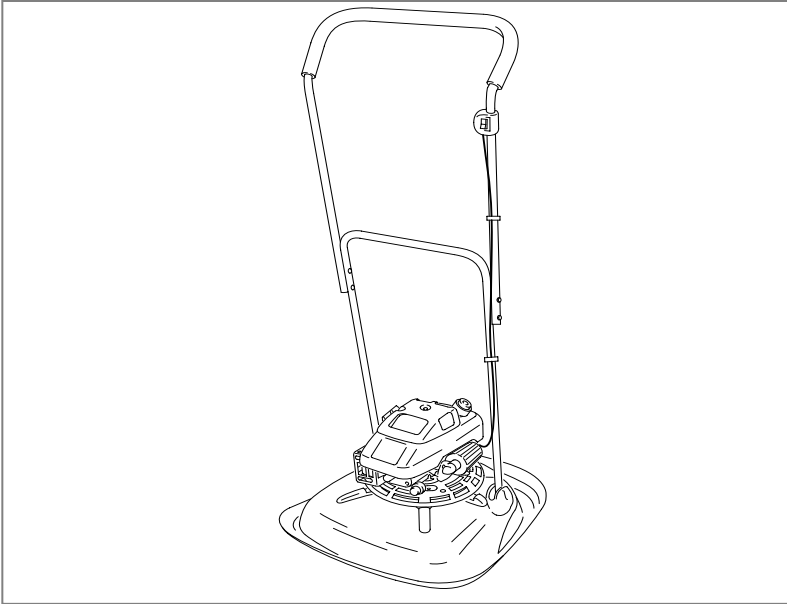

GB

IMPORTANT INFORMATION

Read before use and retain for future reference

D

WICHTIGE INFORMATION

Bitte vor dem Benutzen des Gerätes durchlesen und gut aufbewahren

F

RENSEIGNEMENTS IMPORTANTS

A lire avant usage et à conserver pour référence ultérieure

NL

BELANGRIJKE INFORMATIE

Leest u deze informatie voor het gebruik en bewaar ze voor toekomstige raadpleging

N

VIKTIG INFORMASJON

Les bruksanvisningen før bruk og oppbevar denne for senere bruk.

SF

TÄRKEÄÄ TIETOA

Lue tämä ennen käyttöä ja säilytä myöhempiä tarvetta varten

S

VIKTIG INFORMATION

Läs anvisningarna före användningen och spara dem för framtida behov

DK

VIGTIGE OPLYSNINGER

De bør læse dette før brug og gemme til senere henvisning

E

INFORMACIÓN IMPORTANTE

Léase antes de utilizar y consérvela como referencia en el futuro

P

INFORMAÇÕES IMPORTANTES

Leia antes de utilizar e guarde para consulta futura

I

INFORMAZIONI IMPORTANTI

Leggere prima dell'uso e conservare per consultazione futura

(GB) INSTRUCTION MANUAL
(D) BEDIENTUNGSANWEISUNG
(F) MANUEL D'UTILISATION
(NL) GEBRUIKSAANWIJZING

(N) BRUKSANVISNING
(SF) KÄYTTÖHIE
(S) BRUKSANVISNING
(DK) BRUGSANVISNING

(E) MANUAL DE INSTRUCCIONES
(P) INSTRUÇÕES PARA O USO
(I) ISTRUZIONI PER L'USO

GB - CONTENTS

1. Start/Stop Switch
2. Upper Handle
3. Tie Wrap (x2)
4. Washer (x8)
5. Locknut (x6)
6. Upper Handle Fixing Bolt (X4)
7. Lower Handle Fixing Bolt (x2)
8. Starting Handle
9. Fuel Tank Cap
10. Air Filter
11. Debris Guard
12. Primer
13. 8 spare cutting lines (coloured green)
14. Spark Plug Lead
15. Instruction Manual
16. Guarantee Card
17. International Service Directory
18. Large Spacer
19. Small Spacer
20. Spanner

ENGLISH PAGES (2-9)**D - INHALT**

1. Start-/Stoppschalter
2. Oberer Griff (x2)
3. Kabelhalter (x8)
4. Unterlegscheibe (x6)
5. Sicherungsmutter
6. Befestigungsbolzen oberer Griff (x4)
7. Befestigungsbolzen, unterer Griff (x2)
8. Starterseil
9. Tankkappe
10. Luftfilter
11. Schmutzfänger
12. Primer
13. 8 Ersatzfaden (grün)
14. Zündkerzenzuleitung
15. Bedienungsanleitung
16. Garantiekarte
17. Internationales Kundendienstverzeichnis
18. Kleines Abstandsstück
19. Großes Abstandsstück
20. Schraubenschlüssel

DEUTSCHE SEITEN (10-17)**F - TABLE DES MATIÈRES**

1. Interrupteur de marche/arrêt
2. Poignée supérieure (x2)
3. Attache (x8)
4. Rondelle (x6)
5. Contre-écrou
6. Boulon de fixation de la poignée supérieure (x4)
7. Boulon de fixation de la poignée inférieure (x2)
8. Poignée de démarrage
9. Capuchon du réservoir de combustible
10. Filtre à air
11. Protection contre les débris
12. Dispositif d'amorçage
13. 8 lignes de coupe de réserve (de couleur verte)
14. Fil de bougie
15. Manuel d'instructions
16. Carte de garantie
17. Répertoire d'entretien international

18. Petite entretoise
19. Grande entretoise
20. Clé

LES PAGES EN LANGUE FRANÇAISE (18-25)**NL - INHOUD**

1. Start/Stopschakelaar
2. Bovenste duwboom
3. Bindveter (x2)
4. Borgschijffe (x8)
5. Borgmoer (x6)
6. Bevestigingsbout voor bovenste duwboom (x4)
7. Bevestigingsbout voor onderste duwboom (x2)
8. Starthendel
9. Dop voor benzinetank
10. Luchtfilter
11. Beschermpap
12. Ontsteking
13. 8 reservemaakoorden (groen)
14. Bougiekabel
15. Handboek
16. Garantiekaart
17. Internationale service-adressen
18. Kleine pasring
19. Grote pasring
20. Sleutel

NEDERLANDSE PAGINA'S (26-33)**N - INNHOLD I ESKEN**

1. Start/stop bryter
2. Øvre håndtak
3. Kabel strips (2 stk)
4. Skiver (8 stk)
5. Låsemutter (6 stk)
6. Festebolt for øvre håndtak (4 stk)
7. Festebolt for nedre håndtak (2 stk)
8. Starthåndtak/snor
9. Bensintanklokk
10. Luftfilter
11. Motordeksel
12. Primer
13. Ekstra tråd (8 stk) (grønne)
14. Ledning/hette for tennplugg
15. Bruksanvisning
16. Garantikort
17. Servicestasjonsliste
18. Lite avstandsstykke
19. Stort avstandsstykke
20. Skiftenøddel

NORSKE SIDER (34-41)**SF - SISÄLTÖ**

1. Käynnistyksen/ pysäytyskatkaisin
2. Ylävärsä
3. Kiinnityskappale (2 kpl)
4. Pultin välirengas (8 kpl)
5. Lukitusmutteri (6 kpl)
6. Ylävarren kiinnityspultti (4 kpl)
7. Alavarren kiinnityspultti (2 kpl)
8. Käynnistyskahva
9. Polttoainesäiliön korkki
10. Ilmansuodatin
11. Roskasuojus
12. Rikastin
13. Kahdeksan (vihreää) varaleikkusuimaa

14. Sytytystulpan johdin
15. Käyttöohjeet
16. Takuukortti
17. Kansainvälinen huoltohakemisto
18. Pieni välike
19. Suuri välike
20. Mutteriavain

SUOMALAISET SIVUT (42-49)**S - INNEHÅLL**

1. Start/stoppkontakt
2. Øvre handtag
3. Kabelband (2 st)
4. Bricka (8 st)
5. Låsmutter (6 st)
6. Øvre handtagets fästbultar (4 st)
7. Nedre handtagets fästbultar (2 st)
8. Starthandtag
9. Tanklock
10. Luftfilter
11. Skräpskydd
12. Flödare
13. 8 kaplinor i reserv (grönfärgade)
14. Tändkabel
15. Instruktionsbok
16. Garantikort
17. Internationell servicekatalog
18. Liten mellanlåsbricka
19. Stor mellanlåsbricka
20. Skiftnyckel

SVENSKA SIDOR (50-57)**DK - INDHOLD**

1. Start/stopkontakt
2. Øvre håndtag
3. Kabellemme (2 stk.)
4. Spændskive (8 stk.)
5. Låsemøtrik (6 stk.)
6. Fastgøringbolt til øvre håndtag (4 stk.)
7. Fastgøringbolt til nedre håndtag (2 stk.)
8. Starthåndtag
9. Benzindæksel
10. Luftfilter
11. Affaldsskærm
12. Primer
13. 8 ekstra klippesnrører (grønne)
14. Tændrørsledning
15. Brugsvejledning
16. Garantibevis
17. International servicetelefonbog
18. Lille afstandsstykke
19. Stort afstandsstykke
20. Skruenøgle

DANSKE SIDER (58-65)**E - CONTENIDO**

1. Interruptor de contacto
2. Manillar superior
3. Amarra (x2)
4. Arandela (x8)
5. Tuerca inaflojable (x6)
6. Perno de fijación de manillar superior (x4)
7. Perno de fijación de manillar inferior (x2)
8. Manilla de arranque
9. Tapa del tanque de combustibles
10. Filtro de aire

11. Protector contra desechos
12. Cebador
13. 8 repuestos de cuerdas para cortar (color verde)
14. Cable de la bujía
15. Manual de Instrucciones
16. Tarjeta de Garantía
17. Directorio de Servicio Internacional
18. Espaciador pequeño
19. Espaciador grande
20. Llave de tuercas

PAGINAS EN CASTELLANO (66-73)**P - LEGENDA**

1. Interruptor de Ligar/Desligar
2. Cabo Superior
3. Presilha (x2)
4. Arruela (x8)
5. Porca de Aperto (x6)
6. Parafuso de Fixação do Cabo Superior (x4)
7. Parafuso de Fixação do Cabo Inferior (x2)
8. Pega de Arranque
9. Tampa do Depósito de Combustível
10. Filtro de Ar
11. Resguardado contra detritos
12. Bomba de Injeção Manual
13. 8 Linhas de Corte Sobresselentes (de cor verde)
14. Fio da vela de ignição
15. Manual de Instruções
16. Cartão da Garantia
17. Lista de Assistência Internacional
18. Espaçador Pequeno
19. Espaçador Grande
20. Chave inglesa


PÁGINAS PORTUGUESAS (74-81)**I - NOMENCLATURA**

1. Interruttore acceso/spento
2. Manico superiore
3. Fermo (x2)
4. Rondella (x8)
5. Controdatto (x6)
6. Bullone di fissaggio per manico superiore (x4)
7. Bullone di fissaggio per manico inferiore (x2)
8. Maniglia di avviamento
9. Tappo serbatoio carburante
10. Filtro aria
11. Protezione antidetriti
12. Primer (innesco)
13. 8 lamelle di scorta (di colore verde)
14. Conduttore candela
15. Manuale d'istruzioni
16. Cartolina di garanzia
17. Elenco centri assistenza internazionale
18. Distanziale piccolo
19. Distanziale grande
20. Chiave

TALIANO (82-89)

(GB)	CARTON CONTENTS	(N)	KARTONGENS INNHold	(E)	CONTENIDO DEL CARTON
(D)	KARTONINHALT	(SF)	PAKETIN SISÄLTÖ	(P)	LEGENDAS DOS DESENHOS
(F)	CONTENU DU CARTON	(S)	FÖRPACKNINGENS INNEHÅLL	(I)	DEL CARTONE
(NL)	INHOUD	(DK)	KARTONINDHOLD		

A

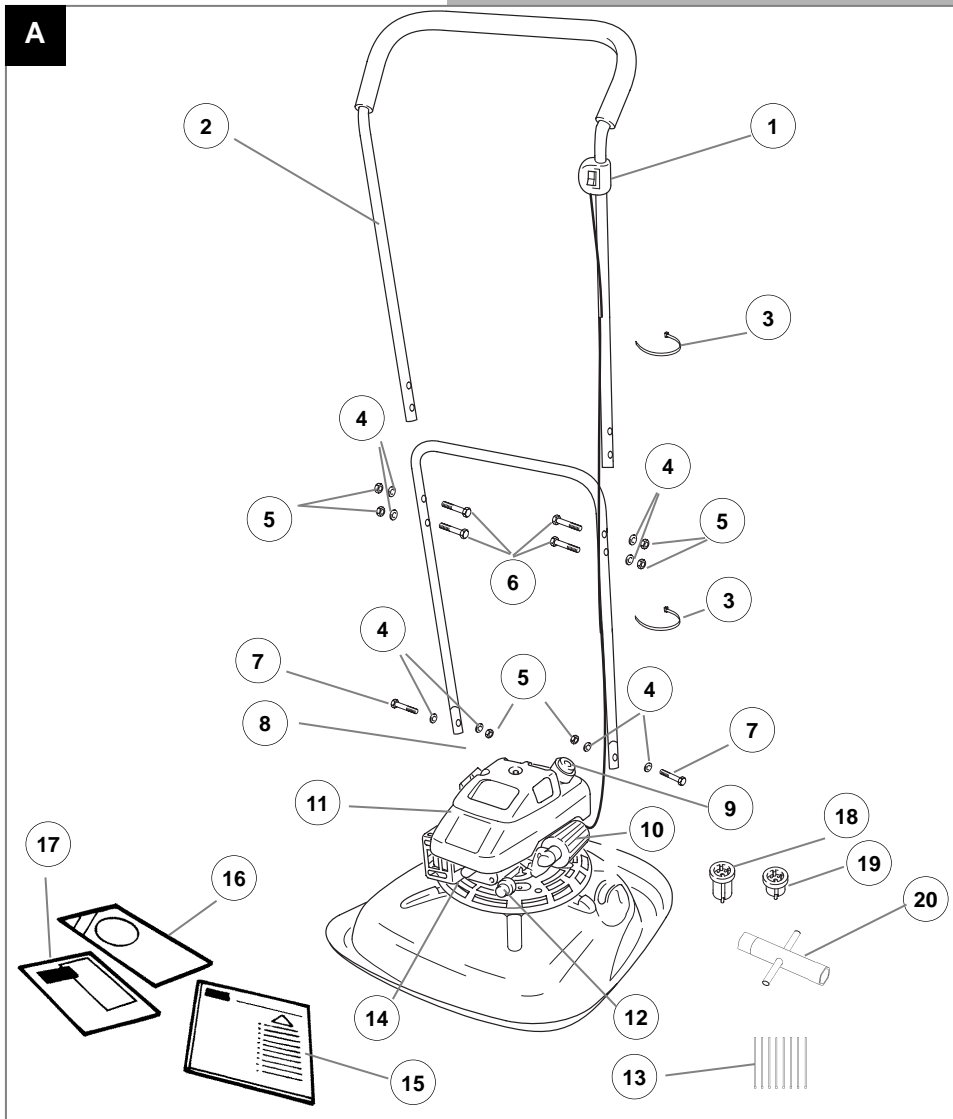



If not used properly this trimmer can be dangerous! This trimmer can cause serious injury to the operator and others, the warnings and safety instructions must be followed to ensure reasonable safety and efficiency in using this trimmer. The operator is responsible for following the warning and safety instructions in this manual and on the trimmer.

Explanation of Symbols on the HVT40



Warning



Read the user instructions carefully to make sure you understand all the controls and what they do.




The use of ear protection is recommended.



Disconnect the spark plug before attempting any maintenance, cleaning or adjustment, or if you are going to leave the trimmer unattended for any period.



Never allow children or people unfamiliar with these instructions to use the trimmer. Local regulations may restrict the age of the operator.

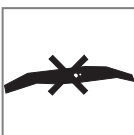

Never use, or attempt to fit, a metal/bar blade with this product.

 
General

1. Only use the trimmer in the manner and for the functions described in these instructions.
2. Keep bystanders away. Do not trim whilst people, especially children or pets, are in the trimming area.
3. Never operate the trimmer when you are tired, ill or under the influence of alcohol, drugs or medicine.
4. The operator or user is responsible for accidents or hazards occurring to other people or their property.

Fuel Safety

WARNING - Petrol is highly flammable

- Store fuel in a cool place in a container specifically designed for the purpose.
- Only use a container that is specially designed for mixing fuel.
- Your trimmer has a 2-stroke engine which runs on fuel of 1 part of oil to 25 parts of petrol.
- Do not use standard 2-stroke mixture as supplied by garages, neat petrol or multi grade oil.
- Use a good quality 2-stroke oil or a quality SAE 30 oil mixed with fresh REGULAR grade unleaded petrol.
- Refuel outdoors only and do not smoke while refuelling.
- Wipe dirt and grass clippings from the fuel tank filler cap to avoid getting dirt into the fuel tank.
- Add fuel **BEFORE** starting the engine. Never remove the cap of the fuel tank or add fuel while the engine is running or when the engine is hot.
- If petrol is spilled, do not attempt to start the engine but move the machine away from the area of spillage and avoid creating any source of ignition until petrol vapours have dissipated.
- Never use stale fuel left from last season or fuel which has been stored for long periods.
- Replace all fuel tanks and container caps securely.
- Fuel should be stored in a cool place away from naked flames.
- Your carburettor is pre-set. Normally no further adjustment is required.




Preparation

1. Do not trim barefoot or in open sandals. Always wear suitable clothing, gloves, and stout shoes.
2. Make sure the area to be cut is clear of sticks, stones, bones, wire and debris; they could be thrown by the cutting line.
3. Before using always visually inspect to see that cutting lines, disc bolts and disc assembly are not worn or damaged. Replace worn or damaged cutting lines together with their fixings in sets to preserve balance.
4. Have faulty silencers replaced

Use

1. Do not operate the engine in a confined space where exhaust fumes (carbon monoxide) can collect.
2. Use the trimmer only in daylight or good artificial light.
3. Avoid operating your trimmer in wet grass, where feasible.
4. Take care in wet grass, you may lose your footing.
5. On slopes, be extra careful of your footing and wear non-slip footwear.
6. Exercise extreme caution when changing direction on slopes.
7. Trimming on banks and slopes can be dangerous, and you should use extreme caution if using the trimmer in this manner. When operating the trimmer on banks or steep slopes it is important that the feet of the operator remain firmly on level ground.
8. Do not walk backwards when trimming, you could trip. Walk, never run.
9. Never cut grass by pulling the trimmer towards you.
10. Stop the engine before pushing the trimmer across surfaces other than grass and when transporting the trimmer to and from the area to be mowed.
11. Do not overspeed the engine or alter governor settings. Excessive speed is dangerous and shortens trimmer life.
12. Always start the trimmer carefully with feet well away from the cutting lines.
13. Do not tilt the trimmer when starting the engine, except if the trimmer has to be tilted for starting. In this case, do not tilt more than absolutely necessary and lift only the part which is away from the operator. Always ensure that both hands are in the operating position before returning the appliance to the ground.
14. Never pick up or carry a trimmer while the engine is running
15. Spark plug lead may be hot - handle with care.
16. Do not attempt any maintenance on your trimmer when the engine is hot.
17. Cutting disc continues to rotate after the machine is switched off. Wait until all machine components have completely stopped before touching them.

18. Switch off the engine, wait until the cutting disc has stopped, disconnect the spark plug lead and wait until the engine has cooled:-

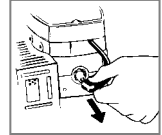

- before leaving the trimmer unattended for any period;
- before refuelling
- before clearing a blockage;
- before checking, cleaning or working on the trimmer;
- if you hit an object. Do not use your trimmer until you are sure that the entire trimmer is in a safe operating condition;
- if the trimmer starts to vibrate abnormally. Check immediately. Excessive vibration can cause injury.

19. If the engine is provided with a shut-off valve, turn the fuel off at the conclusion of trimming.

Maintenance and storage

1. Keep all nuts, bolts and screws tight to be sure the trimmer is in safe working condition.
2. Replace worn or damaged parts for safety.
3. Only use the replacement cutting disc, cutting line, disc bolt, spacer and impeller specified for this product.
4. Never store the trimmer with fuel in the tank inside a building where fumes can reach an open flame or spark.
5. Allow the engine to cool before storing in any enclosure.
6. To reduce fire hazard, keep the engine, muffler and fuel storage area free of grass, leaves or excessive grease.
7. If the fuel tank has to be drained, this should be done outdoors.
8. Be careful during adjustment of the machine to prevent entrapment of the fingers between moving parts and fixed parts of the machine.

Product Rating Label

B

Product Number

Model Number

Serial Number

Date of Purchase

Place of Purchase


•PLEASE KEEP PROOF OF PURCHASE•

Your product is uniquely identified by a silver and black product rating label. To ensure you have full product information when obtaining spares or advice from one of our approved service centres or if you need to contact our customer service department you should make a note in the space provided of the information shown in **Fig B**

Fuel Mixing Instructions

1. Ensure mixing bottle and cap are clean and standing on a level surface.
 2. Add fresh regular grade unleaded petrol up to the 1 litre mark on the bottle.
 3. Add a good quality 2 stroke oil, to the 25 : 1 mark (40 ml of oil) on the bottle.
 4. Screw cap on, shake container until petrol and oil are thoroughly mixed.
 5. Clean fuel tank filler cap and fill fuel tank.
- **UK ONLY:-** Electrolux Outdoor Products manufacture a specially designed fuel mixing bottle. For further information contact your local Electrolux Outdoor Products Service Centre/Stockist or contact the Electrolux Outdoor Products Customer Careline on 01325 300303


Assembly and Adjustment

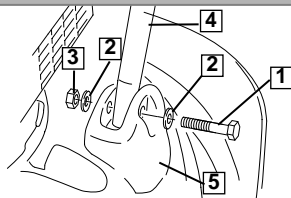C


Assembly of lower handle to deck (Fig C)


With the trimmer on the ground:-

1. Remove the bolts (**C1**), washers (**C2**) and lock nuts (**C4**) from the polythene bag.
2. Place one washer (**C2**) on to the bolt (**C1**) and secure the lower handle (**C4**) by placing bolt (**C1**) through deck bracket (**C5**) and lower handle (**C4**).
3. Place washer (**C2**) on bolt and secure with lock nut (**C3**).

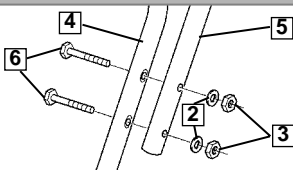D


Assembly of upper handle to lower handle (Fig D)

Assemble upper handle (**D5**) to lower handle (**D4**) by fitting bolts (**D6**) and washers (**D2**) and securing with lock nuts (**D3**).

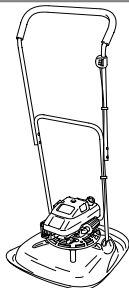E

F


Handle Position

The handle position can be altered by moving it forward for the park position (**Fig E**) or back for the trimming position (**Fig F**).

Starting and Stopping

Before Starting your Trimmer

Filling the Fuel Tank

1. Clean around fuel cap (See fig A).
2. Remove cap.
3. Add fuel mix (See Fuel mixing instructions)
4. Never use stale fuel left from last season or fuel which has been stored for long periods.
5. Refit fuel tank cap and wipe up any spilled fuel.

USING THE ENGINE PRIMER (Fig G)




FIRST START - or after running the fuel tank dry. Press the primer 20 times and then follow steps 1 - 6 in 'To Start your Trimmer'. If the engine fails to start after 5 pulls of the starting handle, leave the product to stand for 15 minutes. Press the primer a further 10 times and follow steps 1 - 6 again.

COLD START - if the engine is cold and there is fuel in the tank. Press the primer 8 - 10 times .

WARM START - if the engine is warm and there is fuel in the tank - **DO NOT USE THE PRIMER.** If the engine has run out of fuel, refill tank and prime 8 - 10 times.

To Start your Trimmer

1. Move the handle to the Parking position (See Fig E).
2. Connect the spark plug lead (See Fig H).
3. Move the start/stop switch to 'start' position (See Fig J).
4. Place your right foot on the deck and grasp the top of the lower handle with your left hand. Tilt the trimmer towards you (See fig. K). This prevents an unsightly ring being cut in your lawn.
5. Pull the starting handle (see fig A) gently until you feel a resistance, return the starting handle slowly.
6. Pull the starting handle firmly towards you to its full extent to start the engine and then return the starting handle slowly.
7. Allow the engine to reach its full running speed then gently lower the trimmer onto the ground.

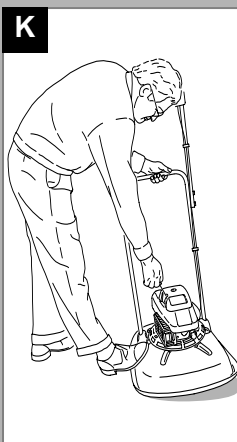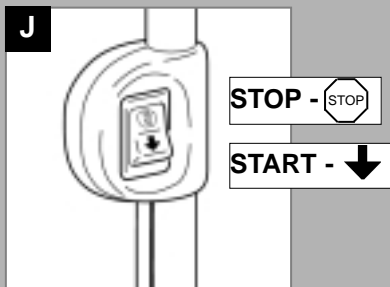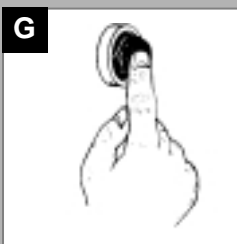


To Stop your Trimmer


1. Move start/stop switch to 'stop' position. (See Fig J)
2. As the engine dies, tilt the trimmer to one side (See fig L). This prevents a ring being cut in your lawn.
3. When the engine has stopped, lower the trimmer onto the ground.
4. Put the handle in the Parking position (See Fig E).

Removing and Fitting Cutting Line - Height Adjustment


M

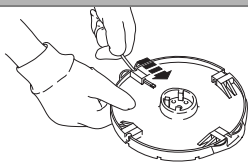


N

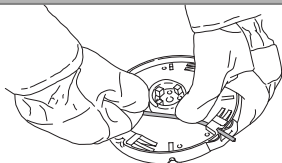

P

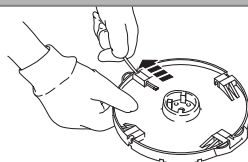

R

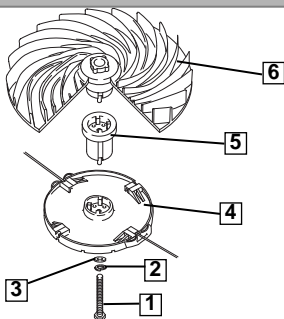


S




Highest
height of
cut

T

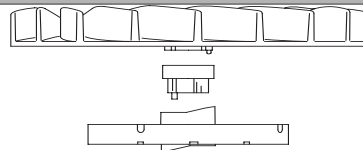

U

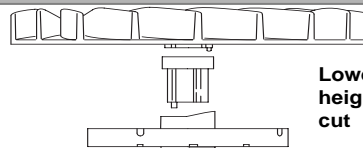

Lowest
height of
cut

- The cutting line is sharp, wear gloves and take care when handling it.
- Check the cutting line frequently during use and on completion of trimming.

Removing the Cutting Line

1. Switch machine off and disconnect spark plug lead.
2. Push the line towards the centre of the cutting disc and carefully remove. See Fig M.

Fitting the Cutting Line

1. Holding the line with thumb and forefinger and using other thumb as a guide, curve around centre portion of the cutting disc (as illustrated in Fig N) and thread through the hole on the rim of the cutting disc.
 2. Carefully pull the line into place as illustrated in Fig. P.
- At all times the amount of line extending beyond the edge of disc should be of an even length. If there is a variation of more than half an inch between the four lengths of line replace immediately with 2 full new lengths.
 - Only use **Green** coloured cutting line on the HVT 40.

Changing the height of cut

1. Loosen bolt (R1), using the spanner provided. Remove bolt (R1), spring washer (R2), washer (R3) cutting disc (R4) and spacer (R5) (if fitted).
 2. Carefully remove impeller (R6) from engine shaft.
 3. Select required height of cut, (See Figs S, T, & U) and replace any cutting lines required.
- Important:- Cutting line must be on the side of the disc facing the grass when fitted.
4. Replace impeller (R6) on to engine shaft ensuring that it is correctly located. Replace spacer (R5) (if fitted), cutting disc (R4), washer (R3), spring washer (R2) and bolt (R1).
 5. Secure assembly with bolt (R1), making sure complete assembly is tight, (if in doubt, contact your service dealer).

Caring for your Trimmer

If you do not intend to use your trimmer for long periods it is advisable to follow this procedure after use:-

1. Move the start/stop switch to stop.
2. The engine will begin to stop, tilt the trimmer (See Fig L).
3. Once the engine has stopped, disconnect the spark plug lead (See fig H).
4. Remove all fuel from the fuel tank.

Cleaning

- **Keep your trimmer clean - grass clippings left in any of the air intakes, around the engine or under the deck could become a potential fire hazard.**
 - **Do not clean with chemicals, including petrol, or solvents - some can destroy critical plastic parts.**
1. Remove grass from under the deck with a piece of wood or similar.
 2. Using a soft brush - remove grass clippings from around the engine and from all air intakes.
 3. Remove the fan, See 'Height adjustment', and clean with a soft brush.
 4. Wipe over the surface of your trimmer with a dry cloth.

Carrying your Trimmer


- **Never carry a trimmer when it is running**

Carry the trimmer at the point of balance with the cutting system facing away from you (See Fig W).

Storing Your Trimmer

Store in a cool, dry, damp-proof and safe place. Service your trimmer after the last cut of the year as follows:-

W

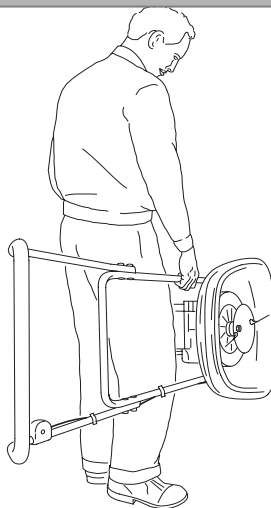


At the end of the Trimming Season.

- **Switch off the engine, wait until the cutting disc has stopped and disconnect the spark plug lead BEFORE attempting any maintenance or adjustment.**
1. Allow the engine to cool. Drain the fuel tank (Fuel left in the engine becomes stale and causes difficult starting.)
 2. Remove the spark plug lead and spark plug. Pour one teaspoon (5ml) of oil through the spark plug hole. Pull the starting handle 2 or 3 times. This will distribute oil on the internal surfaces of the engine. Inspect, clean and replace the spark plug. If a new spark plug is required contact your local approved Service Centre/Dealer.

Do not re-connect the spark plug lead.

3. Clean the air filter. See 'Cleaning the Air Filter'.
4. Renew the cutting disc if it is cracked, damaged or bent. Renew the disc bolt if necessary. See 'Height Adjustment' for complete instructions.
5. Use only genuine parts and accessories specified for this product.
6. Clean your trimmer thoroughly. See 'Cleaning'.
7. Your local approved **Service Centre/Dealer** will carry out any service or repairs required.
8. Store your trimmer in a cool, dry, damp-proof and safe place.

Cleaning the Air Filter

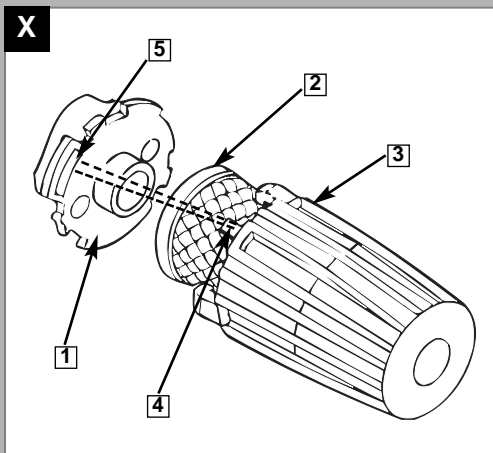


- Your Tecumseh engine is equipped with a dry paper cartridge air filter (**see Fig. A**).
- Every 10 operating hours check condition of paper cartridge.
- Every 50 operating hours or more regularly - (**see Air Filter Cleaning Instructions number 1**).
- **If engine is operating in dusty or dirty areas the air filter system will require shorter maintenance intervals.**
- Do not attempt to wash, clean, or oil the paper cartridge.

Air Filter Cleaning Instruction


1. Turn cover (**X3**) (anti-clockwise). Remove cover and filter (**X2**) from flange (**X1**). Discard paper cartridge (**See Fig X**).
2. Clean cover and flange thoroughly.
3. Insert new cartridge (**X2**) onto flange (**X1**).
4. Position cover (**X3**) against flange (**X1**) with tab (**X4**) on cover inserted into slot (**X5**) in flange.
5. Push cover firmly against flange and turn it (clockwise) as far as it will go. Be sure retainers are locked around flange.

Cooling system debris guard

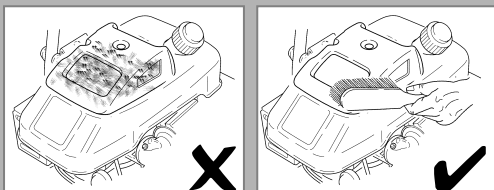

Cooling system air-intake

- **Never operate the engine without the debris guard and foam filter being fitted, failure to fit the debris guard and foam filter will cause premature engine failure.**

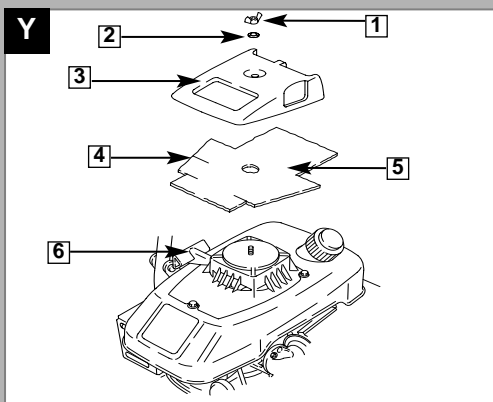

1. Ensure the debris guard is kept clean, check frequently during use.
2. Clean the debris guard using a soft brush.
3. If debris guard is very dirty, unscrew wing knob (**Y1**) and remove washer (**Y2**), debris guard (**Y3**) and foam filter (**Y5**).
4. Wash foam filter in clean soapy water, rinse, wrap in a clean dry cloth and 'squeeze dry'.
5. Re-assemble ensuring that the recoil rope (**Y6**) passes through the slot (**Y4**) in the foam filter.

Guarantee, Fault Finding Hints, Service Recommendations, Environmental Information

Guarantee & Guarantee Policy

If any part is found to be defective due to faulty manufacture within one year of original purchase, Electrolux Outdoor Products, through its Authorised Service Repairers will effect the repair or replacement to the customer free of charge providing:

- (a) Where the machine is used commercially the guarantee is 90 days.
- (b) The fault is reported directly to the Authorised Repairer.
- (c) Proof of purchase is provided.
- (d) The fault is not caused by misuse, neglect or faulty adjustment by the user.
- (e) The failure has not occurred through fair wear and tear.
- (f) The machine has not been serviced or repaired, taken apart or tampered with by any person not authorised by Electrolux Outdoor Products.
- (g) The machine has not been used for hire.
- (h) The machine is owned by the original purchaser.
- (i) The machine has not been used outside of the country for which it was specified.

* This guarantee is additional to, and in no way diminishes the customers statutory rights.

Failures due to the following are not covered, therefore it is important that you read the instructions contained in this Operator's Manual and understand how to operate and maintain your machine:

Failures not covered by guarantee

- * Replacing worn or damaged cutting lines and cutting disc.
- * Failures as a result of not reporting an initial fault.
- * Failures as a result of sudden impact.
- * Failures as a result of not using the product in accordance with the instructions and recommendations contained in this Operator's Manual.
- * Machines used for hire are not covered by this guarantee.
- * The following items listed are considered as wearing parts and their life is dependent on regular maintenance and are, therefore not normally subject to a valid warranty claim: Cutting lines, cutting disc, belts, cables, recoil ropes, filters.
- * **Caution!**
Electrolux Outdoor Products does not accept liability under the warranty for defects caused in whole or part, directly or indirectly by the fitting of replacement parts or additional parts that are not either manufactured or approved by Electrolux Outdoor Products, or by the machine having been modified in any way

Fault Finding Hints

Engine Will Not Start

1. Ensure that the start/stop switch is in the start position.
2. Check that there is sufficient fuel of the correct mix in the fuel tank.
3. The engine may have flooded. Remove and dry the spark plug.
4. Fuel mixture may be incorrect or stale - if so - replace with fresh mixture.
5. Check that the disc bolt is tight. A loose disc bolt could cause difficult starting.
6. **If the engine will still not start - disconnect the spark plug lead and consult your local approved Service Centre/Dealer.**

Poor Flotation or Lack of Power

1. Disconnect the spark plug lead.
2. Clean the underside of the hood, the air filter, the fan, around the engine and the air intakes.
3. Fuel mixture may be incorrect or stale - if so - replace with fresh mixture.
4. **If poor flotation or lack of power persists - disconnect the spark plug lead and consult your local approved Service Centre/Dealer.**

Excessive Vibration

1. Disconnect the spark plug lead.
2. Check that the cutting disc and cutting lines are correctly fitted. **See 'Cutting Line and Height Adjustment'.**
3. If the cutting lines or cutting disc are damaged or worn replace them with a new ones.
4. **If vibration persists - do not use - disconnect the spark plug lead and consult your local approved Service Centre/Dealer.**

Service Recommendations

We strongly recommend that your product is serviced at least every twelve months, more often in a professional application.

ENVIRONMENTAL INFORMATION

Electrolux Outdoor Products are manufactured under an Environmental Management System (ISO 14001) using, where practical, components manufactured in the most environmentally responsible manner, according to company procedures, and with the potential for recycling at the end of the products' life.

- Packaging is recyclable and plastic components have been labelled (where practical) for categorised recycling.
- Awareness of the environment must be considered when disposing of 'end-of-life' product.
- If necessary, contact your local authority for disposal information.

DISPOSAL OF FUELS AND LUBRICATING OILS

- Wear protective clothing when handling any fuels and lubricants.
- Avoid contact with skin.
- Remove petrol and engine oil before transporting the product.
- Contact your local authority for information of your nearest Recycling/Disposal Station.



Do NOT dispose of used fuels/oils with household waste



Do NOT dispose of used fuels/oils to water.



Waste fuels/oils are harmful, but can be recycled and should be disposed of through the recognised facilities.



Do NOT incinerate

**CERTIFICATE OF CONFORMITY
KONFORMITÄSZERTIFIKAT
CERTIFICAT DE CONFORMITE
CERTIFICAAT VAN CONFORMITEIT
KONFORMITETSATTEST
TUOTTEEN HYVÄKSYMISTODISTUS**

**KONFORMITETSCERTIFIKAT
VARECERTIFIKAT
CERTIFICADO DE CONFORMIDAD
CERTIFICADO DE CONFORMIDADE
CERTIFICATO DI CONFORMITA**

I, the undersigned M. Bowden of Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co. Durham, DL5 6UP. Certify that a sample of the above product has been tested and found to comply with directives: 98/37/EEC, 89/336/EEC & applicable standards: EN836:1997, EN ISO14982:1998

I, the undersigned M. Bowden of Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co. Durham, DL5 6UP. Certify that a sample of the above product has been tested using directive 81/1051/EEC as a guide. The maximum A-weighted sound pressure level recorded at operator position under free field semi anechoic chamber conditions was :-

I, the undersigned M. Bowden of Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co. Durham, DL5 6UP. Certify that a sample of the above product has been tested using ISO 5349 as a guide. The maximum weighted root mean square value of vibration recorded at operator's hand position was:-

Ich, der Unterzeichnete M. Bowden von Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co. Durham, DL5 6UP, bestätige hiermit, dass eine Probe des obigen Produkts geprüft wurde und die Anforderungen der Direktiven: 98/37/EEC, 89/336/EEC und Normen EN836:1997, EN ISO14982:1998

Ich, der Unterzeichner M. Bowden von Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co. Durham, DL5 6UP, bescheinige hiermit, daß eine Probe des obigen Produkts getestet wurde und dabei Direktive 81/1051/EWG als Richtschnur verwendet wurde. Der maximale A-gewichtete Schalldruckpegel, der an der Bedienposition unter Freifeld-Halbschalltot-Kammerbedingungen gemessen wurde, betrug:

Ich, der Unterzeichner M. Bowden von Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co. Durham, DL5 6UP, bescheinige hiermit, daß eine Probe des obigen Produkts getestet wurde und dabei ISO 5349 als Richtschnur verwendet wurde. Der maximale gewichtete Vibrationseffektivwert, der an der Handposition des Bedieners gemessen wurde, betrug:

Je soussigné M. Bowden, d'Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co. Durham, DL5 6UP, Grande-Bretagne, certifie qu'un échantillon du produit ci-dessus a été essayé et trouvé conforme aux directives: 98/37/EEC, 89/336/EEC et aux normes EN836:1997, EN ISO14982:1998

Je soussigné M. Bowden, d'Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co. Durham, DL5 6UP, Grande-Bretagne, certifie qu'un échantillon du produit ci-dessus a été essayé selon les indications de la directive 81/1051/EEC. Le niveau maximum pondéré de pression acoustique enregistré à la position de l'opérateur en champ libre en chambre demi-sourde était de:

Je soussigné M. Bowden, d'Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co. Durham, DL5 6UP, Grande-Bretagne, certifie qu'un échantillon du produit ci-dessus a été essayé selon les indications de la norme ISO 5349. La moyenne quadratique pondérée des vibrations enregistrées à la position de la main de l'opérateur était de:

Ik, ondergetekende M. Bowden van Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co. Durham, DL5 6UP, verklaar dat een exemplaar van het hierboven genoemde product is getest en voldoet aan de volgende richtlijnen: 98/37/EEC, 89/336/EEC en aan de volgende normen: EN836:1997, EN ISO14982:1998

Ik, ondergetekende M. Bowden van Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co. Durham, DL5 6UP, verklaar hierbij dat een proefexemplaar van het bovengenoemde product is getest volgens richtlijn 81/1051/EEC. Het maximale A-belaste geluidsrukniveau dat is geregistreerd bij de positie van de bediener in een semi geluidsdichte ruimte bij vrije veld condities bedraagt:

Ik, ondergetekende M. Bowden van Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co. Durham, DL5 6UP, verklaar hierbij dat een proefexemplaar van het bovengenoemde product is getest volgens ISO 5349 als richtlijn. De maximale belaste effectieve waarde van trilling, geregistreerd bij de positie van de hand van de bediener, bedraagt: -

Undertegnede, M. Bowden i Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co. Durham, DL5 6UP bekrefter at et eksemplar av ovennevnte produkt er testet og funnet å være i overensstemmelse med følgende direktiver: 98/37/EEC, 89/336/EEC – og standarder: EN836:1997, EN ISO14982:1998

Undertegnede, M. Bowden i Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co. Durham, DL5 6UP bevinner at en prøve av ovennevnte produkt er testet, med direktiv 81/1051/EEC som rettleiding. Maksimum A-belastede lydtrykknivå, registrert ved brukerens plassering, under fritt felt halvveis ekofritt kammerforhold, var:

Undertegnede, M. Bowden i Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co. Durham, DL5 6UP bevinner at en prøve av ovennevnte produkt er testet, med direktiv ISO 5349 som rettleiding. Maksimum belastede effektivverdi av vibrering, registrert ved plasseringen av brukerens hånd, var:

Minä allekirjoittanut M. Bowden Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co. Durham DL5 6UP, vakuutan, että edellä mainitun tuotteen näytekappale on testattu ja se vastaa seuraavia direktiivejä: 98/37/EEC, 89/336/EEC sekä standardeja: EN836:1997, EN ISO14982:1998

Minä allekirjoittanut M. Bowden Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co. Durham DL5 6UP, vahvistan, että yllä mainitun tuotteen näytekappale on tarkastettu käyttäen EU-direktiiviä 81/1051/ETY viitteenä. Suurin A-painotettu käyttäjän kohdalla mitattu äänenpaineen taso puolikaiuatomassa huoneessa käyttäjän tasolla oli seuraava:

Minä allekirjoittanut M. Bowden Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co. Durham DL5 6UP, vahvistan, että yllä mainitun tuotteen näytekappale on tarkastettu käyttäen ISO 5349 -standardia viitteenä. Suurin painotettu käsisarvitärinä käyttäjän käden kohdalla oli seuraava:

Jag, M. Bowden från Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co Durham, DL5 6UP, som undertecknat detta dokument, intygar härmed att ett prov på denna produkt har testats och befunnits vara i enlighet med följande direktiv: 98/37/EEC, 89/336/EEC, samt följande standarder: EN836:1997, EN ISO14982:1998

Jag, undertecknad M. Bowden från Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co Durham, DL5 6UP, betygar att ett exemplar av ovan nämnda produkt har testats med bestämmelse 81/1051/EEC som riktlinje. Det maximala A-vägda ljudtrycknivån som uppmättes vid körplatsen under förhållanden i en frifälts halvt ekofri kammare var:

Jag, undertecknad M. Bowden från Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co Durham, DL5 6UP, betygar att ett exemplar av ovan nämnda produkt har testats med bestämmelse ISO 5349 som riktlinje. Det maximala vägda kvadratiska medelvärdet för vibration som uppmättes vid förarens handläge var:

Undertegnede, M. Bowden, fra Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co. Durham DL5 6UP, bekræfter hermed, at en prøve af ovenstående produkt er blevet afprøvet og oplyder direktiverne: 98/37/EEC, 89/336/EEC og standarderne: EN836:1997, EN ISO 14982:1998	Undertegnede, M. Bowden, fra Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co. Durham DL5 6UP, attesterer herved, at en prøve af ovenstående produkt er blevet testet, idet direktiv 81/1051/EØF er blevet anvendt som vejledning. Det maksimale A-vægtede lydtrykniveau, som er blevet målt på brugerpositionen i et frifeltshalvdydedt rum var:	Undertegnede, M. Bowden, fra Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co. Durham DL5 6UP, attesterer herved, at en prøve af ovenstående produkt er blevet testet, idet ISO 5349 er blevet benyttet som vejledning. Den maksimale vægtede effektivværdi for vibration som er blevet registreret ved brugerens håndposition var:
El abajo firmante, M. Bowden de Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co. Durham DL5 6UP, certifica que se han hecho pruebas en una muestra del producto anterior y se ha hallado que tiene conformidad con las directivas: 98/37/EEC, 89/336/EEC, y con las normativas: EN836:1997, EN ISO14982:1998	Yo, el firmante más abajo M. Bowden de Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co. Durham DL5 6UP. Certifico que ha sido probada una muestra del producto anteriormente mencionado utilizando la directiva 81/1051/EEC como guía. El máximo nivel de presión de sonido ponderado A registrado en la posición del operario bajo condiciones de cámara anecóica de semi campo fue de:-	Yo, el firmante más abajo M. Bowden de Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co. Durham DL5 6UP. Certifico que ha sido probada una muestra del producto anteriormente mencionado utilizando como guía ISO 5349. El valor máximo ponderado de la media de la raíz cuadrada de la vibración registrada en la posición de la mano del operario fue de:-
Eu, abaixo assinado, M. Bowden da Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co. Durham, DL5 6UP, certifico que uma amostra representativa do produto acima foi testada e considerada em conformidade com as directivas: 98/37/EEC, 89/336/EEC, e com as normas: EN836:1997, EN ISO14982:1998	Eu, abaixo assinado, M. Bowden da Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co. Durham, DL5 6UP, Certifico que uma amostra do produto acima foi testada tendo como guia a directiva 81/1051/CEE. O valor máximo da média pesada A do nível de pressão do som registado na posição do operador, em condições de câmara semi-aneecóica de campo livre foi:	Eu, abaixo assinado, M. Bowden da Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co. Durham, DL5 6UP, Certifico que uma amostra do produto acima foi testada tendo como guia a norma ISO 5349. O valor máximo da média quadrática pesada da vibração registado na posição da mão do operador foi:
Il sottoscritto, M. Bowden della Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co. Durham, DL5 6UP, dichiara di aver testato un campione del suddetto prodotto e di averlo trovato conforme alle direttive: 98/37/EEC, 89/336/EEC – e alle normative:- EN836:1997, EN ISO14982:1998	Il sottoscritto, M. Bowden della Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co. Durham, DL5 6UP, dichiara che un campione del suddetto prodotto è stato testato in base alla direttiva 81/1051/CEE. Il livello massimo di pressione sonora categoria A rilevato in corrispondenza della posizione di guida in condizioni di camera semianecocica in campo libero era di:	Il sottoscritto, M. Bowden della Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co. Durham, DL5 6UP, dichiara che un campione del suddetto prodotto è stato testato in base alla direttiva ISO 5349. Il valore ponderale massimo di vibrazione sonora efficace rilevato in corrispondenza delle mani dell'operatore era di:

F	G	H	J
HVT40	K	88.9 dB(A)	3.94 m/s²

F-TYPE	G - IDENTIFICATION OF SERIES	H - LEVEL	J - VALUE	K - SEE PRODUCT RATING LABEL
F-TYP	G - IDENTIFIZIERUNG DER REIHE	H - HÖHE	J - WERT	K - SIEHE PRODUKTYPENSCHILD
F-TYPE	G - IDENTIFICATION DE LA SERIE	H - NIVEAU	J - VALEUR	K - VOIR LA PLAQUETTE D'IDENTIFICATION
F-TYPE	G - IDENTIFICATIE VAN SERIE	H - NIVEAU	J - WAARDE	K - ZIE PRODUCTLABEL
F-TYPE	G - SERIEIDENTIFIKASJON	H - NIVÅ	J - VERDI	K - SE PRODUKTETS KLASSIFISERINGSETIKETT
F-TYYPPI	G - SARJAN TUNNUS	H - TASO	J - ARVO	K - KATSO TUOTTEEN ARVOKILPEÄ
F-TYP	G - IDENTIFIERING AV SERIE	H - NIVÅ	J - VÄRDE	K - SE PRODUKTIDENTIFIERINGSETIKETT
F-TYPE	G - IDENTIFIKATION AF SERIE	H - NIVEAU	J - VÆRDI	K - SE PRODUKT MÆRKAT
F-TIPO	G - IDENTIFICACIÓN DE LA SERIE	H - NIVEL	J - VALOR	K - VER ETIQUETA DE IDENTIFICACIÓN DEL PRODUCTO
F-TIPO	G - IDENTIFICAÇÃO DA SÉRIE	H - NÍVEL	J - VALOR	K - CONSULTE A ETIQUETA DE ESPECIFICAÇÕES DO PRODUTO
F-TIPO	G - IDENTIFICAZIONE SERIE	H - LIVELLO	J - VALORE	K - VEDI ETICHETTA DATI PRODOTTO

2000 

Electrolux Outdoor Products
Aycliffe Industrial Park
NEWTON AYCLIFFE
Co.Durham DL5 6UP
ENGLAND

Telephone - (00) 44 1325 300303 Fax - (00) 44 1325 310339

UK Customer Helpline- 01325 300303 Fax - 01325 310339

Our policy of continuous improvement means that the specification of products may be altered from time to time without prior notice. Electrolux Outdoor Products manufacture products for a number of well known brands under various registered patents, designs and trademarks in several countries.

© Electrolux Outdoor Products Ltd. Registered Office, Electrolux Works, Oakley Road, Luton LU4 9QQ
Registered number 974979 England



From the Electrolux Group. The world's No.1 choice.

The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world.

5118542-03

