



GARDENA Backpack Sprayer 12 I

Welcome to the garden of GARDENA ...

Contents



Please read these operating instructions carefully and observe the notes given. Use these operating instructions to familiarise yourself with the Backpack Sprayer, its proper use and the notes on safety.

For safety reasons, children and young people under 16 as well as anyone not familiar with these operating instructions may not use the Backpack Sprayer.

 \rightarrow Please keep these operating instructions in a safe place.

 1. Where to Use Your GARDENA Backpack Sprayer
 9

 2. For Your Safety
 10

 3. Assembly
 10

 4. Operation
 11

 5. Maintenance
 12

 6. Trouble-Shooting
 13

 7. Storage
 14

 8. Accessories
 14

 9. Technical data
 14

 10. Service
 14

1. Where to Use Your GARDENA Backpack Sprayer

Intended purpose	The GARDENA Backpack Sprayer is intended for distributing solvent-free liquid pesticides ¹), herbicides ¹), fertilisers ¹), window cleaners ¹), and car wax ¹) in domestic gardens and allotments.
	It must not be used in public places, parks, sport arenas, or in agriculture or forestry.
	Compliance with the operating instructions provided by the manu- facturer is a prerequisite for using the Backpack Sprayer correctly.
	 In accordance with the laws governing the use of pesticides and detergents, only authorised substances may be used (authorised specialist shop).
Caution !	Due of the risk of physical injury, the GARDENA Backpack Sprayer must not be used for spraying substances other than those specified by GARDENA. Do not use your Back- pack Sprayer for spraying acids, disinfectants or water- proofing agents.

We recommend that you only use pesticides approved by the BBA (German Federal Biological Research Centre for Agriculture and Forestry). To our knowledge at the time of manufacturing the Backpack Sprayer, the pesticides approved by the BBA will not damage the materials used to construct the Backpack Sprayer.

When spraying insecticides, herbicides and fungicides or other liquid plant protection products, you must comply with all special precautionary measures specified by the manufacturer of the product you are using.

GB



3. Assembly





- Pull each unstitched end of the carrying strap ① approx. 2 to 3 cm through the metal buckles ②.
- 2. Pull the carrying strap ① through the opening ⑤ under the carrying handle so that the strap adjuster ⑦ is at the front.
- 3. Push the strap lock ⁽⁶⁾ sideways into the carrying strap ⁽¹⁾.
- 4. Pull back the carrying strap ① until the strap lock ⑥ prevents the carrying strap from sliding out.
- Pull the metal buckles (2) onto the lugs (3) on the bottom of the Backpack Sprayer until you hear them click into place.

If you are right-handed the pump lever ④ should be on the left-hand side so that you can hold the spray lance in your right hand.

Attaching the sprayer head:



Attaching the sprayer head to the handle:

- 1. Push the sprayer head (9) all the way into the sprayer handle (1).
- 2. Push the sprayer lock (1) all the way into the sprayer handle (1).
- 3. Screw the sprayer head (1) onto the sprayer handle (1) by hand using the union nut (3) (do not use pliers).





Attaching the sprayer handle to the hose:

- 4. Push the union nut (12) onto the hose (13).
- 5. Push the filter 1 into the sprayer handle 1.
- 6. Push the hose 3 onto the filter 4.
- 7. Screw the hose 3 onto the sprayer handle 1 by hand using the union nut 2 (do not use pliers).





Attaching the hose to the pump:

- 8. Push the union nut 12 onto the hose 13.
- 9. Push the connector (15) into the pump (16).
- 10. Push the hose (13) onto the connector (15).
- 11. Screw the hose 0 onto the pump 0 by hand using the union nut 0 (do not use pliers).



Filling the tank:



- 1. Thoroughly stir the product you are going to use.
- 2. Unscrew the tank cap 1.
- 3. Pour in the product up to the highest mark (12 litres). Always comply with the precautionary measures and correct dosage specified by the product manufacturer.
- 4. Fit the tank cap 0 and screw tight by hand (do not use pliers).



Adjusting the spray lance:

(18)

 (\mathbf{A})



Adjusting the spray jet:



5. Maintenance

Cleaning the Backpack Sprayer:



Thorough inspection:

1. Strap the Backpack Sprayer to your back.

 Adjust the length of the carrying straps ① as required using the strap adjusters ⑦.

The stitched end of the carrying strap is threaded through the strap adjusters ⑦ at the factory.

- Press down the pump lever ④ repeatedly (approx. 7-9 times) until it becomes more difficult to press the lever and you feel resistance.
- 4. Press the button ⁽¹⁾8 on the sprayer handle. *The Backpack Sprayer starts spraying.*
- 5. Release the button (18) on the sprayer handle. *The Backpack Sprayer stops spraying.*
- 1. Loosen the union nut (19.
- 2. Pull out the spray lance 20 to the desired length.
- 3. Tighten the union nut (19) again.

You can adjust the spray jet from full jet (nozzle open) to a fine mist (nozzle closed).

→ Open or close the nozzle ② to adjust the spray jet as required.

You must clean your Backpack Sprayer after each use.

- 1. Press the button () on the sprayer handle and release the pressure through the spray lance.
- 2. Unscrew tank cap D. If the outside of the cap is dirty, thoroughly clean the area around the thread and thread O-ring D.
- 3. Clean the inlet filter 3 and tank cap 1 in clean water.
- Empty the tank and fill with clean water (with detergent added to the water if necessary).
- 5. Spray the water out of the Backpack Sprayer until the tank is empty.

This cleans the nozzle and valves.

6. Leave the Backpack Sprayer open and allow it to dry.

Do not dispose of residual products by pouring them into the sewerage system. Please contact your local disposal centre and ask about proper disposal of the products you have used.

We recommend that you have your Backpack Sprayer thoroughly inspected (preferably at a GARDENA Service Centre) after using it for 5 years.

6. Trouble-Shooting

Clean the filter in the spraver handle:



Cleaning the pump:



- 1. Unscrew the union nut (2) and pull the hose (3) with filter (4) out of the sprayer handle (1).
- 2. Rinse the filter 1 under running water.
- 3. Reattach the sprayer handle (see 3. Assembly "Attaching the sprayer handle to the hose").

If the pump does not provide pressure after cleaning your Backpack Sprayer you must also clean the pump.

- 1. Push out the locking ring 2 (using a screwdriver, for example) and pull the joint rod s out of the pump (b.
- 2. Unscrew the union ring 26 and pull out the pump 16.
- 3. Inspect the pump O-ring (2) and install a new O-ring if necessary.
- 4. Pull out the inner part of the pump 28 and the gasket 29.
- 5. Clean all pump parts and gaskets with water (and detergent).
- 6. Reassemble the pump in the reverse order.

When assembling the pump ensure that the pump gaskets are seated properly after installation and are not squashed.

Fault	Possible Cause	Remedy
Pump does not provide pressure.	Valve in the tank cap blocked.	\rightarrow Clean the tank cap.
	Hose connections at the pump and sprayer handle are leaking.	→ Tighten the hose connections at the pump and sprayer handle.
	Pump O-ring ⁽²⁷⁾ leaking at the pump.	→ Clean the pump and check the pump O-ring at the pump. Install a new O-ring if necessary.
Backpack Sprayer does not spray although there is sufficient pressure or sprays with poor spray jet.	Nozzle blocked.	\rightarrow Clean the nozzle.
	Filter ④ in sprayer handle blocked.	→ Clean the filter in the sprayer handle.
Tank is difficult to open.	Pressure in tank too low because the valve in the tank cap \bigcirc is blocked.	→ Clean the tank cap $⑦$.

If you have any other problems with your Backpack Sprayer please contact GARDENA Customer Service.

Product Liability

We expressly point out that, in accordance with the product liability law, we are not liable for any damage caused by our units if it is due to improper repair or if parts exchanged are not original GARDENA parts or parts approved by us, and, if the repairs were not carried out by a GARDENA Service Centre or an authorised specialist. The same applies to spare parts and accessories.

Æ

Storing your Backpack Sprayer:

Always keep your Backpack Sprayer out of the reach of children.

→ Before storing, loosen the tank cap and clean your Backpack Sprayer (see 5. Maintenance). Store your Backpack Sprayer away from frost.

8. Accessories

GARDENA Spray Cone GARDENA Adaptor	Prevents spray mist from blowing away.	Art. No. 894 Art. No. 884-00.610.00
GARDENA Gasket Kit	For replacing all gaskets.	Art. No. 884-00.901.00
GARDENA Viton Gasket Kit	For spraying extremely aggressive substances.	Art. No. 884-00.902.00

Accessories can be purchased from GARDENA Service.

9. Technical data

Maximum capacity	12
Minimum/maximum spray lance length	70 / 115 cm
Hose length	125 cm
Permissible operating pressure	3 bar
Permissible operating temperature	35 °C

10. Service

Warranty

GARDENA guarantees this product for 2 years (from date of purchase). This guarantee covers all serious defects of the unit that can be proved to be material or manufacturing faults. Under warranty we will either replace the unit or repair it free of charge if the following conditions apply:

- The unit must have been handled properly and in keeping with the requirements of the operating instructions.
- Neither the purchaser or a non-authorised third party have attempted to repair the unit.

The pump gasket and pump lever bearing are wearing parts and are therefore not covered by the warranty.

This manufacturer's guarantee does not affect the user's existing warranty claims against the dealer/seller.

If you have any problems with your Backpack Sprayer, please contact our Customer Service or return the defective unit together with a short description of the problem directly to one of the GARDENA Service Centres listed on the back of this leaflet. Deutschland GARDENA Holding AG Service Center Hans-Lorenser-Straße 40 D-89079 Ulm Produktfragen: (07 31) 490-123 Reparaturen: (07 31) 490-290

Argentina

Argensem S.A. Venezuela 1075 (1618) El Talar - Buenos Aires

Australia NYLEX Consumer Division 76-88 Mills Road P.O. Box 722 Braeside 3195 Melbourne, Victoria

Austria GARDENA Österreich Ges. m.b.H. Stettnerweg 11-15 2100 Korneuburg

Belgium MARKT (Belgium) NV/SA Sterrebeekstraat 163 1930 Zaventem

Brazil M. Cassab Av. das Nações Unidas, 20.882 Santo Amaro, CEP 04795-000 São Paulo - S.P.

Bulgaria / България ДЕНЕКС ООД Бул. "Г.М.Димитров" 16 ет.4 София 1797

Canada GARDENA Canada Ltd. 100 Summerlea Road Brampton, Ontario Canada L6T 4X3

Chile Antonio Martinic Y CIA. LTDA. Gilberto Fuenzalida 185 Loc. Las Condes - Santiago de Chile

Costa Rica Compania Exim Euroiberoamericana S.A. Av. 12 bis Calle 16 y 18, Bodegas Keith y Ramirez San José

Cyprus FARMOKIPIKI LTD P.O. Box 7098 74, Digeni Akrita Ave. 1641 Nicosia

Czech Republic GARDENA spol. s.r.o. Řípská 20a, č.p. 1153 62700 Brno

Denmark GARDENA Danmark A/S Naverland 8 2600 Glostrup

Finland

France

BP 50080

Great Britain

Seaton Burn

Greece

Athens

Hungarv

Iceland

Saetun 8

Dublin 12

Italy

Japan

Osaka 550

Luxembourg

Grand Rue 30

Netherlands

Postbus 50176

Neth. Antilles

P.O. Box 8200

New Zealand

Curaçao

Habitec Ov

01720 Vantaa

Martinkvläntie 52

GARDENA France

GARDENA UK Ltd.

27-28 Brenklev Wav

Blezard Business Park

33 A. Ifestou str. - 194 00

GARDENA Magyarország Kft.

Industrial Area Koropi

Késmárk utca 22

1158 Budapest

Heimilistaeki hf

P.O. Box 5340

125 Reykjavik

Republic of Ireland

GARDENA Italia S.r.l.

KAKUDAI Mfg. Co. Ltd.

1-4-4. Itachibori Nishi-ku

Magasins Jules Neuberg

GARDENA Nederland B.V.

Case Postale No. 12

Luxembourg 2010

1305 AD ALMERE

Sta. Rosa Weg 196

Private Bag 94001

10 Offenhauser Drive

East Tamaki, Manukau

Jonka Enterprises N.V.

NYLEX New Zealand Limited

South Auckland Mail Centre

Hardware Limited

Long Mile Road

Via Donizetti 22

20020 Lainate (Mi)

Michael McLoughlin & Sons

Service Après-Vente

95948 ROISSY CDG Cedex

Newcastle upon Tyne NE13 6DS

Agrokip G. Psomadopoulos & Co.

GARDÉNA Norge A/S Postboks 214 2013 Skietten

Poland

Norway

GARDENA Polska Sp. z o.o. Szymanów 9 d 05-532 Baniocha

Portugal GARDENA, Lda. Recta da Granja do Marquês Edif. GARDENA

Algueirão 2725-596 Mem Martins Russia / Россия

АО АМИДА ТТЦ ул. Мосфилмовская 66 117330 Москва

Singapore Variware Holland Road Shopping Centre 227-A 1st FL, Unit 29 Holland Avenue Singapore 1027

Slowenia / Croatia Silk d.o.o. Trgovina Brodišče 15 1236 Trzin

South Africa GARDENA South Africa (Pty.) Ltd. P.O. Box 11534 Vorna Valley 1686

Spain ANMI Andreu y Miriam S.A. Calle Pere IV, 111 08018 Barcelona

Sweden GARDENA Svenska AB Box 9003 20039 Malmö

Switzerland GARDENA Kress + Kastner AG Bitziberg 1 8184 Bachenbülach

Ukraine / Украина AO3T AЛЬЦЕСТ

ул. Гайдара 50 г. Киев 01033

Turkey Dost Diş Ticaret Mümessillik A.Ş. Yeşilbağlar Mah. Başkent Cad. No. 26 Pendik - İstanbul

USA GARDENA 3085 Shawnee Drive Winchester, VA 22604

884-20.960.03/0031 © GARDENA Kress + Kastner GmbH Postfach 27 47, D-89070 Ulm http://www.gardena.com