

Accu 60 Art. 8800
Accu 75 Art. 8802
Accu 90 Art. 8804

Accu 75 Art. 8818
Accu 90 Art. 8820

D Betriebsanleitung

Accu-Rasenkantenschere / Accu-Strauchschere

GB Operating Instructions

Edging Accu Shears / Accu Shrub Shears

F Mode d'emploi

Cisailles à gazon sur accu / Taille-buissons sur accu

NL Instructies voor gebruik

Accu-graskantenschaar / Accu-buxusschaar

S Bruksanvisning

Accu Gräskantsaxar / Accu Busktrimmer

I Istruzioni per l'uso

Forbici per erba a batteria / Rifilasiopei a batteria

E Manual de instrucciones

Tijeras Accu / Recortasetos sin cable

P Instruções de utilização

Tesoura com acumulador / Tesoura para arbustos com acumulador

DK Brugsanvisning

Accu-græskantklipper / Accu-busktrimmer

GARDENA Edging Accu Shears / Accu Shrub Shears

Welcome to the Garden of GARDENA...



Translation of the original instructions from German. Please read these operating instructions carefully and observe the information they contain. Use these operating instructions to familiarise yourself with the GARDENA Accu Shears, their proper use and the notes on safety.



For safety reasons, children under the age of 16 as well as people, who are not familiar with the operating instructions, should not use these Accu Shears.

→ Please keep these instructions in a safe place.

Contents

1. Where to use Your GARDENA Accu Shears	10
2. Safety instructions	10
3. Assembly	12
4. Initial Operation	12
5. Operating Your Accu Shears	12
6. Putting into Storage	13
7. Maintenance	14
8. Troubleshooting	15
9. Accessories	16
10. Technical Data	16
11. Service / Warranty	16

1. Where to use Your GARDENA Accu Shears

Intended Use

Edging Accu Shears:

The GARDENA Edging Accu Shears have been designed for cutting the edges of lawns and small areas of grass in private ardens / hobby areas.

Intended Use

Accu Shrub Shears:

The GARDENA Accu Shrub Shears are intended for cutting individual bushes, shrubs and climbing plants in private domestic and hobby gardens.

DANGER !
Risk of injury!



Due to the risk of injury, the Accu Shears with Shrub Shears Cutting Blade Art. 5378 must not be used for cutting grass / grass edges.

2. Safety instructions

→ Please read the notes on safety for your Accu Shears.



WARNING !
Please read the operating instructions before using this tool.



DANGER !
Cutting tool continues to run after switching off!



WARNING !
Do not use in rain or wet conditions.



WARNING !
Keep bystanders away.

Initial Operation

- Inspect these Edging Accu Shears before every use.
- Never disable the safety devices.

Do not use these Edging Accu Shears if the safety devices and/or the blades have been damaged or are worn out.

Proper Use

- Only use the Edging Accu Shears for the purposes specified in these instructions.



WARNING ! Personal Injury and Damage to Property!

- **The Edging Accu Shears are not intended for cutting hedges or chopping material up for composting.**

Work Clothes

- Do not wear loosely hanging clothes or jewellery etc. *They could become caught in the machine.*
- Wear gloves, sturdy shoes and long trousers to protect your legs.

Working Area

You are responsible for the safety of the working area.

- Make sure that there are no other people (especially children) or animals anywhere near the working area.

Area to be Cut

- Inspect the area to be cut before beginning. Remove any objects from the area.
- Look for objects while you are working.
- If you should come across any obstacles when cutting, turn off the shears by releasing the switch on button ⑨.

Operating Your Edging Accu Shears

WARNING ! Personal Injury and Damage!

- **Keep your hands and feet away from the cutting tool, especially when the Accu-Shears are switched on!**
- **Never switch on the Accu Shears while you are adjusting the joint.**
- If the cutting blades become blocked, turn off the shears (release the switch on button ⑨) and remove the object (thick branch or another object) using a blunt device.

Never use your fingers to remove objects as the blades can cause serious cuts and injuries.

Charging



ATTENTION ! FIRE RISK !

- **Never charge the Accus near acids or easily inflammable materials.**

The charging cable should be checked regularly for signs of damage or ageing (brittleness) and may only be used if it is in perfect condition.

Fire risk!

Only use the original GARDENA charging device or one authorised by GARDENA.

Non-rechargeable batteries must not be charged with this battery charger (danger of fire).

The Edging Accu Shears must not be operated while the battery is charging.

Working Conditions

Only work when visibility is good.

Be particularly careful when walking backwards. You might stumble!


- When working ensure you adopt a sturdy stance.

Interrupting Your Work

- Never leave the Edging Accu Shears unattended at the working area. If you should interrupt your work, store the Shears in a safe place.
- If you interrupt your work to move to another working area, you must switch off the Edging Accu Shears until you reach the new working area (release the switch on button ⑨).
- Never use your Shears when it is raining or in a damp, wet area.
- Always cover the blade with the blade guard when moving / transporting the Shrub Shears.

3. Assembly

Fitting / Removing the Wheels:

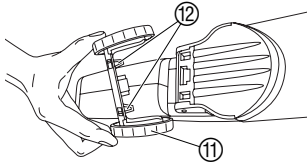

The wheels are only included with the lawn edging shears. (These can be ordered subsequently via GARDENA Service).


Fitting the Wheels:

→ Push the wheels ⑪ into the Accu Shears from below until both catches ⑫ click into place.

Removing the Wheels:

→ Press both wheels ⑪ together on the underside of the Accu Shears and remove.

Fitting / Removing the Telescopic Swivel Handle:

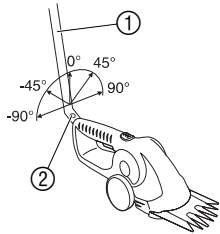

The **GARDENA Telescopic Swivel Handle Art. No. 8806** (available as an accessory) can be mounted in 45° steps from 90° to -90°.

Fitting the Telescopic Swivel Handle:

→ Guide the swivel handle ① at the desired angle into the handle holder of the Accu Shears until the lock engages.


Teleskopdrehstiel demontieren:

→ Press the release button ② and pull out the swivel handle.

The starting lockout and ON button on the Accu Shears no longer function when the swivel handle is mounted.

4. Initial Operation

Charging the Accu:

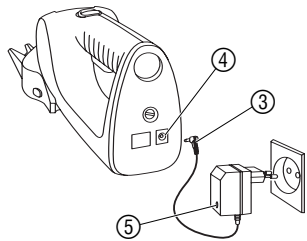

The Accus must be charged for 20 hours before using the Accu Shears.

The accu discharge themselves when stored for a longer period of time. Therefore, the Shears should be recharged in a dry place before each operation.



Over-voltage damages accu.

→ **Ensure the mains voltage is correct.**

1. Insert charging cable ③ into charging socket ④ of the Edging Accu Shears.
2. Plug charging unit into a mains socket. Accu Shears. *The charging indicator lamp ⑤ comes on.*
3. Unplug the Accu Shears from the mains after 20 hours.

When the cutting power drops, recharge your shears immediately to prevent the cells from becoming completely empty.

5. Operating Your Edging Accu Shears

WARNING!
Risk of Injury!



There is a risk of injury if the switching devices installed on the Shears are removed or bridged (e.g. by fastening the on switch to the handle). This prevents the Accu Shears switching off automatically.


→ **Never remove or bridge the switching devices.**

The starting lockout prevents your GARDENA Edging Accu Shears from being switched on unintentionally.

Cutting Grass / Bushes and Shrubs:



Cutting with the Telescopic Swivel Handle:

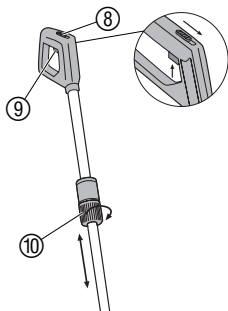


1. **Edging Accu Shears:** Clear the area to be cut of stones and other solid objects.

Accu Shrub Shears: Remove the blade guard (6) from the cutting blade.

2. **Ergonomic design:** Press the joint adjuster (7) and adjust the handle to the desired angle.

3. **Cutting:** Disengage the starting lockout (8) by pushing it forwards and press the ON button (9). Release the starting lockout (8) again.

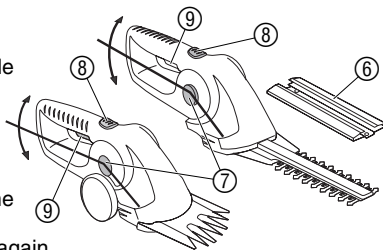

The **GARDENA Telescopic Swivel Handle Art. No. 8806** or the **Accu Shears** can be mounted in 45° steps (see "3. Assembly"). The swivel handle is fully height adjustable (85 - 120 cm) and can be adapted to suit your height.

1. Attach the Telescopic Swivel Handle (see "3. Assembly").
2. Loosen the adjusting bolt (10).
3. Set the handle to the correct length and tighten the adjusting bolt (10).
4. Disengage the starting lockout (8) by pushing it forwards and press the ON button (9).
5. Release the starting lockout (8) again.

6. Putting into Storage

Correct Wintering:

Store your Edging Accu Shears out of the reach of children.

1. Fully charge Edging Accu Shears after last use (20 hours).
2. Clean the Accu Shears and oil the blades (See "7. Maintenance").
3. Cover the blades with sheath for storage.
4. Store Edging Accu Shears in a cool, dry place where they are protected from frost.

Recharge the accu for approx. 20 hours before using your Shears again in the Spring.

Disposal:

(in accordance with
RL2002/96/EC)



The product must not be added to normal household waste. It must be disposed of properly.

Your GARDENA Edging Accu Shears contain nickel-cadmium cells. After their lifetime has expired, these cells may not be disposed of as normal household rubbish.

Disposing of the battery:



Ni-Cd



Please return the Ni Cd cells to your GARDENA dealer or dispose of them properly at a public recycling centre.

1. Discharge the Ni Cd cells completely.
2. Dispose of the Ni Cd cells properly.

7. Maintenance

WARNING!
Risk of Injury!



Blades can cause injury.

→ Do not push the safety lock of the Accu-Shears forwards during maintenance work.

WARNING!
Personal Injury and
Damage to Property!




There is a risk of personal injury and damage to the Shears if you clean them under running water (especially under high pressure).

→ Never clean your Shears under running water.

Sharpening the Blades:

To obtain good cutting results, the blades should be cleaned thoroughly from time to time and should always be sharp.

Always remove notches and burrs caused by stones etc. immediately.

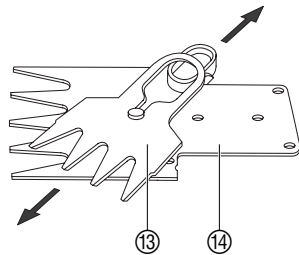

1. Remove the blades (see “8. Troubleshooting”, “*Replacing Grass Cutting Blades*”).
2. Separate the upper blade ⑬ and lower blade ⑭.
3. Remove any grass and dirt between the upper and lower blades.
4. Sharpen the blades using a sharpening stone.
5. Fit the blades (see “8. Troubleshooting”, “*Replacing Grass Cutting Blades*”).

Cleaning the Accu Shears and Oiling the Blades:

To increase the cutting performance and operating life of your Accu Shears, you should clean and oil them both before and after every use.

Never grease the cutting blades.

1. Clean your Accu Shears with a damp cloth.
2. Oil the cutting blades with **GARDENA Cleaning Spray Art. No. 2366** or sewing machine oil, for example.

8. Troubleshooting



WARNING!
Risk of Injury!



Blades can cause serious injury.

→ Do not push the safety lock of the Accu-shears forwards when rectifying faults.

Replacing the Cutting Blades:

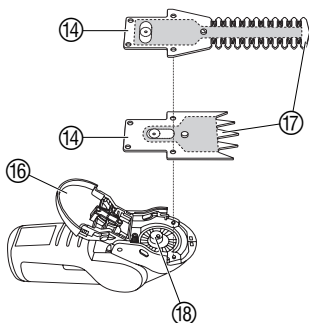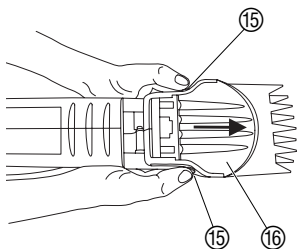

Please only use original GARDENA Accu Shears Cutting Blades:

Lawn shears blade set with blade protection

Accu 60/75

Art. No. 2345

Accu 90

Art. No. 2346

Shrub shears blade set with blade protection

Accu 75/90

Art. No. 5378


1. Remove the wheels (see “3. Assembly”).
2. Press both catches ⑮ simultaneously and push the runner ⑯ all the way forwards.
3. Open the runner ⑯ and remove the blade set ⑰.
4. Clean the area around the gears and coat the gear wheels with acid-free grease (Vaseline).
5. Insert the blade set ⑰ and close the runner ⑯.
6. Push the runner ⑯ all the way back until both catches ⑮ engage again.

Changing the Accus:



Risk of short circuit, Risk of fire.

→ The contacts of the accu must not touch metallic parts.

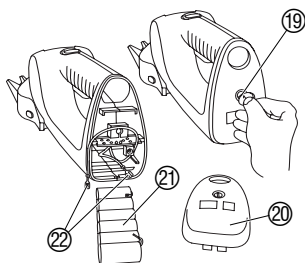

1. Loosen screw ⑲.
2. Remove cover ⑳.
3. Remove accu ㉑.
4. Pull cable receptacles ㉒ off accu pack.
5. Install new accu in reverse order.

With all other malfunctions, please contact one of the GARDENA service centres or a dealer authorised by GARDENA.

Repairs must only be performed by specialists authorised by GARDENA.

9. Accessories

Telescopic Swivel Handle	Suitable for all GARDENA Accu Shears	Art. No. 8806
Wheels	Suitable for all GARDENA Accu-Shears (obtainable via GARDENA Service)	Art. No. 8804-00.710.00
Blades for Grass Shears	Accu 60/Accu 75	Art. No. 2345
Blades for Grass Shears	Accu 90	Art. No. 2346
Blades for Shrub Shears	Accu 75/Accu 90	Art. No. 5378

10. Technical Data

	Edging Accu Shears		Accu Shrub Shears		
	Accu 60	Accu 75	Accu 90	Accu 75	Accu 90
Accu	3 NC (1,7 Ah) à 1,2 V= 3,6 V	4 NC (1,7 Ah) à 1,2 V= 4,8 V	6 NC (1,7 Ah) à 1,2 V= 7,2 V	4 NC (1,7 Ah) à 1,2 V= 4,8 V	6 NC (1,7 Ah) à 1,2 V= 7,2 V
Charging time	20 hours	20 hours	20 hours	20 hours	20 hours
Mains voltage (battery charger)	230 V / 50 Hz	230 V / 50 Hz	230 V / 50 Hz	230 V / 50 Hz	230 V / 50 Hz
Running time (fully charged accu)	approx. 60 min.	approx. 75 min.	approx. 90 min.	approx. 75 min.	approx. 90 min.
Cutting performance	approx. 1100 m	approx. 1400 m	approx. 1500 m		
Lawn blade	8 cm cutting width Art. No. 2345	8 cm cutting width Art. No. 2345	10 cm cutting width Art. No. 2346	20 cm cutting length Art. No. 5378	20 cm cutting length Art. No. 5378
Working area related emission characteristic value $L_{pA}^{1)}$	78 dB (A)	78 dB (A)	82 dB (A)		
Noise level $L_{WA}^{2)}$			measured: guaranteed:	77 dB (A) 79 dB (A)	73 dB (A) 79 dB (A)
Hand/Arm vibrations $a_{vhw}^{1)}$	< 2,5 ms ⁻²	< 2,5 ms ⁻²	< 2,5 ms ⁻²	< 2,5 ms ⁻²	< 2,5 ms ⁻²

Measuring method according to 1) prEN 50260-1 2) RL 2000/14/EG

11. Service / Warranty

GARDENA guarantees this product for 2 years (from date of purchase). This guarantee covers all serious defects of the unit that can be proved to be material or manufacturing faults. Under warranty we will either replace the unit or repair it free of charge if the following conditions apply:


- The unit must have been handled properly and in keeping with the requirements of the operating instructions.
- Neither the purchaser nor a non-authorized third party have attempted to repair the unit.

The Trimmer Blades are wearing parts and are not covered by the guarantee.

This manufacturer's guarantee does not affect the user's existing warranty claims against the dealer/seller.

If a fault occurs with your Edging Accu Shears, please return the faulty unit together with the receipt and a description of the fault, with postage paid to the address of the Service Centre on the back of these operating instructions.

<p>D <i>Produkthftung</i></p>	<p>Wir weisen ausdrücklich darauf hin, dass wir nach dem Produkthaftungsgesetz nicht für durch unsere Geräte hervorgerufene Schäden einzustehen haben, sofern diese durch unsachgemäße Reparatur verursacht oder bei einem Teileaustausch nicht unsere Original GARDENA Teile oder von uns freigegebene Teile verwendet werden und die Reparatur nicht vom GARDENA Service oder dem autorisierten Fachmann durchgeführt wird. Entsprechendes gilt für Ergänzungssteile und Zubehör.</p>
<p>GB <i>Product Liability</i></p>	<p>We expressly point out that, in accordance with the product liability law, we are not liable for any damage caused by our units if it is due to improper repair or if parts exchanged are not original GARDENA parts or parts approved by us, and, if the repairs were not carried out by a GARDENA Service Centre or an authorised specialist. The same applies to spare parts and accessories.</p>
<p>F <i>Responsabilité</i></p>	<p>Nous vous signalons expressément que GARDENA n'est pas responsable des dommages causés par ses appareils, dans la mesure où ces dommages seraient causés suite à une réparation non conforme, dans la mesure où, lors d'un échange de pièces, les pièces d'origine GARDENA n'auraient pas été utilisées, ou si la réparation n'a pas été effectuée par le Service Après-Vente GARDENA ou l'un des Centres SAV agréés GARDENA. Ceci est également valable pour tout ajout de pièces et d'accessoires autres que ceux préconisés par GARDENA.</p>
<p>NL <i>Productaansprakelijkheid</i></p>	<p>Wij wijzen er nadrukkelijk op, dat wij op grond van de wet aansprakelijkheid voor producten niet aansprakelijk zijn voor schade ontstaan door onze apparaten, indien deze door onvakkundige reparatie veroorzaakt zijn, of er bij het uitwisselen van onderdelen geen gebruik gemaakt werd van onze originele GARDENA onderdelen of door ons vrijgegeven onderdelen en de reparatie niet door de GARDENA technische dienst of de bevoegde vakman uitgevoerd werd. Ditzelfde geldt voor extra-onderdelen en accessoires.</p>
<p>S <i>Produktansvar</i></p>	<p>Tillverkaren är inte ansvarig för skada som orsakats av produkten om skadan beror på att produkten har reparerats felaktigt eller om, vid reparation eller utbyte, andra än Original GARDENA reservdelar har använts. Samma sak gäller för kompletteringsdelar och tillbehör.</p>
<p>I <i>Responsabilità del prodotto</i></p>	<p>Si rende espressamente noto che, conformemente alla legislazione sulla responsabilità del prodotto, non si risponde di danni causati da nostri articoli se originati da riparazioni eseguite non correttamente o da sostituzioni di parti effettuate con materiale non originale GARDENA o comunque da noi non approvato e, in ogni caso, qualora l'intervento non venga eseguito da un centro assistenza GARDENA o da personale specializzato autorizzato. Lo stesso vale per le parti complementari e gli accessori.</p>
<p>E <i>Responsabilidad de productos</i></p>	<p>Advertimos que conforme a la ley de responsabilidad de productos no nos responsabilizamos de daños causados por nuestros aparatos, siempre y cuando dichos daños hayan sido originados por arreglos o reparaciones indebidas, por recambios con piezas que no sean piezas originales GARDENA o bien piezas autorizadas por nosotros, así como en aquellos casos en que la reparación no haya sido efectuada por un Servicio Técnico GARDENA o por un técnico autorizado. Lo mismo es aplicable para las piezas complementarias y accesorios.</p>
<p>P <i>Responsabilidade sobre o produto</i></p>	<p>Queremos salientar que segundo a lei da responsabilidade do fabricante, nós não nos responsabilizaremos por danos causados pelo nosso equipamento, quando estes ocorram em decorrência de reparações inadequadas ou da substituição de peças por peças não originais da GARDENA, ou peças não autorizadas. A responsabilidade tornar-se-à nula também depois de reparações realizadas por oficinas não autorizadas pela GARDENA. Esta restrição valerá também para peças adicionais e acessórios.</p>
<p>DK <i>Produktansvar</i></p>	<p>Vi gør udtrykkeligt opmærksom på at i henhold til produktansvarsloven er vi ikke ansvarlige for skader forårsaget af vores udstyr, hvis det skyldes uautoriserede reparationer eller hvis dele er skiftet ud og der ikke er anvendt originale GARDENA dele eller dele godkendt af os, eller hvis reparationerne ikke er udført af GARDENA-service eller en autoriseret fagmand. Det samme gælder for ekstra udstyr og tilbehør.</p>

<p>D EU-Konformitätserklärung Maschinenverordnung (9. GSGVO) / EMVG / Niedersp. RL Der Unterzeichnete GARDENA Manufacturing GmbH, Hans-Lorenser-Str. 40, D-89079 Ulm, bestätigt, dass das nachfolgend bezeichnete Gerät in der von uns in Verkehr gebrachten Ausführung die Anforderungen der harmonisierten EU-Richtlinien, EU-Sicherheitsstandards und produktspezifischen Standards erfüllt. Bei einer nicht mit uns abgestimmten Änderung des Gerätes verliert diese Erklärung ihre Gültigkeit.</p>	Bezeichnung des Gerätes: Accu-Rasenkantenschere / Accu-Strauchschere Description of the unit: Edging Accu Shears / Accu Shrub Shears Désignation du matériel : Cisailles à gazon sur accu / Taille-buissons sur accu Omschrijving van het apparaat: Accu-graskantenscharen / Accu-buxusschaar Produktbeskrivning: Accu Gråskantsaxar / Accu Busktrimmer Descrizione del prodotto: Forbici a batteria Accu / Cesioie a batteria Descripción de la mercancía: Tijeras Accu / Recortasetos sin cable Descrição do aparelho: Tesoura com Acumulador / Tesoura para arbustos com acumulador Beskrivelse af enhederne: Accu-græskantklipper / Accu-busktrimmer
<p>GB EU Certificate of Conformity The undersigned GARDENA Manufacturing GmbH, Hans-Lorenser-Str. 40, D-89079 Ulm, hereby certifies that, when leaving our factory, the unit indicated below is in accordance with the harmonised EU guidelines, EU standards of safety and product specific standards. This certificate becomes void if the unit is modified without our approval.</p>	
<p>F Certificat de conformité aux directives européennes Le constructeur, soussigné : GARDENA Manufacturing GmbH, Hans-Lorenser-Str. 40, D-89079 Ulm, déclare qu'à la sortie de ses usines le matériel neuf désigné ci-dessous était conforme aux prescriptions des directives européennes énoncées ci-après et conforme aux règles de sécurité et autres règles qui lui sont applicables dans le cadre de l'Union européenne. Toute modification portée sur ce produit sans l'accord express de GARDENA supprime la validité de ce certificat.</p>	Type: Art.-Nr.: Type: Art. No.: Type: Accu 60 Référence : 8800 Type: Accu 75 Art. nr. : 8802 Modello: Art. : 8818 Tipo: Accu 90 Art. Nº: 8820 Tipo: Art. Nº: Type: Varenr. :
<p>NL EU-overeenstemmingsverklaring Ondergetekende GARDENA Manufacturing GmbH, Hans-Lorenser-Str. 40, D-89079 Ulm, bevestigt, dat het volgende genoemde apparaat in de door ons in de handel gebrachte uitvoering voldoet aan de eis van, en in overeenstemming is met de EU-richtlijnen, de EU-veiligheidsstandaard en de voor het product specifieke standaard. Bij een niet met ons afgestemde verandering aan het apparaat verliest deze verklaring haar geldigheid.</p>	EU-Richtlijnen: 98/37/EC : 1998 EU directives: 2006/42/EC : 2006 Directives européennes : 2004/108/EC EU-richtlijnen: 2006/95/EC* EU direktiv: 93/68/EC Directive UE: Ladegerät*, Charging Unit* Normativa UE: Chargeur*, Netstroomadapter* Directrices da UE: Laddare*, Unità di ricarica EU Retningslinier: Terminal de recarga* Carregador* Art. 8818 / 8820 2000/14/EG
<p>S EU Tillverkarintyg Undertecknad firma GARDENA Manufacturing GmbH, Hans-Lorenser-Str. 40, D-89079 Ulm, intygar härmed att nedan nämnda produkter överensstämmer med EU:s direktiv, EU:s säkerhetsstandard och produktspecifikation. Detta intyg upphör att gälla om produkten ändras utan vårt tillstånd.</p>	
<p>I Dichiarazione di conformità alle norme UE La sottoscritta GARDENA Manufacturing GmbH, Hans-Lorenser-Str. 40, D-89079 Ulm, certifica che il prodotto qui di seguito indicato, nei modelli da noi commercializzati, è conforme alle direttive armonizzate UE nonché agli standard di sicurezza e agli standard specifici di prodotto. Qualunque modifica apportata al prodotto senza nostra specifica autorizzazione invalida la presente dichiarazione.</p>	Schall-Leistungspegel: gemessen / garantiert Noise level: measured / guaranteed Puissance acoustique : mesurée / garantie Geluidsniveau: gemeten / gegarandeerd Ljudnivå: uppmätt / garanterad Livello rumorosità: testato / garantito Nível sonoro: medido / garantizado Nível de ruído: medido / garantido Lydtryksniveau: afmålt / garanti Art. 8818 77 dB (A) / 79 dB (A) Art. 8820 73 dB (A) / 79 dB (A)
<p>E Declaración de conformidad de la UE El que suscribe GARDENA Manufacturing GmbH, Hans-Lorenser-Str. 40, D-89079 Ulm, declara que la presente mercancía, objeto de la presente declaración, cumple con todas las normas de la UE, en lo que a normas técnicas, de homologación y de seguridad se refiere. En caso de realizar cualquier modificación en la presente mercancía sin nuestra previa autorización, esta declaración pierde su validez.</p>	Anbringningsjahr der CE-Kennzeichnung: Year of CE marking: Date d'aposition du marquage CE : Installatiejaar van de CE-aanduiding: CE-Märkningsår: 2003 Anno di rilascio della certificazione CE: Colocación del distintivo CE: Ano de marcação pela CE: CE-Mærkningsår:
<p>P Certificado de conformidad da UE Os abaixo mencionados GARDENA Manufacturing GmbH, Hans-Lorenser-Str. 40, D-89079 Ulm, por este meio certificam que ao sair da fábrica o aparelho abaixo mencionado está de acordo com as diretrizes harmonizadas da UE, padrões de segurança e de produtos específicos. Este certificado ficará nulo se a unidade for modificada sem a nossa aprovação.</p>	 Dr. Friedrich Böbel Technische Leitung Technical Dept. Manager Direction technique Hoofd technische dienst Technical Director Direzione Tecnica Dirección Técnica Director Técnico Teknisk direktør
<p>DK EU Overensstemmelse certificat Undertegnede GARDENA Manufacturing GmbH, Hans-Lorenser-Str. 40, D-89079 Ulm bekræfter hermed, at enheder listet herunder, ved afsendelse fra fabrikken, er i overensstemmelse med harmoniserede EU retningslinier, EU sikkerhedsstandarder og produktspecifikationsstandarder. Dette certifikat træder ud af kraft hvis enhederne er ændret uden vor godkendelse.</p>	Ulm, den 11.09.2003 Ulm, 11.09.2003 Fait à Ulm, le 11.09.2003 Ulm, 11-09-2003 Ulm, 2003.09.11 Ulm, 11.09.2003 Ulm, 11.09.2003 Ulm, 11.09.2003 Ulm, 11.09.2003 Ulm, 11.09.2003

Deutschland / Germany

GARDENA
Manufacturing GmbH
Service Center
Hans-Lorenser-Straße 40
D-89079 Ulm
Produktfragen:
(+49) 731 490-123
Reparaturen:
(+49) 731 490-290
service@gardena.com

Argentina

Argensem® S.A.
Calle Colonia Japonesa s/n
(1625) Loma Verde
Escobar, Buenos Aires
Phone: (+54) 34 88 49 40 40
info@argensem.com.ar

Australia

Nylex Consumer Products
50-70 Stanley Drive
Somerton, Victoria, 3062
Phone: (+61) 1800 658 276
spare.parts@nylex.com.au

Austria / Österreich

GARDENA
Österreich Ges.m.b.H.
Stettnerweg 11-15
2100 Korneuburg
Tel.: (+43) 22 62 7 45 45 36
kundendienst@gardena.at

Belgium

GARDENA Belgium NV/SA
Sterrebeekstraat 163
1930 Zaventem
Phone: (+32) 2 7 20 92 12
Mail: info@gardena.be

Brazil

Palash Comércio e
Importação Ltda.
Rua Américo Brasiliense,
2414 - Chácara Sto Antonio
São Paulo - SP - Brasil -
CEP 04715-005
Phone: (+55) 11 5181-0909
eduardo@palash.com.br

Bulgaria

DENEX LTD.
2 Luis Ahalier Str. - 7th floor
Sofia 1404
Phone: (+359) 2 958 18 21
office@denex-bg.com

Canada

GARDENA Canada Ltd.
100 Summerlea Road
Brampton, Ontario L6T 4X3
Phone: (+1) 905 792 93 30
info@gardenacanada.com

Chile

Antonio Martinic y Cia Ltda.
Cassillas 272
Centro de Cassillas
Santiago de Chile
Phone: (+56) 2 20 10 708
garfar_cl@yahoo.com

Costa Rica

Compania Exim
Euroberoamericana S.A.
Los Colegios, Moravia,
200 metros al Sur del Colegio
Saint Francis - San José
Phone: (+506) 297 68 83
exim_euro@racsa.co.cr

Croatia

KLIS d.o.o.
Stanciceva 79
10419 Vukovina
Phone: (+385) 1 622 777 0
gardena@klis-trgovina.hr

Cyprus

FARMOKIPIKI LTD
P.O. Box 7098
74, Digeni Akritra Ave.
1641 Nicosia
Phone: (+357) 22 75 47 62
condam@spidernet.com.cy

Czech Republic

GARDENA spol. s r.o.
Řípská 20a, č.p. 1153
627 00 Brno
Phone: (+420) 800 100 425
gardena@gardenabmo.cz

Denmark

GARDENA Norden AB
Salgsafdeling Danmark
Box 9003
S-200 39 Malmö
info@gardena.dk

Finland

Habitec Oy
Martinkyläntie 52
01720 Vantaa

France

GARDENA
PARIS NORD 2
69, rue de la Belle Etoile
BP 57080
ROISSY EN FRANCE
95948 ROISSY CDG CEDEX
Tél. (+33) 0826 101 455
service.consommateurs@
gardena.fr

Great Britain

GARDENA UK Ltd.
27-28 Brenkley Way
Bleazard Business Park
Seaton Burn
Newcastle upon Tyne
NE13 6DS
info@gardena.co.uk

Greece

Agrokrip
Psomadopoulos S.A.
Ifaistou 33A
Industrial Area Koropi
194 00 Athens Greece
V.A.T. EL093474846
Phone: (+30) 210 66 20 225
service@agrokrip.gr

Hungary

GARDENA
Magyarország Kft.
Késmárk utca 22
1158 Budapest
Phone: (+36) 80 20 40 33
gardena@gardena.hu

Iceland

Ó. Johnson & Kaaber
Tunguhalsi 1
110 Reykjavik
oaj@ojk.is

Ireland

Michael McLoughlin & Sons
Hardware Limited
Long Mile Road
Dublin 12

Italy

GARDENA Italia S.p.A.
Via Donizetti 22
20020 Lainate (Mi)
Phone: (+39) 02.93.94.79.1
info@gardenaitalia.it

Japan

KAKUICHI Co. Ltd.
Sumitomo Realty &
Development Kojimachi
BLDG., 8F
5-1 Nibannayo, Chiyoda-ku
Tokyo 102-0084
Phone: (+81) 33 264 4721
m_ishihara@kaku-ichi.co.jp

Luxembourg

Magasins Jules Neuberg
Grand Rue 30
Boîte postale 12
L-2010 Luxembourg
Phone: (+352) 40 14 01
info@neuberg.lu

Netherlands

GARDENA Nederland B.V.
Postbus 50176
1305 AD ALMERE
Phone: (+31) 36 521 00 00
info@gardena.nl

Neth. Antilles

Jonka Enterprises N.V.
Sta. Rosa Weg 196
P.O. Box 8200
Curaçao
Phone: (+599) 9 767 66 55
pgm@jonka.com

New Zealand

NYLEX New Zealand Limited
Building 2, 118 Savill Drive
Mangere, Auckland
Phone: (+64) 9 270 1806
lena.chapman@nylex.com.au

Norway

GARDENA Norden AB
Salgskontor Norge
Karihaugveien 89
1086 Oslo
info@gardena.no

Poland

GARDENA Polska Sp. z o.o.
Szymanów 9 d
05-532 Baniocza
Phone: (+48) 22 727 56 90
gardena@gardena.pl

Portugal

GARDENA Portugal Lda.
Recta da Granja do Marquês
Edif. GARDENA Algueirão
2725-596 Mem Martins
Phone: (+351) 21 922 85 30
info@gardena.pt

Romania

MADEX INTERNATIONAL SRL
Soseaua Odaii 117-123,
Sector 1,
București, RO 013603
Phone: (+40) 21 352 76 03
madex@ines.ro

Russia / Россия

ООО ГАРДЕНА РУС
123007, г. Москва
Хорошевское шоссе, д. 32А
Тел.: (+7) 495 647 25 10
info@gardena-rus.ru

Singapore

Hy - Ray PRIVATE LIMITED
40 Jalan Pemimpin
#02-08 Tat Ann Building
Singapore 577185
Phone: (+65) 6253 2277
hyray@singnet.com.sg

Slovak Republic

GARDENA Slovensko, s.r.o.
Panónska cesta 17
851 04 Bratislava
Phone: (+421) 263 453 722
info@gardena.sk

Slovenia

GARDENA d.o.o.
Brodišče 15
1236 Trzin
Phone: (+386) 1 580 93 32
servis@gardena.si

South Africa

GARDENA
South Africa (Pty.) Ltd.
P.O. Box 11534
Vorna Valley 1686
Phone: (+27) 11 315 02 23
sales@gardena.co.za

Spain

GARDENA IBÉRICA S.L.U.
C/ Basauri, nº 6
La Florida
28023 Madrid
Phone: (+34) 91 708 05 00
atencioncliente@gardena.es

Sweden

GARDENA Norden AB
Försäljningskontor Sverige
Box 9003
200 39 Malmö
info@gardena.se

Switzerland / Schweiz

GARDENA (Schweiz) AG
Bitzberg 1
1814 Bachenbülach
Phone: (+41) 848 800 464
info@gardena.ch

Turkey

GARDENA / Dost Diş Ticaret
Müessesilik A.Ş. Sanayi
Çad. Adil Sokak No. 1
Kartal - İstanbul
Phone: (+90) 216 38 93 939
info@gardena-dost.com.tr

Ukraine / Украина

ALTEST JSC
4 Petropavlivska Street
Petropavlivska
Borschahivka Town
Kyivo Svyatoshyn Region
08130, Ukraine
Phone: (+380) 44 459 57 03
upryr@altsest.kiev.ua

USA

Melnor Inc.
3085 Shawnee Drive
Winchester, VA 22604
Phone: (+1) 540 722-9080
service_us@melnor.com

8800-20.960.07/0407

© GARDENA

Manufacturing GmbH

D-89070 Ulm

http://www.gardena.com