

T 1030
Art. 1825

GB **Operating Instructions**

Water Timer electronic

S **Bruksanvisning**

Bevattningstimer electronic

NL **Instructies voor gebruik**

Elektronische watertimer

D **Betriebsanleitung**

Bewässerungsuhren electronic

FIN **Käyttöohje**

Elektroninen kasteluajastin

GB

S

NL

D

FIN

GARDENA Water Timer electronic T 1030

Welcome to the Garden of GARDENA...



Translation of the original instructions from German. Please read these operating instructions carefully and observe the notes given. Use these instructions to familiarise yourself with the Water Timer electronic and its proper use as well as the notes on safety.



For safety reasons, children and young people under 16 as well as anyone who is not familiar with these operating instructions may not use the Water Timer.

→ Please keep these operating instructions in a safe place.

Contents

1. Where to Use Your GARDENA Water Timer	3
2. For Your Safety	3
3. Function	5
4. Putting Your Water Timer into Operation	6
5. Operating Your Water Timer	8
6. Trouble-Shooting	12
7. Putting Your Water Timer Out of Operation	13
8. Technical Data	13
9. Service	14

1. Where to Use Your GARDENA Water Timer

Intended use

The GARDENA Water Timer is intended for private use in domestic and hobby gardens, exclusively for outdoor use, to control sprinklers and watering systems.

Please note



The GARDENA Water Timer must not be used for industrial purposes or in conjunction with chemicals, foodstuffs, easily flammable and explosive materials.

2. For Your Safety

Use:

Warning!

→ Only use the Water Timer outdoors.

The water timer is not approved for indoor use.

The minimum operating pressure is 1 bar, the maximum operating pressure is 12 bar. The minimum flow rate is 20 l/h.

→ Check the filter in the sleeve nut regularly and clean if necessary.

→ Do not pull the hose connected to the Water Timer and avoid tensile strain.

Battery:

For functional safety reasons, only use a 9 V alkali-manganese (alkaline) battery type IEC 6LR61.

The Water Timer will only run for approx. 1 year if the new alkaline battery has a nominal voltage of at least 9 V.

→ Check the battery before you buy it.

Putting your Water Timer into operation:

To prevent water entering the battery compartment, the Water Timer must only be mounted in a perpendicular position with the sleeve nut pointing upwards.

After you have selected the watering program, the Water Timer opens at the selected starting time. To avoid getting wet when operating the Water Timer, connect the hose or turn off the tap before selecting the program. Alternatively, the control unit can be removed for programming.


Water flow:

The max. temperature for the water is 40 °C.

→ Only use clear fresh water.

3. Function

Control knob and OK button:

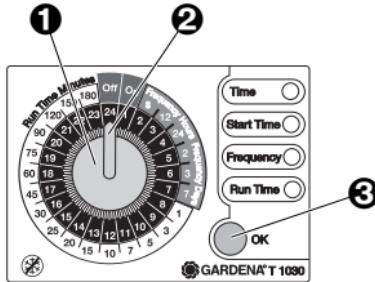

- ① **Control knob**
- ② **Control knob pointer**
- ③ **OK button**

The GARDENA Water Timer electronic allows you to set different watering cycles for different watering times independent of whether you are using a sprinkler, a sprinkler system installation or drip-head watering system to irrigate your garden.

Your Water Timer electronic will water your garden completely automatically according to the program you choose. You can set the timer to water your garden early in the morning or late at night when water evaporates the least, or while you are away on holiday.


You simply program the time (to the nearest hour), watering starting time / duration and cycle by turning the pointer ② of the control knob ① to the correct time and pressing the OK button ③.

The Water Timer opens at the starting time you have selected.

Battery status display:

The 3 LEDs **Time**, **Start Time** and **Frequency** flash to indicate that the battery is flat.

→ Replace the battery
(see 4. Operation "Inserting the Battery").


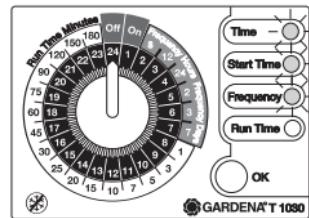


The functional safety of the water timer depends on the capability of the battery.

If you change the battery the program is not saved. You must reprogram the Water Timer (see 5. Operation).


4. Putting Your Water Timer into Operation

Inserting the battery:

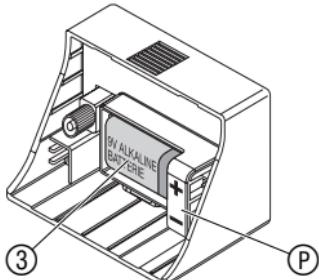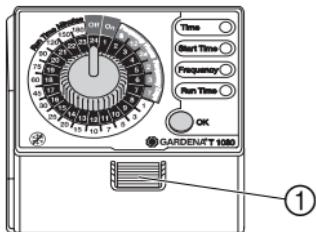

1. Press the release button ① and remove the control unit ② from the housing of the Water Timer.
2. Insert the battery ③ in the battery compartment.
Pay attention to the polarity ④ (+/- markings).
3. Re-attach the control unit ② to the housing.


Make sure you exchange the battery at the right time to prevent the Water Timer failing due to a low battery when you are away for longer periods of time.

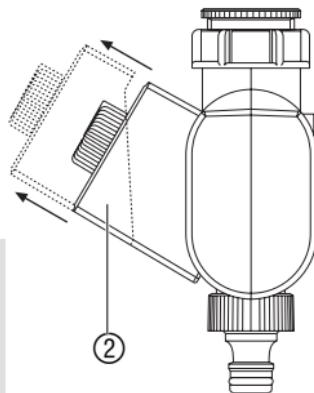

Make sure that the time the battery has been in operation and the time you are planning to be away does not add up to more than a year.

Even if the battery is almost empty, the Water Timer ensures that an open valve is always closed since less energy is required to close the valve than to open it.

Connecting your Water Timer:

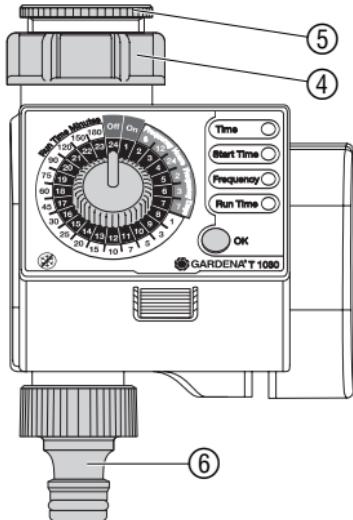

The Water Timer is fitted with a sleeve nut ④ for taps with a 33.3 mm (G1") thread. The adapter supplied ⑤ allows the Water Timer to be connected to taps with a 26.5 mm (G¾") thread.


Connecting the Water Timer to taps with a 33.3 mm (G1") thread:

1. Screw the sleeve nut ④ of the Water Timer onto the thread of the tap by hand (do not use pliers).
2. Screw the threaded tap connector ⑥ onto the Water Timer.

Connecting the Water Timer to taps with a 26.5 mm (G¾") thread:

1. Screw the adapter ⑤ onto the tap by hand (do not use pliers).
2. Screw the sleeve nut ④ of the Water Timer onto the thread of the adapter ⑤ by hand (do not use pliers).
3. Screw the threaded tap connector ⑥ onto the Water Timer.

Installing the anti-theft protection (optional):

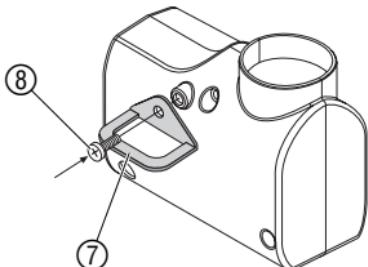


5. Operation

Setting the watering program:

To protect your Water Timer against theft, the **GARDENA Anti-Theft Protection Art. No. 1815-00.791.00** is available from the GARDENA Service.

1. Fasten the bracket ⑦ to the back of the Water Timer using the screw ⑧.
2. The bracket can be used to attach a chain, for example.

The screw cannot be loosened once it has been screwed in.

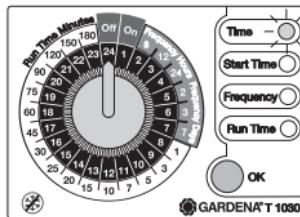

1.


The time of day and watering starting time are entered to the nearest hour.

1. Turn the control knob to **OFF** and confirm by pressing the **OK button**.

The program stored in the memory is overwritten.

*The **Time** LED flashes.*

2.

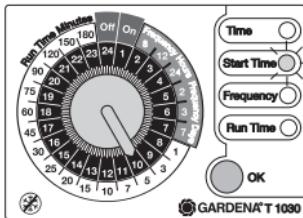


Setting the time of day:

- Set the time on the **inner black scale** by turning the control knob and confirm the time you have selected by pressing the **OK button** (e.g.: 10:00 am).

The Start Time LED flashes.

3.

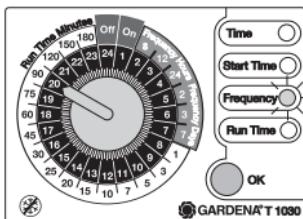


Setting the watering starting time:

- Set the watering starting time on the **inner black scale** by turning the control knob and confirm the time you have selected by pressing the **OK button** (e.g.: 20:00).

The Frequency LED flashes.

4.

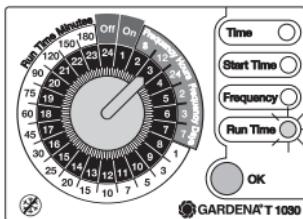


Setting the Watering Cycle:

- Set the watering cycle on the **outer grey scale** (Frequency Hours / Days) using the control knob and confirm your selection by pressing the **OK button** (e.g.: 12 hour cycle).

The Run Time LED flashes.

5.

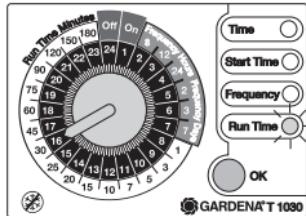


Setting the Watering Time:

- Set the watering time on the **outer white scale** (Run Time Minutes) using the control knob and confirm your selection by pressing the **OK button** (e.g.: **30 minutes**).

The program you have selected is now active.

Changing the watering time:


On hot or cooler days you can change the watering time before the program starts without having to re-enter the time of day, watering starting time or watering cycle.

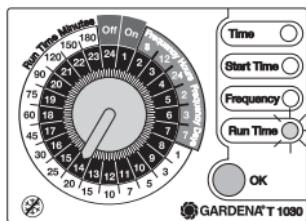

- Select the changed watering time on the **outer white scale** (Run Time Minutes) by turning the control knob.
(e.g.: **20 minutes**). **The Run Time LED flashes**.
- Confirm the watering time you have selected by pressing the **OK button**.

The changed watering time is now active.

Manual watering (ON):

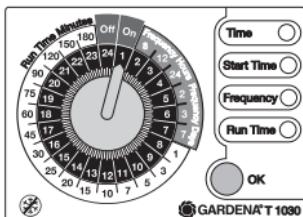

On especially hot days the programmed watering cycle is sometimes insufficient. You can then turn on your sprinkler or irrigation system manually.


The program you have set remains unchanged.

→ Turn the control knob to **ON**.

The valve opens for 30 minutes independent of the set program.

To activate the set program again, you must reset the watering time to the time originally set.

Bad-weather function (OFF):

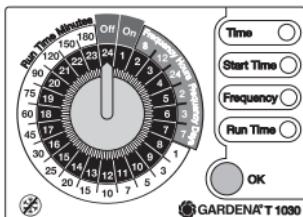

On rainy days the programmed watering cycle is often unnecessary. You can therefore stop the programmed watering cycle (bad-weather function).

The program you have set remains unchanged.

→ Turn the control knob to **OFF**.

The valve closes and remains closed, independent of the watering cycle you have set.

To reactivate the set program, you must first reset the watering time.

6. Trouble-Shooting

Fault	Possible cause	Remedy
Not able to open the Water Timer manually using “ON/OFF”.	Battery capacity too low (3 LEDs flash).	→ Insert a new alkaline battery.
	Tap turned off.	→ Turn on tap.
Watering not initiated.	Control knob turned to “Frequency” or “ON/OFF”.	→ Turn the control knob to “Run Time Minutes”.
	Battery capacity too low (3 LEDs flash).	→ Insert a new alkaline battery.
	Data input/changes made while the program was starting or immediately before.	→ Input data or make changes before or after the starting times you have chosen.
	Tap turned off.	→ Turn on tap.
Battery flat after working for a short time.	The battery you inserted is not an alkaline battery.	→ Use an alkaline battery.

If you have any other problems with your Water Timer, please contact GARDENA Service.

7. Putting Your Water Timer Out of Operation

Disposing of flat batteries:

→ Please return flat batteries to a GARDENA dealer or dispose of them properly at your nearest recycling centre.

Storage/Wintering:

Only dispose of batteries when they are flat.

→ Store your Water Timer in a dry place away from frost before the first frost sets in.

Disposal:

(in accordance with
RL2002/96/EC)



The product must not be added to normal household waste. It must be disposed of in line with local environmental regulations.

→ Important: Make sure that the unit is disposed of via your municipal recycling collection centre.

8. Technical Data

Min./max. operating pressure:	1 bar / 12 bar
Minimum flow rate:	20 l/h
Flow medium:	Clean fresh water
Max. water temperature:	40 °C
Number of program-controlled watering cycles per day:	Up to 3

Watering cycles per week:	Every day, every 2nd, 3rd or 7th day
Watering time per program:	1, 3, 5, 7, 10, 15, 20, 25, 30, 45, 60, 75, 90, 120, 150 or 180 minutes
Battery:	1 x 9 V alkali-manganese (alkaline) type IEC 6LR61
Running time:	Approx. 1 year

9. Service

<i>Warranty</i>	GARDENA guarantees this product for 2 years (from date of purchase). This guarantee covers all serious defects of the unit that can be proved to be material or manufacturing faults. Under warranty we will either replace the unit or repair it free of charge if the following conditions apply: <ul style="list-style-type: none">• The unit must have been handled properly and in keeping with the requirements of the operating instructions.• Neither the purchaser or a non-authorised third party have attempted to repair the unit.• Faults which occur as a result of incorrectly installed or leaking batteries are not covered by the guarantee.• Damage caused by frost is not covered by the warranty.
------------------------	--

This manufacturer's guarantee does not affect the user's existing warranty claims against the dealer/seller.

If you have any problems with your Water Timer, please contact our Customer Service or return the defective unit together with a short description of the problem directly to one of the GARDENA Service Centres listed on the back of this leaflet.



Product Liability

We expressly point out that, in accordance with the product liability law, we are not liable for any damage caused by our units if it is due to improper repair or if parts exchanged are not original GARDENA parts or parts approved by us, and, if the repairs were not carried out by a GARDENA Service Centre or an authorised specialist. The same applies to spare parts and accessories.



Produktansvar

Tillverkaren är inte ansvarig för skada som orsakats av produkten om skadan beror på att produkten har reparerats felaktigt eller om, vid reparation eller utbyte, andra än Original GARDENA reservdelar har använts. Samma sak gäller för kompletteringsdelar och tillbehör.



Productaansprakelijkheid

Wij wijzen er nadrukkelijk op, dat wij op grond van de wet aansprakelijkheid voor producten niet aansprakelijk zijn voor schade ontstaan door onze apparaten, indien deze door onvakkundige reparatie veroorzaakt zijn, of er bij het uitwisselen van onderdelen geen gebruik gemaakt werd van onze originele GARDENA onderdelen of door ons vrijgegeven onderdelen en de reparatie niet door de GARDENA technische dienst of de bevoegde vakman uitgevoerd werd. Ditzelfde geldt voor extra-onderdelen en accessoires.



Produkthaftung

Wir weisen ausdrücklich darauf hin, dass wir nach dem Produkthaftungsgesetz nicht für durch unsere Geräte hervorgerufene Schäden einzustehen haben, sofern diese durch unsachgemäße Reparatur verursacht oder bei einem Teileaustausch nicht unsere Original GARDENA Teile oder von uns freigegebene Teile verwendet werden und die Reparatur nicht vom GARDENA Service oder dem autorisierten Fachmann durchgeführt wird. Entsprechendes gilt für Ergänzungsteile und Zubehör.



Product Liability

Painotamme tuotevastuulain mukaisesti erityisesti sitä seikkaa, että emme vastaa elektroniselle vesiajastimelle aiheutuneista tai sen aiheuttamasta vahingoista, mikäli ne ovat aiheutuneet epäpätevän korjausken takia, mikäli elektroniseen vesiajastimeen on vaihdettu osia, jotka eivät ole alkuperäisiä GARDENA-osia tai meidän hyväksymiä osia tai mikäli korjausken on tehnyt jokin muu kuin GARDENA-huolto tai valtuutettu huolto. Sama koskee myös lisälaitteita ja -varusteita.



EU Certificate of Conformity

The undersigned GARDENA Manufacturing GmbH, Hans-Loreenser-Str. 40, D-89079 Ulm, hereby certifies that, when leaving our factory, the unit indicated below is in accordance with the harmonised EU guidelines, EU standards of safety and product specific standards. This certificate becomes void if the unit is modified without our approval.



EU Tillverkarintyg

Undertecknad firma GARDENA Manufacturing GmbH, Hans-Loreenser-Str. 40, D-89079 Ulm, intygar härmed att nedan nämnda produkter överensstämmer med EU:s direktiv, EU:s säkerhetsstandard och produktifikation. Detta intyg upphör att gälla om produkten ändras utan vårt tillstånd.



EU-overeenstemmingsverklaring

Ondergetekende GARDENA Manufacturing GmbH, Hans-Loreenser-Str. 40, D-89079 Ulm, bevestigt, dat het volgende genoemde apparaat in de door ons in de handel gebrachte uitvoering voldoet aan de eis van, en in overeenstemming is met de EU-richtlijnen, de EU-veiligheidsstandaard en de voor het product specifieke standaard. Bij een niet met ons afgestemde verandering aan het apparaat verliest deze verklaring haar geldigheid.



EU-Konformitätserklärung MaschinenVerordnung (9. GSGVO) / EMVG / Niedersp. RL

Der Unterzeichnete GARDENA Manufacturing GmbH, Hans-Loreenser-Str. 40, D-89079 Ulm, bestätigt, dass das nachfolgend bezeichnete Gerät in der von uns in Verkehr gebrachten Ausführung die Anforderungen der harmonisierten EU-Richtlinien, EU-Sicherheitsstandards und produktspezifischen Standards erfüllt. Bei einer nicht mit uns abgestimmten Änderung des Gerätes verliert diese Erklärung ihre Gültigkeit.



EU-Vakuustodistus

Allekirjoittanut, GARDENA Manufacturing GmbH, Hans-Loreenser-Str. 40, D-89079 Ulm, vahvistaa, että lähtiessään tehtaalta ko. tuote (tuotteet) on valmistettu EU-ohjeiden, EU-turvallisuus – ja tuote-erittelystandardien mukaisesti. Tämä vakuus mitätöity, mikäli tuotetta (tuotteita) muutetaan ilman hyväksyntäämme.

Description of the unit:	Water Timer electronic	Type:	Art. No.:
Produktbeskrivning:	Bevattnings timer electronic	Type:	Art.nr. :
Omschrijving van het apparaat:	Elektronische watertimer	Typ:	Art. nr.: 1825
Bezeichnung des Gerätes:	Bewässerungsuhr electronic	Typ:	Art.-Nr.:
EU-direktiivit:	Elektroninen kasteluajastin	Typpi:	art.-nro
EU directives:	2004/108/EC	Year of CE marking:	
EU direktiv:		CE-Märkningsår:	
EU-richtlijnen:		Installatiejaar van de CE-aanduiding:	2001
EU-Richtlinien:	93/68/EC	Anbringungsjahr der CE-Kennzeichnung:	
EU-direktiivit:		CE-hyväksyntä vuosi:	
Ulm, 20.07.2001	Authorised representative		
Ulm, 2001.07.20.	Behörig Firmatecknare		
Ulm, 20-07-2001	Gemachtigte		
Ulm, 20.07.2001	Der Bevollmächtigte		
Ulm, 20.07.2001	Tekn. osaston päällikkö		
Vice President			
Thomas Heinl			

Deutschland / Germany

GARDENA
Manufacturing GmbH
Service Center
Hans-Lorenser-Straße 40
D-89079 Ulm
Produktfragen:
(+49) 731 490-123
Reparaturen:
(+49) 731 490-290
service@gardena.com

Argentina

Argensem® S.A.
Calle Colonia Japonesa s/n
(1625) Loma Verde
Escobar, Buenos Aires
Phone: (+54) 34 88 49 40 40
info@argensem.com.ar

Australia

Nylex Consumer Products
50-70 Stanley Drive
Somerton, Victoria, 3062
Phone: (+61) 1800 658 276
spare.parts@nylex.com.au

Austria / Österreich

GARDENA
Österreich Ges.m.b.H.
Stettnerweg 11-15
2100 Korneuburg
Tel.: (+43) 22 62 7 45 45 36
kundendienst@gardena.at

Belgium

GARDENA Belgium NV/SA
Sterrebeekstraat 163
1930 Zaventem
Phone: (+32) 2 7 20 92 12
Mail: info@gardena.be

Brazil

Palash Comércio e
Importação Ltda.
Rua São João do Araguaia,
338 – Jardim Califórnia –
Barueri – SP - Brasil –
CEP 06409-060
Phone: (+55) 11 4198-9777
eduardo@palash.com.br

Bulgaria

Хускварна България ЕООД
1799 София
Бул. „Андрей Ляпчев“ № 72
Тел.: 02 / 8755148, 9753076
www.husqvarna.bg

Canada

GARDENA Canada Ltd.
100 Summerlea Road
Brampton, Ontario L6T 4X3
Phone: (+1) 905 792 93 30
info@gardenacanada.com

Chile

Antonio Martinic y Cia Ltda.
Cassillas 272
Centro de Cassillas
Santiago de Chile
Phone: (+56) 2 20 10 708
garfar_cl@yahoo.com

Costa Rica

Compania Exim
Euroiberoamericana S.A.
Los Colegios, Moravia,
200 metros al Sur del Colegio
Saint Francis - San José
Phone: (+506) 297 68 83
exim_euro@racsco.co.cr

Croatia

KLIS d.o.o.
Stanciceva 79, 10419 Vukovina
Phone: (+385) 1 622 7770
gardena@klis-trgovina.hr

Cyprus

FARMOKIPIKI LTD
P.O. Box 7098
74, Digeni Akrita Ave.
1641 Nicosia
Phone: (+357) 22 75 47 62
condam@spidernet.com.cy

Czech Republic

GARDENA spol. s r.o.
Tuřanka 115
627 00 Brno
Phone: (+420) 800 100 425
gardena@gardenabrn.cz

Denmark

GARDENA Norden AB
Salgsafdeling Danmark
Box 9003, S-200 39 Malmö
info@gardena.dk

Finland

Oy Husqvarna Ab
Lautatarhankatu 8b / PL 3
FI-00581 HELSINKI

France

GARDENA
PARIS NORD 2
69, rue de la Belle Etoile
BP 57080
ROISSY EN FRANCE
95948 ROISSY CDG CEDEX
Tél. (+33) 0826 101 455
service.consommateurs@
gardena.fr

Great Britain

Husqvarna UK Ltd
Preston Road
Aycliffe Industrial Park
Newton Aycliffe
County Durham
DL5 6UP
info.gardena@
husqvarna.co.uk

Greece

Agrokip
Psomadopoulos S.A.
Ifaistou 33A
Industrial Area Koropi
194 00 Athens Greece
V.A.T. EL093474846
Phone: (+30) 210 66 20 225
service@agrokip.gr
www.agrokip.gr

Hungary

GARDENA
Magyarország Kft.
Késmárk utca 22
1158 Budapest
Phone: (+36) 80 20 40 33
gardena@gardena.hu

Iceland

Ó. Johnson & Kaaber
Tunguhalsi 1
110 Reykjavik
ooj@ojk.is

Ireland

Michael McLoughlin & Sons
Hardware Limited
Long Mile Road
Dublin 12

Italy

GARDENA Italia S.p.A.
Via Donizetti 22
20020 Lainate (Mi)
Phone: (+39) 02.93.94.79.11
info@gardenaitalia.it

Japan

KAKUCHI Co. Ltd.
Sumitomo Realty &
Development Kojimachi
BLDG., 8F, 5-1 Nibannocyō,
Chiyoda-ku, Tokyo 102-0084
Phone: (+81) 33 264 4721
m_ishihara@kaku-ichi.co.jp

Luxembourg

Magasins Jules Neuberg
39, rue Jacques Stas
Luxembourg-Gasperich 2549
Case Postale No. 12
Luxembourg 2010
Phone: (+352) 40 14 01
api@neuberg.lu

Netherlands

GARDENA Nederland B.V.
Postbus 50176
1305 AD ALMERE
Phone: (+31) 36 521 00 00
info@gardena.nl

Neth. Antilles

Jonka Enterprises N.V.
Sta. Rosa Weg 196
P.O. Box 8200, Curaçao
Phone: (+599) 9 767 66 55
pgm@jonka.com

New Zealand

NYLEX New Zealand Limited
Building 2, 118 Savill Drive
Mangere, Auckland
Phone: (+64) 0800 22 00 88
spare.parts@nylex.com.au

Norway

GARDENA Norden AB
Salgskontor Norge
Kleverveien 6
1540 Vestby
info@gardena.no

Poland

GARDENA Polska Sp. z o.o.
Szymanów 9 d
05-532 Baniacha
Phone: (+48) 22 727 56 90
gardena@gardena.pl

Portugal

GARDENA Portugal Lda.
Sintra Business Park
Edifício 1, Fracção 0-G
2710-089 Sintra
Phone: (+351) 21 922 85 30
info@gardena.pt

Romania

MADEX INTERNATIONAL SRL
Soseaua Odaii 117-123,
Sector 1,
Bucureşti, RO 013603
Phone: (+40) 21 352 76 03
madex@ines.ro

Russia / Россия

ООО ГАРДЕНА РУС
123007, г. Москва
Хорошевское шоссе, д. 32А
Тел.: (+7) 495 540 99 57
info@gardena-rus.ru

Singapore

Hy - Ray PRIVATE LIMITED
40 Jalan Pemimpin
#02-08 Tat Ann Building
Singapore 577185
Phone: (+65) 6253 2277
hyray@singnet.com.sg

Slovak Republic

GARDENA Slovensko, s.r.o.
Panónska cesta 17
851 04 Bratislava
Phone: (+421) 263 453 722
info@gardena.sk

Slovenia

GARDENA d.o.o.
Brodišče 15
1236 Trzin
Phone: (+386) 1 580 93 32
servis@gardena.si

South Africa

GARDENA South Africa (Pty) Ltd.
P.O. Box 11534
Vorna Valley 1686
Phone: (+27) 11 315 02 23
sales@gardena.co.za

Spain

GARDENA IBÉRICA S.L.U.
C/ Basauri, nº 6, La Florida
28023 Madrid
Phone: (+34) 91 708 05 00
atencioncliente@gardena.es

Sweden

GARDENA Norden AB
Försäljningskontor Sverige
Box 9003
200 39 Malmö
info@gardena.se

Switzerland / Schweiz

GARDENA (Schweiz) AG
Bitziberg 1
8184 Bachenbülach
Phone: (+41) 848 800 464
info@gardena.ch

Turkey

GARDENA / Dost Dış Ticaret
Mümessilik A.Ş. Sanayi
Cd. Adil Sokak No. 1
Kartal - İstanbul
Phone: (+90) 216 38 93 939
info@gardena-dost.com.tr

Ukraine / Украина

ALTSEST JSC
4 Petropavlivska Street
Petropavlivska, Borschahivka
Town, Kyivo Svyatoshyn Region
08130, Ukraine
Phone: (+380) 44 459 57 03
upyr@altsest.kiev.ua

USA

Melnor Inc.
3085 Shawnee Drive
Winchester, VA 22604
Phone: (+1) 540 722-9080
service_us@melnor.com

1825-28.960.05/0208

© GARDENA
Manufacturing GmbH
D-89070 Ulm
<http://www.gardena.com>