

Art. 884

Art. 885
Rückenspritzgerät 12 l
mit Manometer

D Betriebsanleitung
Rückenspritzgerät 12 l

GB Operating Instructions
Backpack Sprayer 12 l

F Mode d'emploi
Pulvérisateur à dos 12 l

NL Instructies voor gebruik
Rugsproeier 12 l

S Bruksanvisning
Tryckspruta 12 l

I Istruzioni per l'uso
Irroratore a spalla 12 l

E Manual de instrucciones
Pulverizador de mochila de 12 l

P Instruções de utilização
Pulverizador de pressão portátil 12 l

DK Brugsanvisning
Rygspøjtapparat 12 l

GARDENA Backpack Sprayer 12 l

Welcome to the garden of GARDENA...



Translation of the original instructions from German. Please read these operating instructions carefully and observe the notes given. Use these operating instructions to familiarise yourself with the Backpack Sprayer, its proper use and the notes on safety.



For safety reasons, children and young people under 16 as well as anyone not familiar with these operating instructions may not use the Backpack Sprayer.

→ Please keep these operating instructions in a safe place.

Contents

1. Where to Use Your GARDENA Backpack Sprayer	9
2. For Your Safety	10
3. Assembly	10
4. Operation	11
5. Maintenance	12
6. Troubleshooting	13
7. Storage	14
8. Accessories	14
9. Technical Data	14
10. Service / Warranty	14

1. Where to Use Your GARDENA Backpack Sprayer

Intended purpose

The GARDENA Backpack Sprayer is intended for distributing solvent-free liquid pesticides ¹⁾, herbicides ¹⁾, fertilisers ¹⁾, window cleaners ¹⁾, and car wax ¹⁾ in domestic gardens and allotments.

It must not be used in public places, parks, sport arenas, or in agriculture or forestry.

Compliance with the operating instructions provided by the manufacturer is a prerequisite for using the Backpack Sprayer correctly.

1) In accordance with the laws governing the use of pesticides and detergents, only authorised substances may be used (authorised specialist shop).

Caution!



Due to the risk of physical injury, the GARDENA Backpack Sprayer must not be used for spraying substances other than those specified by GARDENA. Do not use your Backpack Sprayer for spraying acids, disinfectants or water-proofing agents.

We recommend that you only use pesticides approved by the BBA (German Federal Biological Research Centre for Agriculture and Forestry). To our knowledge at the time of manufacturing the Backpack Sprayer, the pesticides approved by the BBA will not damage the materials used to construct the Backpack Sprayer.

When spraying insecticides, herbicides and fungicides or other liquid plant protection products, you must comply with all special precautionary measures specified by the manufacturer of the product you are using.

2. For Your Safety

Danger of physical injuries:



- Never open the Backpack Sprayer or unscrew the sprayer handle when the Backpack Sprayer is still pressurised.
- Always release the pressure completely before opening the Backpack Sprayer by pressing the pushbutton of the sprayer handle.

Cleaning:



- After using your Backpack Sprayer, always release the pressure then empty, carefully clean and rinse the tank in clean water. Leave the Backpack Sprayer open and allow it to dry (see 5. Maintenance).
- Always clean the Backpack Sprayer before using a different product to avoid chemical reactions.
- To prevent reactions with the products you are using, never use aggressive cleaning agents that contain solvent or petrol.

Operation:

- Check the Backpack Sprayer for possible damages before each use.

Never leave your Backpack Sprayer unattended or for long periods when full and pressurised.

- Keep the Backpack Sprayer out of the reach of children.



You are responsible for the safety of others.

- Keep your Backpack Sprayer away from heat sources and hot environments.



The tank cap is equipped with a pressure relief valve. This valve draws in air to equalise the pressure inside the tank and prevents liquid leaking out if the Backpack Sprayer falls over.

3. Assembly

Fitting the carrying strap:

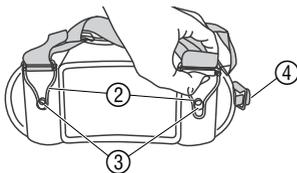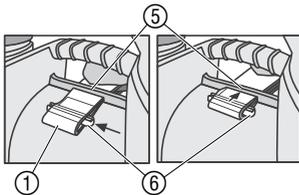


1. Pull each unstitched end of the carrying strap ① approx. 2 to 3 cm through the metal buckles ②.
2. Pull the carrying strap ① through the opening ⑤ under the carrying handle so that the strap adjuster ⑦ is at the front.
3. Push the strap lock ⑥ sideways into the carrying strap ①.
4. Pull back the carrying strap ① until the strap lock ⑥ prevents the carrying strap from sliding out.
5. Pull the metal buckles ② onto the lugs ③ on the bottom of the Backpack Sprayer until you hear them click into place.

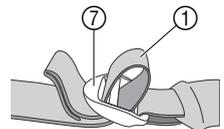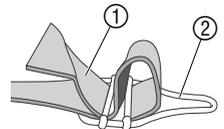


If you are right-handed the pump lever ④ should be on the left-hand side so that you can hold the spray lance in your right hand.

 Attaching the sprayer head:




Attaching the sprayer head to the handle:

 1. Push the sprayer head ⑨ all the way into the sprayer handle ⑪.
2. Push the sprayer lock ⑩ all the way into the sprayer handle ⑪.
3. Screw the sprayer head ⑨ onto the sprayer handle ⑪ by hand using the union nut ⑧ (do not use pliers).



Attaching the sprayer handle to the hose:

4. Push the union nut ⑫ onto the hose ⑬.
5. Push the filter ⑭ into the sprayer handle ⑪.
6. Push the hose ⑬ onto the filter ⑭.
7. Screw the hose ⑬ onto the sprayer handle ⑪ by hand using the union nut ⑫ (do not use pliers).

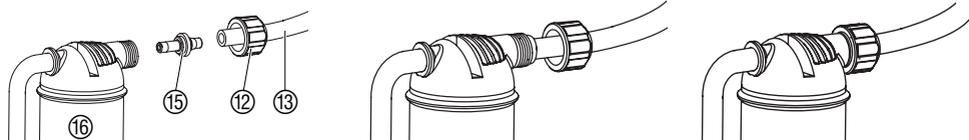


Attaching the hose to the pump:

8. Push the union nut ⑫ onto the hose ⑬.
9. Push the connector ⑮ into the pump ⑯.
10. Push the hose ⑬ onto the connector ⑮.
11. Screw the hose ⑬ onto the pump ⑯ by hand using the union nut ⑫ (do not use pliers).

4. Operation

Filling the tank:

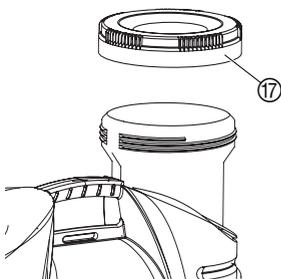


1. Thoroughly stir the product you are going to use.
2. Unscrew the tank cap ⑰.
3. Pour in the product up to the highest mark (12 litres).
Always comply with the precautionary measures and correct dosage specified by the product manufacturer.
4. Fit the tank cap ⑰ and screw tight by hand (do not use pliers).


Fertilisation with GARDENA Universal Liquid Fertiliser Art. 8303 for outdoor use:

- For sheet fertilisation and young plants:
1/2 cover cap on approx. 5 l spraying liquid
- For root fertilisation:
1 cover cap on approx. 5 l spraying liquid

Spraying:

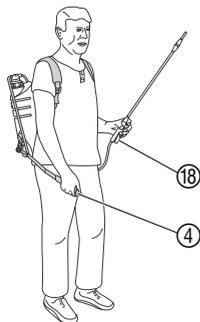


1. Strap the Backpack Sprayer to your back.
2. Adjust the length of the carrying straps ① as required using the strap adjusters ⑦.

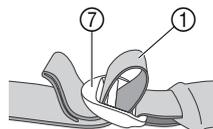

The stitched end of the carrying strap is threaded through the strap adjusters ⑦ at the factory.


3. Press down the pump lever ④ repeatedly (approx. 7-9 times) until it becomes more difficult to press the lever and you feel resistance.
4. Press the button ⑱ on the sprayer handle.
The Backpack Sprayer starts spraying.
5. Release the button ⑱ on the sprayer handle.
The Backpack Sprayer stops spraying.

 Adjusting the spray lance:



1. Loosen the union nut ⑲.
2. Pull out the spray lance ⑳ to the desired length.
3. Tighten the union nut ⑲ again.

 Adjusting the spray jet:




You can adjust the spray jet from full jet (nozzle open) to a fine mist (nozzle closed).

→ Open or close the nozzle ⑳ to adjust the spray jet as required.

5. Maintenance

Cleaning the Backpack Sprayer:

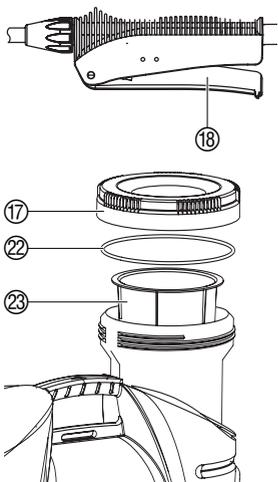

You must clean your Backpack Sprayer after each use.

1. Press the button ⑱ on the sprayer handle and release the pressure through the spray lance.
2. Unscrew tank cap ⑰. If the outside of the cap is dirty, thoroughly clean the area around the thread and thread O-ring ⑳.
3. Clean the inlet filter ㉓ and tank cap ⑰ in clean water.
4. Empty the tank and fill with clean water (with detergent added to the water if necessary).
5. Spray the water out of the Backpack Sprayer until the tank is empty.
This cleans the nozzle and valves.
6. Leave the Backpack Sprayer open and allow it to dry.

Do not dispose of residual products by pouring them into the sewerage system. Please contact your local disposal centre and ask about proper disposal of the products you have used.

Thorough inspection:

We recommend that you have your Backpack Sprayer thoroughly inspected (preferably at a GARDENA Service Centre) after using it for 5 years.


6. Troubleshooting

Clean the filter in the sprayer handle:



1. Unscrew the union nut ⑫ and pull the hose ⑬ with filter ⑭ out of the sprayer handle ⑪.
2. Rinse the filter ⑭ under running water.
3. Reattach the sprayer handle (see 3. Assembly “Attaching the sprayer handle to the hose”).

Cleaning the pump:

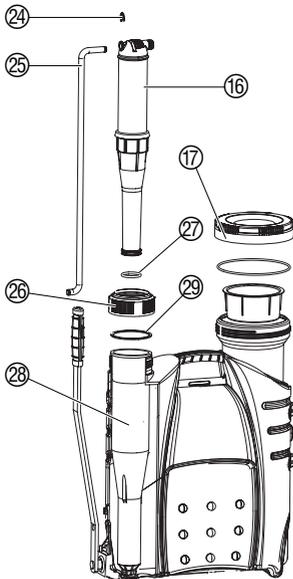

If the pump does not provide pressure after cleaning your Backpack Sprayer you must also clean the pump.

1. Push out the locking ring ⑳ (using a screwdriver, for example) and pull the joint rod ㉕ out of the pump ⑩.
2. Unscrew the union ring ㉖ and pull out the pump ⑩.
3. Inspect the pump O-ring ㉗ and install a new O-ring if necessary.
4. Pull out the inner part of the pump ㉘ and the gasket ㉙.
5. Clean all pump parts and gaskets with water (and detergent).
6. Reassemble the pump in the reverse order.

When assembling the pump ensure that the pump gaskets are seated properly after installation and are not squashed.

Fault	Possible Cause	Remedy
Pump does not provide pressure.	Valve in the tank cap blocked.	→ Clean the tank cap.
	Hose connections at the pump and sprayer handle are leaking.	→ Tighten the hose connections at the pump and sprayer handle.
	Pump O-ring ㉗ leaking at the pump.	→ Clean the pump and check the pump O-ring ㉗ at the pump. Install a new O-ring if necessary.
Backpack Sprayer does not spray although there is sufficient pressure or sprays with poor spray jet.	Nozzle blocked.	→ Clean the nozzle.
	Filter ⑭ in sprayer handle blocked.	→ Clean the filter in the sprayer handle.
Tank is difficult to open.	Pressure in tank too low because the valve in the tank cap ⑰ is blocked.	→ Clean the tank cap ⑰.

If you have any other problems with your Backpack Sprayer please contact GARDENA Customer Service.

7. Storage

Storing your Backpack Sprayer:

Always keep your Backpack Sprayer out of the reach of children.

→ Before storing, loosen the tank cap and clean your Backpack Sprayer (see **5. Maintenance**). Store your Backpack Sprayer away from frost.

8. Accessories

GARDENA Spray Cone	Prevents spray mist from blowing away.	Art. No. 894
GARDENA Adaptor		Art. No. 884-00.610.00
GARDENA Gasket Kit	For replacing all gaskets.	Art. No. 884-00.901.00
GARDENA Viton Gasket Kit	For spraying extremely aggressive substances.	Art. No. 884-00.902.00

Accessories can be purchased from GARDENA Service.

9. Technical data

Maximum capacity	12 l
Minimum / maximum spray lance length	60 / 100 cm
Hose length	125 cm
Permissible operating pressure	3 bar
Permissible operating temperature	35 °C

10. Service / Warranty

GARDENA guarantees this product for 2 years (from date of purchase). This guarantee covers all serious defects of the unit that can be proved to be material or manufacturing faults. Under warranty we will either replace the unit or repair it free of charge if the following conditions apply:

- The unit must have been handled properly and in keeping with the requirements of the operating instructions.
- Neither the purchaser or a non-authorized third party have attempted to repair the unit.

The pump gasket and pump lever bearing are wearing parts and are therefore not covered by the warranty.

This manufacturer's guarantee does not affect the user's existing warranty claims against the dealer/seller.

If you have any problems with your Backpack Sprayer, please contact our Customer Service or return the defective unit together with a short description of the problem directly to one of the GARDENA Service Centres listed on the back of this leaflet.

Product Liability

We expressly point out that, in accordance with the product liability law, we are not liable for any damage caused by our units if it is due to improper repair or if parts exchanged are not original GARDENA parts or parts approved by us, and, if the repairs were not carried out by a GARDENA Service Centre or an authorised specialist. The same applies to spare parts and accessories.

Deutschland / Germany

GARDENA
Manufacturing GmbH
Central Service
Hans-Lorenser-Straße 40
D-89079 Ulm
Produktfragen:
(+49) 731 490-123
Reparaturen:
(+49) 731 490-290
service@gardena.com

Argentina

Husqvarna Argentina S.A.
Vera 745
(C1414AOO) Buenos Aires
Phone: (+54) 11 4858-5000
diego.poggi@ar.husqvarna.com

Australia

Husqvarna Australia Pty. Ltd.
Locked Bag 18
Gosford NSW 2250
Phone: (+61) (0) 2 4372 1500
customer.service@
husqvarna.com.au

Austria / Österreich

Husqvarna Austria GmbH
Consumer Products
Industriezeile 36
4010 Linz
Tel.: (+43) 732 77 01 01 - 90
consumer.service@
husqvarna.at

Belgium

GARDENA Belgium NV/SA
Sterrebeekstraat 163
1930 Zaventem
Phone: (+32) 2 720 92 12
Mail: info@gardena.be

Brazil

Palash Comércio e
Importação Ltda.
Rua São João do Araguaia, 338
- Jardim Califórnia -
Barueri - SP - Brasil -
CEP 06409-060
Phone: (+55) 11 4198-9777
eduardo@palash.com.br

Bulgaria

Хускварна България ЕООД
1799 София
Бул. „Андрей Ляпчев“ № 72
Тел.: (+359) 2 80 99 424
www.husqvarna.bg

Canada

GARDENA Canada Ltd.
100 Summerlea Road
Brampton, Ontario L6T 4X3
Phone: (+1) 905 792 93 30
info@gardenacanada.com

Chile

Antonio Martinic y Cia Ltda.
Cassillas 272
Centro de Cassillas
Santiago de Chile
Phone: (+56) 2 20 10 708
garfar_cl@yahoo.com

Costa Rica

Compania Exim
Euroberoamericana S.A.
Los Colegios, Moravia,
200 metros al Sur del Colegio
Saint Francis - San José
Phone: (+506) 297 68 83
exim_euro@racsa.co.cr

Croatia

KLIS d.o.o.
Stanciceva 79
10419 Vukovina
Phone: (+385) 1 622 777 0
gardena@klis-trgovina.hr

Cyprus

FARMOKIPIKI LTD
P.O. Box 7098
74, Digeni Akritas Ave.
1641 Nicosia
Phone: (+357) 22 75 47 62
condam@spidernet.com.cy

Czech Republic

GARDENA spol. s r.o.
Tuřanka 115
627 00 Brno
Phone: (+420) 548 217 777
gardena@gardenabrno.cz

Denmark

GARDENA
Husqvarna Consumer Outdoor
Products
Salgsafdelning Danmark
Box 9003
S-200 39 Malmö
info@gardena.dk

Estonia

Husqvarna Eesti OÜ
Consumer Outdoor Products
Kesk tee 10, Aaviku küla
Rae vald, Harju maakond
75305
kontakt.etj@husqvarna.ee

Finland

Oy Husqvarna Ab
Consumer Outdoor Products
Lautatarhankatu 8 B / PL 3
00581 HELSINKI
info@gardena.fi

France

GARDENA France
Immeuble Exposial
9 - 11 allée des Pierres Mayettes
ZAC des Barbannières, B.P. 99
- F - 92232 GENNEVILLIERS
cedex
Tél. (+33) 01 40 85 30 40
service.consommateurs@
gardena.fr

Great Britain

Husqvarna UK Ltd
Preston Road
Aycliffe Industrial Park
Newton Aycliffe
County Durham
DL5 6UP
info.gardena@
husqvarna.co.uk

Greece

HUSQVARNA GREECE S.A.
Branch of Koropi
Ilfestou 33A
Industrial Area Koropi
194 00 Athens - Greece
V.A.T. EL094094640
Phone: (+30) 210 66 20 225
info@husqvarna-consumer.gr

Hungary

Husqvarna
Magyarország Kft.
Ezred u. 1 - 3
1044 Budapest
Phone: (+36) 80 20 40 33
gardena@gardena.hu

Iceland

Ó. Johnson & Kaaber
Tunguhalsi 1
110 Reykjavik
ooj@ojk.is

Ireland

Michael McLoughlin & Sons
Hardware Limited
Long Mile Road
Dublin 12

Italy

GARDENA Italia S.p.A.
Via Donizetti 22
20020 Lainate (Mi)
Phone: (+39) 02.93.94.79.1
info@gardenaitalia.it

Japan

KAKUICHI Co. Ltd.
Sumitomo Realty &
Development Kojimachi
BLDG., 8F, 5-1 Nibanbanyo,
Chiyoda-ku, Tokyo 102-0084
Phone: (+81) 33 264 4721
m_ishihara@kaku-ichi.co.jp

Latvia

SIA „Husqvarna Latvija“
Consumer Outdoor Products
Bakūžu iela 6, Rīga, LV-1024
info@husqvarna.lv

Lithuania

UAB Husqvarna Lietuva
Consumer Outdoor Products
Atleities pl. 77C
LT-52104 Kaunas
centras@husqvarna.lt

Luxembourg

Magasins Jules Neuberg
39, rue Jacques Stas
Luxembourg-Gasperich 2549
Case Postale No. 12
Luxembourg 2010
Phone: (+352) 40 14 01
api@neuberg.lu

Netherlands

GARDENA Nederland B.V.
Postbus 50176
1305 AD ALMERE
Phone: (+31) 36 521 00 00
info@gardena.nl

Neth. Antilles

Jonka Enterprises N.V.
Sta. Rosa Weg 196
P.O. Box 8200, Curaçao
Phone: (+599) 9 767 66 55
pgm@jonka.com

New Zealand

Husqvarna New Zealand Ltd.
PO Box 76437
Manukau City 2241
Phone: (+64) (09) 92024 10

Norway

GARDENA
Husqvarna Consumer Outdoor
Products
Salgskontor Norge
Kleiverveien 6
1540 Vestby
info@gardena.no

Poland

Husqvarna Poland Spółka z o.o.
Oddział w Szymanowie
Szymanów 9 d
05-532 Baniocha
Phone: (+48) 22 727 56 90
gardena@gardena.pl

Portugal

GARDENA Portugal Lda.
Sintra Business Park
Edifício 1, Fracção 0-G
2710-089 Sintra
Phone: (+351) 21 922 85 30
info@gardena.pt

Romania

MADEX INTERNATIONAL SRL
Soseaua Odaii 117-123,
Sector 1,
București, RO 013603
Phone: (+40) 21 352 76 03
madex@ines.ro

Russia

ООО ГАРДЕНА PVC
123007, г. Москва
Хорошевское шоссе, д. 32А
Тел.: (+7) 495 380 31 92
info@gardena-rus.ru

Singapore

Hy - Ray PRIVATE LIMITED
40 Jalan Pemimpin
#02-08 Tat Ann Building
Singapore 577185
Phone: (+65) 6253 2277
shiyang@hyray.com.sg

Slovak Republic

GARDENA spol. s r.o.
Tuřanka 115
627 00 Brno
Phone: (+420) 548 217 777
gardena@gardenabrno.cz

Slovenia

GARDENA d.o.o.
Brodšče 15
1236 Trzin
Phone: (+386) 1 580 93 32
servis@gardena.si

South Africa

GARDENA
South Africa (Pty.) Ltd.
P.O. Box 11534
Vorna Valley 1686
Phone: (+27) 11 315 02 23
sales@gardena.co.za

Spain

GARDENA IBÉRICA S.L.U.
C/ Basauri, nº 6
La Florida
28023 Madrid
Phone: (+34) 91 708 05 00
atencioncliente@gardena.es

Sweden

GARDENA
Husqvarna Consumer Outdoor
Products
Försäljningskontor Sverige
Box 9003
200 39 Malmö
info@gardena.se

Switzerland / Schweiz

Husqvarna Schweiz AG
Consumer Products
Industriestrasse 10
5506 Mägenwil
Phone: (+41) (0) 848 800 464
info@gardena.ch

Turkey

GARDENA / Dost Diş Ticaret
Müessesilik A.Ş. Sanayi
Çad. Adil Sokak No. 1
Kartal - Istanbul
Phone: (+90) 216 38 93 939
info@gardena-dost.com.tr

Ukraine / Україна

ТОВ «ГАРДЕНА УКРАЇНА»
Васильківська, 34, 204-Г
03022, Київ
Тел. (+38 044) 498 39 02
info@gardena.ua

884-20.960.06 / 0608

© GARDENA
Manufacturing GmbH
D-89070 Ulm
http://www.gardena.com