

T 1030 D  
Art. 1825-28

**GB** **Operating Instructions**  
Water Timer electronic

**FIN** **Käyttöohje**  
Elektroninen kasteluajastin

**S** **Bruksanvisning**  
Bevatningstimer electronic

**DK** **Brugsanvisning**  
Vandingsur electronic

**N** **Bruksanvisning**  
Vanningstimer electronic

**EST** **Kasutusjuhend**  
Kastmistaimer electronic

**LT** **Ekspluatavimo instrukcija**  
Elektroninis laistymo laikmatis

**LV** **Lietošanas instrukcija**  
Elektroniskais laistīšanas taimeris

# GARDENA Water Timer electronic T 1030 D

*Welcome to the Garden of GARDENA...*



Translation of the original instructions from German.

Please read these operating instructions carefully and observe the notes given. Use these instructions to familiarise yourself with the Water Timer electronic and its proper use as well as the notes on safety.



For safety reasons, children and young people under 16 as well as anyone who is not familiar with these operating instructions may not use the Water Timer.

Persons with reduced physical or mental abilities may use the product only if they are supervised or instructed by a responsible person.

→ Please keep these operating instructions in a safe place.

## **Contents**

1. Where to Use Your GARDENA Water Timer .....	3
2. Safety Instructions .....	3
3. Function .....	5
4. Putting Your Water Timer into Operation .....	6
5. Operating Your Water Timer .....	8
6. Putting Your Water Timer Out of Operation .....	13
7. Trouble-Shooting .....	14
8. Technical Data .....	15
9. Service / Warranty .....	16

# 1. Where to Use Your GARDENA Water Timer

---

## *Intended use*

The GARDENA Water Timer is intended for private use in domestic and hobby gardens, exclusively for outdoor use, to control sprinklers and watering systems.

## *Please note*



**The GARDENA Water Timer must not be used for industrial purposes or in conjunction with chemicals, foodstuffs, easily flammable and explosive materials.**

## 2. Safety Instructions

---

### *Use:*

### **Warning!**

→ **Only use the Water Timer outdoors.**

The water timer is not approved for indoor use.

The minimum operating pressure is 1 bar, the maximum operating pressure is 12 bar. The minimum flow rate is 20 l/h.

→ Check the filter in the sleeve nut regularly and clean if necessary.

→ Do not pull the hose connected to the Water Timer and avoid tensile strain.

**Battery:**

**For functional safety reasons, only use a 9 V alkali-manganese (alkaline) battery type IEC 6LR61.**

**The Water Timer will only run for approx. 1 year if the new alkaline battery has a nominal voltage of at least 9 V.**

→ Check the battery before you buy it.

**Putting your Water Timer into operation:**

To prevent water entering the battery compartment, the Water Timer must only be mounted in a perpendicular position with the sleeve nut pointing upwards.

After you have selected the watering program, the Water Timer opens at the selected starting time. To avoid getting wet when operating the Water Timer, connect the hose or turn off the tap before selecting the program. Alternatively, the control unit can be removed for programming.


**Water flow:**

The max. temperature for the water is 40 °C.

→ Only use clear fresh water.


### 3. Function

#### Control knob and OK button:

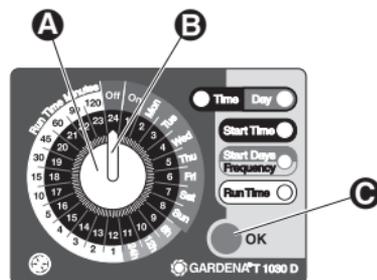

- A** Control knob
- B** Control knob pointer
- C** OK button

#### Battery status display:

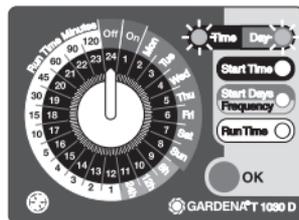

The GARDENA Water Timer electronic allows you to set different watering cycles for different watering times independent of whether you are using a sprinkler, a sprinkler system installation or drip-head watering system to irrigate your garden.

Your Water Timer electronic will water your garden completely automatically according to the program you choose. You can set the timer to water your garden early in the morning or late at night when water evaporates the least, or while you are away on holiday.

You simply program the time (to the nearest hour), day, watering starting time / cycle / days and duration by turning the pointer **B** of the control knob **A** to the correct time and pressing the **OK button C**.

The Water Timer opens at the starting time you have selected.

The 2 LEDs **Time** and **Day** flash to indicate that the battery is flat.



→ Replace the battery (see 4. Putting Your Water Timer into Operation “Inserting the Battery”).

The functional safety of the water timer depends on the capability of the battery.


If you change the battery the program is not saved. You must reprogram the Water Timer (see 5. Operation).

## 4. Putting Your Water Timer into Operation

### Inserting the battery:

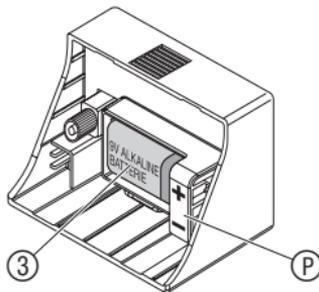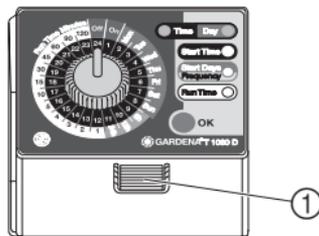

1. Press the release button ① and remove the control unit ② from the housing of the Water Timer.
2. Insert the battery ③ in the battery compartment. Pay attention to the polarity P (+/- markings).  
*The Time LED flashes.*
3. Re-attach the control unit ② to the housing.

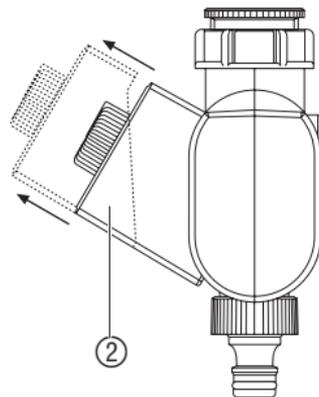


Make sure you exchange the battery at the right time to prevent the Water Timer failing due to a low battery when you are away for longer periods of time.

Make sure that the time the battery has been in operation and the time you are planning to be away does not add up to more than a year.

Even if the battery is almost empty, the Water Timer ensures that an open valve is always closed since less energy is required to close the valve than to open it.


### Connecting your Water Timer:

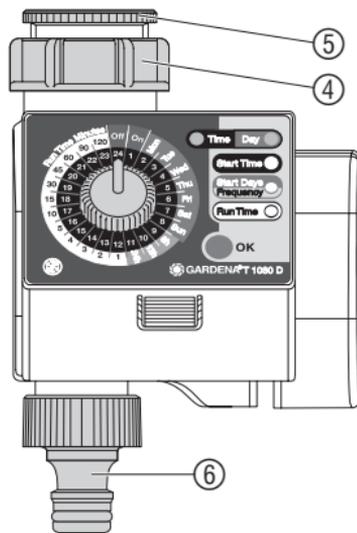

The Water Timer is fitted with a sleeve nut ④ for taps with G 1" (33.3 mm) thread. The adaptor supplied ⑤ allows the Water Timer to be connected to taps with a G ¾" (26.5 mm) thread.

1. **For tap with a G ¾" (26.5 mm) thread:** Screw adaptor ⑤ on to the tap manually (do not use pliers).
2. Screw sleeve nut ④ of the Water Timer on to the adaptor thread by hand (do not use pliers).
3. Screw tap connector ⑥ on to the Water Timer.
4. Open the tap.

### Installing the anti-theft protection (optional):

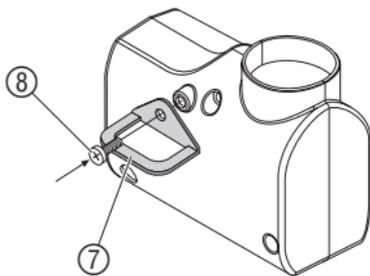

To protect your Water Timer against theft, the **GARDENA Anti-Theft Protection Art. No. 1815-00.791.00** is available from the GARDENA Service.

1. Fasten the bracket (7) to the back of the Water Timer using the screw (8).
2. The bracket can be used to attach a chain, for example.

The screw cannot be loosened once it has been screwed in.

## 5. Operation


### Setting the watering program:

The Water Timer control unit (2) can be removed. This allows you to set the watering program somewhere other than where the Water Timer is to be used.

#### Notes to program the water timer:

- The current time is entered to the nearest hour. We recommend that you select the time to the full hour.
- Confirm the selected point of the program within 120 seconds by pressing the **OK button**, otherwise the program has not been stored.

1.

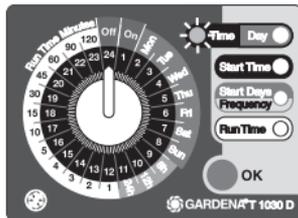


1. Turn the control knob to **Off** and confirm by pressing the **OK button**.

*The program stored in the memory is overwritten.*

*The Time LED flashes.*

2.

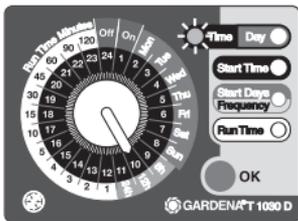


### Setting the current time:

2. Set the current time on the **inner black scale** by turning the control knob and confirm the time you have selected by pressing the **OK button** (e.g.: **10:00 am**).

*The Time LED lights up for half a second and the current time is entered to the nearest hour.*

*The Day LED flashes.*

3.

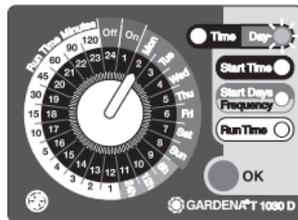


### Setting the current day:

3. Set the current day on the **outer grey scale** by turning the control knob and confirm the day you have selected by pressing the **OK button** (e.g.: **Mon Monday**).

*The Day LED lights up for half a second and the current day has been stored.*

*The Start Time LED flashes.*

4.

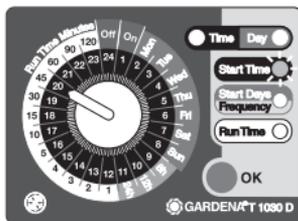


### Setting the watering starting time :

- Set the watering starting time on the **inner black scale** by turning the control knob and confirm the time you have selected by pressing the **OK button** (e.g.: **20:00**).

*The **Start Time LED** lights up for half a second and the watering starting time has been stored.*

*The **Start Days LED** flashes.*

5.

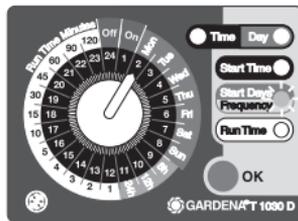

### Setting the watering days :

If you would like to water your garden every day, skip this point and continue with “Setting the Watering Cycle”.


- Set the watering day on the **outer grey scale** using the control knob and confirm your selection by pressing the **OK button** (e.g.: **Mon Monday**).

*The **Start Days LED** lights up for half a second and the watering day has been stored.*

Repeat the process for all desired days.

*The **Frequency LED** flashes.*

6.

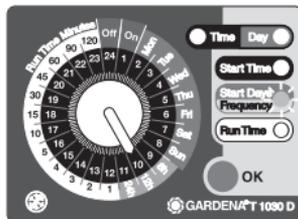


### Setting the watering cycle:

- Set the watering cycle on the **outer blue scale** using the control knob and confirm your selection by pressing the **OK button** (e.g.: 12 hour cycle).

*The **Frequency** LED lights up for half a second and the watering cycle has been stored.*

*The **Run Time** LED flashes.*

7.

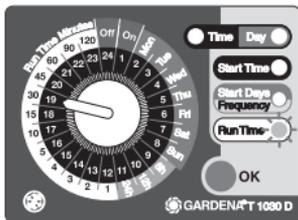


### Setting the watering time:

- Set the watering time on the **outer white scale** (Run Time Minutes) using the control knob and confirm your selection by pressing the **OK button** (e.g.: 30 minutes).

*The **Run Time** LED lights up for half a second and the watering time has been stored.*

**The program you have selected is now active.**

## Changing the watering time:

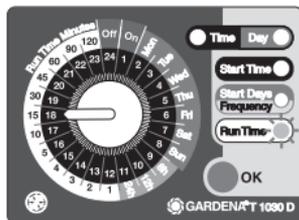


On hot or cooler days you can change the watering time.  
**The program you have set remains unchanged.**

- Select the new watering time on the **outer white scale** (Run Time Minutes) by turning the control knob and confirm your selection by pressing the **OK button** (e.g.: **15 minutes**).

*The Run Time LED flashes for a half second and the watering time is changed.*

**The program with the new watering time is now active.**

## Manual watering (On):

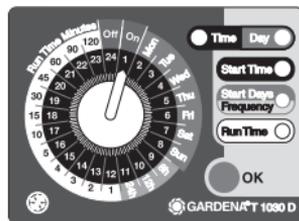

On especially hot days the programmed watering cycle is sometimes insufficient. You can then turn on your irrigation system manually. **The program you have set remains unchanged.**

- Turn the control knob to **On**.

*The valve opens for 30 minutes independent of the set program.*

To activate the set program again, you must reset the watering time to the time originally set.

### Bad-weather function (Off):



On rainy days the programmed watering cycle is often unnecessary. You can therefore stop the programmed watering cycle (bad-weather function). **The program you have set remains unchanged.**

→ Turn the control knob to **Off**.

*The valve closes and remains closed, independent of the watering cycle you have set.*

To activate the set program again, you must reset the watering time to the time originally set.

## 6. Putting Your Water Timer Out of Operation

### Storage/Wintering:

→ Store your Water Timer in a dry place away from frost before the first frost sets in.

### Disposing of flat batteries:

→ Please return flat batteries to a GARDENA dealer or dispose of them properly at your nearest recycling centre.

### Only dispose of batteries when they are flat.

### Disposal:

(in accordance with  
RL2002/96/EC)



The product must not be added to normal household waste. It must be disposed of in line with local environmental regulations.

→ Important: Make sure that the unit is disposed of via your municipal recycling collection centre.

## 7. Trouble-Shooting

Fault	Possible cause	Remedy
<b>Not able to open the Water Timer manually using On/Off</b>	Battery capacity too low (2 LEDs flash).	→ Insert a new alkaline battery.
	Tap turned off.	→ Turn on tap.
<b>Watering not initiated</b>	Control knob turned to Frequency or On/Off.	→ Turn the control knob to "Run Time Minutes".
	Battery capacity too low (2 LEDs flash).	→ Insert a new alkaline battery.
	Data input/changes made while the program was starting or immediately before.	→ Input data or make changes before or after the starting times you have chosen.
	Tap turned off.	→ Turn on tap.
<b>Battery flat after working for a short time</b>	The battery you inserted is not an alkaline battery.	→ Use an alkaline battery.



**In the event of other faults please contact GARDENA Service.**  
**Repairs should only be carried out by GARDENA service centres or dealers authorised by GARDENA.**

## 8. Technical Data

---

<b>Min./max. operating pressure:</b>	1 bar / 12 bar
<b>Minimum flow rate:</b>	20 l/h
<b>Flow medium:</b>	clean fresh water
<b>Max. water temperature:</b>	40 °C
<b>Number of program-controlled watering cycles per day:</b>	every 8, 12, 24 hours
<b>Watering cycles per week:</b>	each day can be selected / not selected
<b>Watering time per program:</b>	1, 2, 3, 4, 5, 10, 15, 30, 45, 60, 90 or 120 minutes
<b>Battery:</b>	1 x 9 V alkali-manganese (alkaline) type IEC 6LR61
<b>Running time:</b>	Approx. 1 year

## 9. Service / Warranty

---

GARDENA guarantees this product for 2 years (from date of purchase). This guarantee covers all serious defects of the unit that can be proved to be material or manufacturing faults.

Under warranty we will either replace the unit or repair it free of charge if the following conditions apply:

- The unit must have been handled properly and in keeping with the requirements of the operating instructions.
- Neither the purchaser or a non-authorized third party have attempted to repair the unit.
- Faults which occur as a result of incorrectly installed or leaking batteries are not covered by the guarantee.
- Damage caused by frost is not covered by the warranty.

This manufacturer's guarantee does not affect the user's existing warranty claims against the dealer/seller.

If you have any problems with your Water Timer, please contact our Customer Service or return the defective unit together with a short description of the problem directly to one of the GARDENA Service Centres listed on the back of this leaflet.

### **GB Product Liability**

We expressly point out that, in accordance with the product liability law, we are not liable for any damage caused by our units if it is due to improper repair or if parts exchanged are not original GARDENA parts or parts approved by us, and, if the repairs were not carried out by a GARDENA Service Centre or an authorised specialist. The same applies to spare parts and accessories.

### **FIN Tuotevastuu**

Korostamme nimenomaan, että tuotevastuulain nojalla emme ole vastuussa laitteistamme johtuneista vahingoista, mikäli nämä ovat aiheutuneet epäasianmukaisesta korjauksesta tai osia vaihdettaessa ei ole käytetty alkuperäisiä GARDENA- varaosia tai hyväksymiämme osia ja korjauksen on suorittanut muu kuin GARDENA -huoltokeskus tai valtuuttamamme ammattihenkilö. Tämä pätee myös lisäosiin ja lisävarusteisiin.

### **S Produktansvar**

Tillverkaren är inte ansvarig för skada som orsakats av produkten om skadan beror på att produkten har reparats felaktigt eller om, vid reparation eller utbyte, andra än Original GARDENA reservdelar har använts. Samma sak gäller för kompletteringsdelar och tillbehör.

### **DK Produktansvar**

Vi gør udtrykkeligt opmærksom på at i henhold til produktansvarsloven er vi ikke ansvarlige for skader forårsaget af vores udstyr, hvis det skyldes uautoriserede reparationer eller hvis dele er skiftet ud og der ikke er anvendt originale GARDENA dele eller dele godkendt af os, eller hvis reparationerne ikke er udført af GARDENA-service eller en autoriseret fagmand. Det samme gælder for ekstra udstyr og tilbehør.

### **EST Tootevastutus**

Juhime teie tähelepanu sellele, et tootevastutusseaduse kohaselt ei vastuta me meie seadmete poolt põhjustatud kahjude eest, kui need on tekkinud asjatundmatu paranduse tagajärjel või kui detaili vahetamisel ei kasutatud GARDENA originaalvaruosi ega meie poolt kasutada lubatud varuosi ja kui parandustöid ei ole teinud GARDENA klienditeenindusspetsialistid ega meie volitatud spetsialistid. Sama kehtib lisadetailide ja tarvikute kohta.

### **LT Atsakomybė už produkciją**

Prašome atkreipti dėmesį, kad remdamiesi „Mašinių saugos“ įstatymu, neatsakome už nuostolius, sukeltus mūsų prietaisų, jei jie atsirado dėl netinkamo remonto, arba, jei keičiant dalis, buvo naudojami neoriginalios GARDENA dalys arba dalys, kurių mes neleidome naudoti, o remontą atliko ne GARDENA serviso centras ar įgaliotas specialistas. Tas pats galioja papildomoms dalims ir priedams.

### **LV Produkta atbildība**

Mēs skaidri norādām uz to, ka saskaņā ar Produktu atbildības likumu, mēs neatbildam par mūsu iekārtu radītiem zaudējumiem, ciktāl tos ir izraisījis neatbilstošs remonts vai daļu nomaiņa ar neoriģinālām GARDENA daļām vai ne ar mūsu norādītajām detaļām un remontu nav veicis GARDENA serviss vai pilnvarots speciālists. Tas pats attiecas uz papildinošajām daļām un piederumiem.

### **GB EU Certificate of Conformity**

The undersigned Husqvarna AB, 561 82 Huskvarna, Sweden, hereby certifies that, when leaving our factory, the units indicated below are in accordance with the harmonised EU guidelines, EU standards of safety and product specific standards. This certificate becomes void if the units are modified without our approval.

### **FIN EY-vaatimustenmukaisuusvakuutus**

Allekirjoittanut Husqvarna AB, 561 82 Huskvarna, Sweden vakuuttaa, että allamainitut laitteet täyttävät tehtaaltamme lähtiessään yhdenmukaistettujen EY-direktiivien, EY-turvallisuusstandardien ja tuotekohtaisten standardien vaatimukset. Laitteisiin tehdyt muutokset, joista ei ole sovittu kanssamme, johtavat tämän vakuutuksen raukeamiseen.

### **S EU Tillverkarintyg**

Undertecknad firma Husqvarna AB, 561 82 Huskvarna, Sweden, intygar härmed att nedan nämnda produkter överensstämmer med EU:s direktiv, EU:s säkerhetsstandard och produktspecifikation. Detta intyg upphör att gälla om produkten ändras utan vårt tillstånd.

**DK EU Overensstemmelse certificat**

Undertegnede Husqvarna AB, 561 82 Huskvarna, Sweden bekræfter hermed, at en-heder listet herunder, ved afsendelse fra fabrikken, er i overensstemmelse med harmoniserede EU retningslinier, EU sikkerhedsstandarder og produkt-specifikationsstandarder. Dette certifikat træder ud af kraft hvis enhederne er ændret uden vor godkendelse.

**EST ELi vastavusdeklaratsioon**

Allakirjutanu Husqvarna AB, 561 82 Huskvarna, Sweden kinnitab, et kirjeldatud seade vastab meie poolt ringlusse viidud kujul ELi harmoniseeritud direktiividele, ELi ohutusstandarditele ja tootega seotud standarditele. Meiega kooskõlastamata muudatuse tegemise korral seadmel kaotab see deklaratsioon kehtivuse.

**LT ES Atitikties deklaracija**

Pasirašanti Husqvarna AB, 561 82 Huskvarna, Sweden patvirtina, kad žemiau nurodyti prietaisai ir jų modeliai, kuriuos paleidome į apyvarą, patenkina harmonizuotas ES direktyvas, ES saugumo standartus ir specifinius gaminio standartus. Atlikus bet kokį prietaiso pakeitimą, kuris nėra suderintas su mumis, ši deklaracija praranda galiojimą.

**LV ES-atbilstības deklarācija**

Parakstījusies Husqvarna AB, 561 82 Huskvarna, Sweden, Vācija apstiprina, ka sekojoši apzīmētās iekārtas, kuras mēs izplatām, savā izpildījumā atbilst harmonizētajām ES direktīvām, ES drošības standartiem un produkta specifiskajiem standartiem. Ar mūsu neapstiprinātām izmaiņām iekārtā šī deklarācija zaudē savu derīgumu.

Description of the unit: Laitteiden nimitys: Produktbeskrivning: Beskrivelse af enhederne: Seadmete nimetus: Gaminio pavadinimas: lekārtu apzīmējums:	Water Timer electronic Elektroninen kasteluajastin Bevattningstimer electronic Vandingsur electronic Kastmistaimer electronic Elektroninis laistymo laikmatis Elektroniskais laistīšanas taimeris	Type: Tyypit: Typ: Type: Tüübid: Tipas: Tipi:	Art. No.: Art.-n:o : Art.nr. Varenr. : Toote nr: Gaminio Nr.: Art.-Nr.:
		T 1030 D	1825
EU directives: EY-direktiivit: EU direktiv: EU Retningslinier: ELi direktiivid: ES direktivos: ES-direktivas:	2004/108/EC  93/68/EC	Year of CE marking: CE-merkin kiinnitysvuosi: CE-Märkningsår: CE-Mærkningsår: CE-märgistuse paigaldamise aasta: CE- markējuma uzlikšanas gads: Metai, kuriais paženklinta CE-ženklū:	2001
Hinterlegte Dokumentation: Deposited Documentation: Documentation déposée :	GARDENA Technische Dokumentation E. Renn 89079 Ulm GARDENA Technical Documentation E. Renn 89079 Ulm Documentation technique GARDENA E. Renn 89079 Ulm	Ulm, 20.07.2001 Ulmissa, 20.07.2001 Ulm, 2001.07.20. Ulm, 20.07.2001 Ulm, 20.07.2001 Ulm, 2001.07.20 Ulma, 20.07.2001	Authorised representative Valtuutettu edustaja Behörig Företagsrepresentant Teknisk direktør Volitatud esindaja Įgaliotasis atstovas Pilnvarotā persona
			 Thomas Heint

**Deutschland / Germany**

GARDENA GmbH  
Central Service  
Hans-Lorenser-Straße 40  
D-89079 Ulm  
Produktfragen:  
(+49) 731 490-123  
Reparaturen:  
(+49) 731 490-290  
service@gardena.com

**Albania**

COBALT Sh.p.k.  
Rr. Siri Kodra  
4000 Tirana

**Argentina**

Husqvarna Argentina S.A.  
Vera 745  
(C1414A00) Buenos Aires  
Phone: (+54) 11 4858-5000  
diego.poggi@ar.husqvarna.com

**Australia**

Husqvarna Australia Pty. Ltd.  
Locked Bag 5  
Central Coast BC, NSW 2252  
Phone: (+61) (0) 2 4352 7400  
customer.service@  
husqvarna.com.au

**Austria / Österreich**

Husqvarna Austria GmbH  
Consumer Products  
Industriezeile 36  
4010 Linz  
Tel.: (+43) 732 77 01 01 - 90  
consumer.service@husqvarna.at

**Belgium**

GARDENA Belgium NV/SA  
Sterrebeekstraat 163  
1930 Zaventem  
Phone: (+32) 2 720 92 12  
Mail: info@gardena.be

**Bosnia / Herzegovina**

SILK TRADE d.o.o.  
Industrijska zona Bukva bb  
74260 Tešanj

**Brazil**

Palash Comércio e  
Importação Ltda.  
Rua São João do Araguaia, 338  
- Jardim Califórnia -  
Barueri - SP - Brasil -  
CEP 06409-060  
Phone: (+55) 11 4198-9777  
eduardo@palash.com.br

**Bulgaria**

Хускварна България ЕООД  
Бул. „Андрей Ляпчев“ № 72  
1799 София  
Тел.: (+359) 02/9753076  
www.husqvarna.bg

**Canada / USA**

GARDENA Canada Ltd.  
100 Summerlea Road  
Brampton, Ontario L6T 4X3  
Phone: (+1) 905 792 93 30  
info@gardenacanada.com

**Chile**

Antonio Martinic y Cia Ltda.  
Cassillas 272  
Centro de Cassillas  
Santiago de Chile  
Phone: (+56) 2 20 10 708  
garfar\_cl@yahoo.com

**Costa Rica**

Compania Exim  
Euroiberoamericana S.A.  
Los Colegios, Moravia,  
200 metros al Sur del Colegio Saint  
Francis - San José  
Phone: (+506) 297 68 83  
exim\_euro@racsa.co.cr

**Croatia**

SILK ADRIA d.o.o.  
Josipa Lončara 3  
10090 Zagreb  
Phone: (+385) 1 3794 580  
silk.adria@zg.t-com.hr

**Cyprus**

FARMOKIPIKI LTD  
P.O. Box 7098  
74, Digeni Akrita Ave.  
1641 Nicosia  
Phone: (+357) 2275 47 62  
condam@spidernet.com.cy

**Czech Republic /  
Slovak Republic**

Husqvarna Česko s.r.o.  
Türkova 2319/5b  
149 00 Praha 4 - Chodov  
Phone: (+420) 274 008 900  
info@cz.husqvarna.com

**Denmark**

GARDENA / Husqvarna  
Consumer Outdoor Products  
Salgsafdelning Danmark  
Box 9003  
S-200 39 Malmö  
info@gardena.dk

**Estonia**

Husqvarna Eesti OÜ  
Consumer Outdoor Products  
Kesk tee 10, Aaviku küla  
Rae vald  
Harju maakond  
75305 Estonia  
kontakt.etj@husqvarna.ee

**Finland**

Oy Husqvarna Ab  
Consumer Outdoor Products  
Lautatarhankatu 8 B / PL 3  
00581 HELSINKI  
info@gardena.fi

**France**

GARDENA France  
Immeuble Exposial  
9 - 11 allée des Pierres Mayettes  
ZAC des Barbanniers, B.P. 99  
-F- 92232 GENNEVILLIERS  
cedex  
Tél. (+33) 01 40 85 30 40  
service.consommateurs@  
gardena.fr

**Great Britain**

Husqvarna UK Ltd  
Preston Road  
Aycliffe Industrial Park  
Newton Aycliffe  
County Durham  
DL5 6UP  
info.gardena@husqvarna.co.uk

**Greece**

HUSQVARNA ΕΛΛΑΣ Α.Ε.Β.Ε.  
Υπ/μα Ηφαίστου 33Α  
Βl. Πλ. Κορωπίου  
194 00 Κορωπί Αττικής  
V.A.T. EL094094640  
Phone: (+30) 210 66 20 225  
info@husqvarna-consumer.gr

**Hungary**

Husqvarna Magyarorszag Kft.  
Ezred u. 1 - 3  
1044 Budapest  
Telefon: (+36) 1 251-4161  
vevoszolgalat.husqvarna@  
husqvarna.hu

**Iceland**

O. Johnson & Kaaber  
Tunguhalsi 1  
110 Reykjavik  
ooj@ojk.is

**Ireland**

McLoughlin's RS  
Unit 5,  
Northern Cross Business Park  
North Road, Finglas  
Dublin 11

**Italy**

Husqvarna Italia S.p.A.  
Via Como 72  
23868 VALMADRERA (LC)  
Phone: (+39) 0341.203.111  
info@gardenaitalia.it

**Japan**

KAKUICHI Co. Ltd.  
Sumitomo Realty &  
Development Kojimachi  
BLDG., 8F, 5-1 Nibanncoyo,  
Chiyoda-ku, Tokyo 102-0084  
Phone: (+81) 33 264 4721  
m\_ishihara@kaku-ichi.co.jp

**Latvia**

Husqvarna Latvija  
Consumer Outdoor Products  
Bākūžu iela 6  
LV-1024 Rīga  
info@husqvarna.lv

**Lithuania**

UAB Husqvarna Lietuva  
Consumer Outdoor Products  
Ateities pl. 77C  
LT-52104 Kaunas  
centras@husqvarna.lt

**Luxembourg**

Magasins Jules Neuberg  
39, rue Jacques Stas  
Luxembourg-Gasperich 2549  
Case Postale No. 12  
Luxembourg 2010  
Phone: (+352) 40 14 01  
api@neuberg.lu

**Netherlands**

GARDENA Nederland B.V.  
Postbus 50176  
1305 AD ALMERE  
Phone: (+31) 36 521 00 00  
info@gardena.nl

**Neth. Antilles**

Jonka Enterprises N.V.  
Sta. Rosa Weg 196  
P.O. Box 8200, Curaçao  
Phone: (+599) 9 767 66 55  
pgm@jonka.com

**New Zealand**

Husqvarna New Zealand Ltd.  
PO Box 76437  
Manukau City 2241  
Phone: (+64) (0) 9 9202410  
support.nz@husqvarna.co.nz

**Norway**

GARDENA / Husqvarna  
Consumer Outdoor Products  
Salgskontor Norge  
Kleverveien 6  
1540 Vestby  
info@gardena.no

**Poland**

Husqvarna Poland Spółka z o.o.  
ul. Wysockiego 15 b  
03-371 Warszawa  
Oddział w Szymanowie  
Szymanów 9 d  
05-532 Baniocza  
Phone: (+48) 22 727 56 90  
gardena@gardena.pl

**Portugal**

GARDENA Portugal Lda.  
Sintra Business Park  
Edifício 1, Fracção 0-G  
2710-089 Sintra  
Phone: (+351) 21 922 85 30  
info@gardena.pt

**Romania**

Madex International Srl  
Soseaua Odaii 117-123,  
RO 013603, București, S1  
Phone: (+40) 21 352.76.03  
madex@ines.ro

**Russia**

ООО „Хускварна“  
141400, Московская обл.,  
г. Химки,  
улица Ленинградская,  
владение 39,  
строение 6,  
помещение NoOB02\_04

**Serbia**

Domel d.o.o.  
Autoput za Novi Sad b.b.  
11080 Beograd  
Phone: (+381) 11 2772 204  
miroslav.jejina@domel.co.yu

**Singapore**

Hy-Ray PRIVATE LIMITED  
40 Jalan Pemimpin  
#02-08 Tat Ann Building  
Singapore 577185  
Phone: (+65) 6253 2277  
shiyng@hyray.com.sg

**Slovenia**

GARDENA d.o.o.  
Brodišče 15  
1236 Trzin  
Phone: (+386) 1 580 93 32  
servis@gardena.si

**South Africa**

GARDENA  
South Africa (Pty.) Ltd.  
P.O. Box 11534  
Vorna Valley 1686  
Phone: (+27) 11 315 02 23  
sales@gardena.co.za

**Spain**

Husqvarna España S.A.  
C/Basauri, nº 6  
La Florida  
28023 Madrid  
Phone: (+34) 91 708 05 00  
atencioncliente@gardena.es

**Sweden**

Husqvarna AB  
S-561 82 Huskvarna  
info@gardena.se

**Switzerland / Schweiz**

Husqvarna Schweiz AG  
Consumer Products  
Industriestrasse 10  
5506 Mägenwil  
Phone: (+41) (0) 848 800 464  
info@gardena.ch

**Turkey**

GARDENA Dost Dış Ticaret  
Müessillik A.Ş.  
Sanayi Çad. Adil Sokak  
No: 1/B Kartal  
34873 Istanbul  
Phone: (+90) 216 38 93 939  
info@gardena-dost.com.tr

**Ukraine / Україна**

ТОВ «Хусварна Україна»  
вул. Васильківська, 34,  
офіс 204-г  
03022, Київ  
Тел. (+38) 044 498 39 02  
info@gardena.ua

1825-28.960.07/0111

© GARDENA  
Manufacturing GmbH  
D-89070 Ulm  
http://www.gardena.com