

T 1030 card Art. 1830

**GB** Operating Instructions  
Water Timer

---

**S** Bruksanvisning  
Bevattningstimer

---

**H** Használati útmutató  
Vízprogramozó óra

---

**CZ** Návod k použití  
Zavlažovací hodiny

---

**RUS** Инструкция по  
эксплуатации  
Таймер подачи воды

---

**FIN** Käyttöohje  
Kasteluajastin

GB

S

H

CZ

RUS

FIN

# GARDENA Water Timer T 1030 card

*Welcome to the Garden of GARDENA...*



Translation of the original instructions from German.  
Please read these operating instructions carefully and observe the notes given. Use these instructions to familiarise yourself with the Water Timer and its proper use as well as the notes on safety.



For safety reasons, children and young people under 16 as well as anyone who is not familiar with these operating instructions may not use the Water Timer. Persons with reduced physical or mental abilities may use the product only if they are supervised or instructed by a responsible person.

→ Please keep these operating instructions in a safe place.

## **Contents**

1. Where to Use Your GARDENA Water Timer .....	3
2. For Your Safety .....	3
3. Function .....	4
4. Putting Your Water Timer into Operation .....	6
5. Operating Your Water Timer .....	8
6. Trouble-Shooting .....	11
7. Putting Your Water Timer Out of Operation .....	12
8. Technical Data .....	12
9. Service .....	13

# 1. Where to Use Your GARDENA Water Timer

---

## *Intended use*

The GARDENA Water Timer is intended for private use in domestic and hobby gardens, exclusively for outdoor use, to control sprinklers and irrigation systems.

## *Please note*



**The GARDENA Water Timer must not be used for industrial purposes or in conjunction with chemicals, foodstuffs, easily flammable and explosive materials.**

## 2. For Your Safety

---

### **Use:**

The water timer is not approved for indoor use.

The minimum operating pressure is 0 bar, the maximum operating pressure is 12 bar.

- Check the filter in the sleeve nut regularly and clean if necessary.
- Do not pull the hose connected to the Water Timer and avoid tensile strain.

### **Battery:**

**To ensure safe operation, only 4 x LR-6-AA (Mignon) alkali-manganese (alkaline) batteries may be used.**

**The Water Timer will only run for approx. 1 year if the new alkaline batteries has a nominal voltage of at least 1.5 V.**

- Have the batteries checked before purchase.

***Putting your Water Timer into operation:***

To prevent water entering the device, the Water Timer must only be mounted in a perpendicular position with the sleeve nut pointing upwards.

After you have selected the watering program, the Water Timer opens at the selected starting time. To avoid getting wet when operating the

Water Timer, connect the hose or turn off the tap before selecting the program. Alternatively, the control unit can be removed for programming.

The max. temperature for the water is 40 °C.


→ Only use clear fresh water.

### 3. Function


---

The GARDENA Water Timer allows you to set different watering cycles for different watering times independent of whether you are using a sprinkler, a sprinkler system installation or drip-head watering system to irrigate your garden.

Your Water Timer will water your garden completely automatically according to the program you choose. You can set the timer to water your garden early in the morning or late at night when water evaporates the least, or while you are away on holiday.

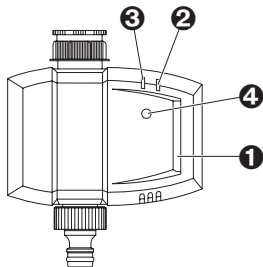


- ① Card slot:**
  - To hold the programming card
- ② Red LED:**
  - Indicates a fault
- ③ Green LED:**
  - Indicates the system is operating
- ④ Red button:**
  - Start reading in the program
  - Manual operation
- ⑤ Storage compartment:**
  - For storing the programming card

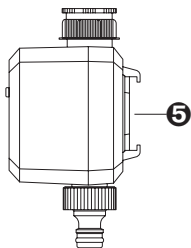

## 4. Putting Your Water Timer into Operation

### *Inserting the batteries:*

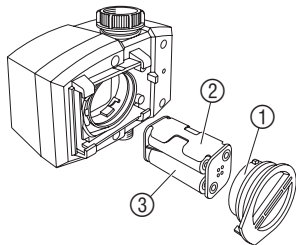

1. Turn battery cover ① anticlockwise and remove battery holder ②.
2. Insert 4 x LR-6-AA (**Mignon**) alkaline batteries ③ in the battery holder.  
*Ensure that polarity is correct (+/-).*
3. Insert the battery holder ② in the correct position and close the battery cover ①.

***Both LEDs are illuminated for 2 seconds and the Water Timer performs a self-test. The valve is closed automatically during this process.***

Make sure you exchange the batteries at the right time to prevent the Water Timer failing due to low batteries when you are away for longer periods of time.

Make sure that the time the batteries have been in operation and the time you are planning to be away does not add up to more than 1 year.

### ***Battery warning:***

Even if the batteries are almost empty, the Water Timer ensures that an open valve is always closed.

If both LEDs flash, the batteries are flat and must be replaced.

The functional safety of the water timer depends on the capability of the batteries.


If you change the batteries the program is not saved. You must reprogram the Water Timer (see 5. Operation).

### **Connecting your Water Timer:**

The Water Timer is fitted with a sleeve nut ④ for taps with a 33.3 mm (G1") thread. The adapters supplied ⑤ allows the Water Timer to be connected to taps with a 26.5 mm (G 3/4") / 23 mm (G 5/8") / 21 mm (G 1/2") thread.

#### **Connecting the Water Timer to taps with a 33.3 mm (G1") thread:**


1. Screw the sleeve nut ④ of the Water Timer onto the thread of the tap by hand (do not use pliers).
2. Screw the threaded tap connector ⑥ onto the Water Timer.

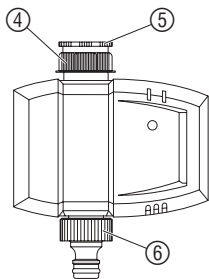

#### **Connecting the Water Timer to taps with a 26.5 mm (G 3/4") / 23 mm (G 5/8") / 21 mm (G 1/2") thread:**

1. Screw the adapter ⑤ onto the tap by hand (do not use pliers).
2. Screw the sleeve nut ④ of the Water Timer onto the thread of the adapter ⑤ by hand (do not use pliers).
3. Screw the threaded tap connector ⑥ onto the Water Timer.

### Connect soil moisture or rain sensor (optional):

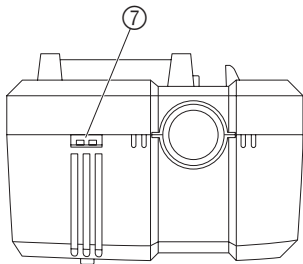

In addition to time-based watering, it is also possible to include the soil moisture or rain in the watering program.

If the soil is moist enough, the program will be stopped, or a program will be prevented from starting. Manual operation via **man. On/Off** is unaffected by this.


1. Place soil moisture sensor **in** the watered area  
 – or –  
 place rain sensor (with extension cable if necessary) **outside** the watered area.
2. Insert the sensor in the sensor connection ⑦ of the Water Computer.

## 5. Operating Your Water Timer

### Programming the Water Timer:


The time of day and the watering starting time are set to the nearest hour. One of the following 6 watering cycles can be selected: 8 hours (8h), 12 hours (12h), 24 hours (24h), 2 days (2D), 3 days (3D) or 7 days (7D). The watering time can be set between 1 and 180 minutes.



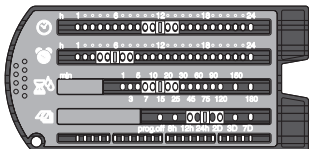

1. Setting the watering program on the programming card ⑧:

- 🕒 Push the timer slide to the actual time of day (e.g.: **12 o'clock**).
- 🕒 Push starting time slide to the starting time required (e.g.: **6 o'clock**).
- ⌚ Push watering time slide to the length of time required. (e.g.: **15 minutes**).
- 📅 Push cycle slide to the cycle required (e.g.: **24 hours** = every day).

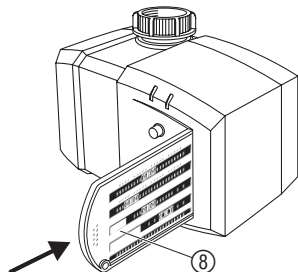

2. Insert programming card ⑧ in the card slot of the Water Timer.



3. Press **red button** briefly.

*The green LED flashes for 10 seconds.*

4. Remove programming card ⑧ at a constant speed whilst keeping it straight (while the green LED flashes).

*The green LED goes on for 5 seconds and the program has been transferred.*

If the green LED flashes at 10 second intervals, the Watering Timer has been programmed and the program is active.

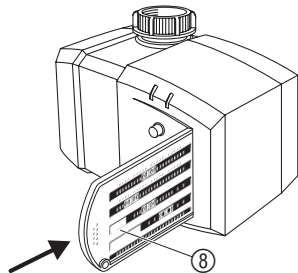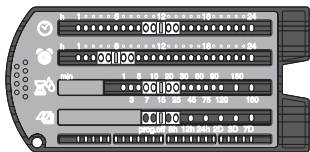**Watering manually:****Bad-weather function:**

On especially dry days the programmed watering cycle is sometimes insufficient. You can then turn on your water timer manually.

The program you have set remains unchanged.

1. Insert programming card ⑧ in the card slot of the Water Timer.
2. Keep **red button** pressed for 3 seconds.

The valve opens for 30 minutes regardless of the program set.

On rainy days the programmed watering cycle is often unnecessary. You can therefore stop the programmed watering cycle (bad-weather function). The program set is retained on the programming card in this case.

Manual watering remains possible.

1. Push watering cycle slide  to **prog off**.
2. Transfer program (see *Programming the Water Timer*).

To reactivate the program set previously, the watering cycle set previously has to be set again and the program has to be transferred (see *Programming the Water Timer*).

## 6. Trouble-Shooting

Fault	Possible cause	Remedy
<b>Red LED is illuminated for 5 seconds</b> (reading error)	Programming card has been removed too fast or too slowly when reading in the programming data.	→ Remove the programming card at a constant speed.
	Dirty or wet programming card.	→ Clean / dry programming card.
	Slide on the programming card is not in an unambiguous position.	→ Engage the slide on the programming card.
<b>Both LEDs are flashing</b> (Opening manually impossible)	Battery level is too low.	→ Insert new alkaline batteries.
	Valve is blocked.	1. Remove batteries. 2. Remove blockage and clean filter.
<b>Watering has not been initiated</b>	Water tap off.	→ Turn tap on.
	Sensor active (shows there is sufficient moisture).	→ See instructions for the sensor.
<b>Battery flat after working for a short time</b>	Alkaline batteries were not used.	→ Use alkaline batteries.

If you have any other problems with your Water Timer, please contact GARDENA Service.

## 7. Putting Your Water Timer Out of Operation

### Storage/Wintering:

→ Store your Water Timer in a dry place away from frost before the first frost sets in.

### Disposal:

(in accordance with  
RL2002/96/EC)



Device may not be added to normal household refuse but must be disposed of in the technically correct way.

→ Please return flat batteries to a GARDENA dealer or dispose of them properly at your nearest recycling centre.

### Disposing of flat batteries:

Only dispose of batteries when they are **flat**.

## 8. Technical Data

Min./max. operating pressure:	0 bar / 12 bar
Flow medium:	Clean fresh water
Max. water temperature:	40 °C
Number of program-controlled watering cycles per day:	Up to 3 (8h), 2 (12h)
Watering cycles per week:	Every day (24h), every 2nd day (2D), 3rd day (3D) 7th day (7D)
Watering time per program:	1, 3, 5, 7, 10, 15, 20, 25, 30, 45, 60, 75, 90, 120, 150 or 180 minutes

<b>Battery:</b>	4 x 1,5 V LR-6- <b>AA (Mignon)</b> alkaline
<b>Running time:</b>	Approx. 1 year

## 9. Service

---

### *Warranty*

GARDENA guarantees this product for 2 years (from date of purchase). This guarantee covers all serious defects of the unit that can be proved to be material or manufacturing faults.

Under warranty we will either replace the unit or repair it free of charge if the following conditions apply:

- The unit must have been handled properly and in keeping with the requirements of the operating instructions.
- Neither the purchaser or a non-authorised third party have attempted to repair the unit.

Faults which occur as a result of incorrectly installed or leaking batteries are not covered by the guarantee.

This manufacturer's guarantee does not affect the user's existing warranty claims against the dealer/seller.

If you have any problems with your Water Timer, please contact our Customer Service or return the defective unit together with a short description of the problem directly to one of the GARDENA Service Centres listed on the back of this leaflet.

## **GB Product Liability**

We expressly point out that, in accordance with the product liability law, we are not liable for any damage caused by our units if it is due to improper repair or if parts exchanged are not original GARDENA parts or parts approved by us, and, if the repairs were not carried out by a GARDENA Service Centre or an authorised specialist. The same applies to spare parts and accessories.

## **S Produktansvar**

Tillverkaren är inte ansvarig för skada som orsakats av produkten om skadan beror på att produkten har reparats felaktigt eller om, vid reparation eller utbyte, andra än Original GARDENA reservdelar har använts. Samma sak gäller för kompletteringsdelar och tillbehör.

## **H Termékfelelősség**

Nyomatékosan utalunk arra, hogy a termékfelelősségi törvény értelmében nem felelünk a készülékeink által okozott károkért, amennyiben ezek szakszerűtlen javítás következményei, vagy ha a cseréket nem eredeti GARDENA – vagy általunk kibocsátott alkatrészekkel végzik el és a javítást nem a GARDENA megbízott szervizei végezték. Ez értelemszerűen érvényes a kiegészítő részekre és a tartozékokra is.

## **CZ Ručení za výrobek**

Upozorňujeme výslovně na skutečnost, že podle zákona o ručení za výrobky nejsme povinni ručit za škody vyvolané našimi výrobky, pokud tyto škody byly způsobeny neodbornou opravou nebo v případě výměny dílů nebyly použity naše originální díly GARDENA, popř. díly, které jsme schválili, a oprava nebyla provedena v servisu GARDENA nebo autorizovaným specialistou. Analogické ustanovení platí rovněž pro doplňky a příslušenství.

## **FIN Tuotevastuu**

Korostamme nimenomaan, että tuotevastuulain nojalla emme ole vastuussa laitteistamme johtuneista vahingoista, mikäli nämä ovat aiheutuneet epäasianmukaisesta korjauksesta tai osia vaihdettaessa ei ole käytetty alkuperäisiä GARDENA- varaosia tai hyväksymiämme osia ja korjauksen on suorittanut muu kuin GARDENA -huoltokeskus tai valtuuttamamme ammattihenkilö. Tämä pätee myös lisäosiin ja lisävarusteisiin.

### **GB EG-Konformitätserklärung**

Der Unterzeichnete Husqvarna AB, 561 82 Huskvarna, Sweden bestätigt, dass die nachfolgend bezeichneten Geräte in der von uns in Verkehr gebrachten Ausführung die Anforderungen der harmonisierten EU-Richtlinien, EU-Sicherheitsstandards und produktspezifischen Standards erfüllen. Bei einer nicht mit uns abgestimmten Änderung der Geräte verliert diese Erklärung ihre Gültigkeit.

### **S EU Tillverkarintyg**

Undertecknad firma Husqvarna AB, 561 82 Huskvarna, Sweden, intygar härmed att nedan nämnda produkter överensstämmer med EU:s direktiv, EU:s säkerhetsstandard och produktspecifikation. Detta intyg upphör att gälla om produkten ändras utan vårt tillstånd.

### **H EU azonossági nyilatkozat**


Alulírott, Husqvarna AB, 561 82 Huskvarna, Sweden, igazolja, hogy az alább felsorolt, általunk forgalomba hozott termékek megfelelnek az EU elvárásoknak, EU biztonsági normáknak és a termékspecifikus szabványoknak egyaránt. A készülék velünk nem egyeztetett változtatása esetén ez a nyilatkozat érvényét veszti.

### **CZ ES Prohlášení o shodě**

Níže podepsaná společnost Husqvarna AB, 561 82 Huskvarna, Sweden, potvrzuje, že níže označený přístroj v provedení, který jsme uvedli na trh, splňuje požadavky uvedené v harmonizovaných směrnicih EU, v bezpečnostních standardech EU a ve standardech pro daný produkt. V případě změny přístroje, která námi nebyla odsouhlasena, ztrácí toto prohlášení platnost.

### **FIN EY-vaatimustenmukaisuusvakuutus**

Allekirjoittanut Husqvarna AB, 561 82 Huskvarna, Sweden vakuuttaa, että allamainitut laitteet täyttävät tehtaaltamme lähtiessään yhdenmukaistettujen EY-direktiivien, EY-turvallisuusstandardien ja tuotekohtaisten standardien vaatimukset. Laitteisiin tehdyt muutokset, joista ei ole sovittu kanssamme, johtavat tämän vakuutuksen raukeamiseen.

Description of the unit: Produktbeskrivning: A készülék megnevezése: Označení přístroje: Laitteiden nimitys:	Water Timer Bevattningstimer Vízprogramozó óra Zavlažovací hodiny Kasteluajastin	Type: Type: Típus: Typ: Tyypit:	Art. No.: Art.nr. : Cikkszám: Č.výr: Art.-n:o. :
EU directives: EU direktiv: EU irányelvek: Směrnice ES: EY-direktiivit:	2004/108/EC  93/68/EC	Year of CE marking: CE-Märkningsår: CE jelzés bevezetési éve: Rok umístění značky CE: CE-merkin kiinnitysvuosi:	2004
Hinterlegte Dokumentation: GARDENA Technische Dokumentation E. Renn 89079 Ulm  Deposited Documentation: GARDENA Technical Documentation E. Renn 89079 Ulm  Documentation déposée : Documentation technique GARDENA E. Renn 89079 Ulm	Ulm, 01.06.2004 Ulm, 2004.06.01. Ulm, 01.06.2004 Ulm, 01.06.2004 Ulmissa, 01.06.2004	Technical Dept. Manager Technical Director Műszaki vezetés Technické vedení Valtuutettu edustaja	
			 Peter Lameli Vice President



**Deutschland / Germany**

GARDENA GmbH  
Central Service  
Hans-Lorenser-Straße 40  
D-89079 Ulm  
Produktfragen:  
(+49) 731 490-123  
Reparaturen:  
(+49) 731 490-290  
service@gardena.com

**Albania**

COBALT Sh.p.k.  
Rr. Siri Kodra  
4000 Tirana

**Argentina**

Husqvarna Argentina S.A.  
Vera 745  
(C1414AOO) Buenos Aires  
Phone: (+54) 11 4858-5000  
diego.poggi@ar.husqvarna.com

**Australia**

Husqvarna Australia Pty. Ltd.  
Locked Bag 5  
Central Coast BC  
NSW 2252  
Phone: (+61) (0) 2 4352 7400  
customer.service@  
husqvarna.com.au

**Austria / Österreich**

Husqvarna Austria GmbH  
Consumer Products  
Industriezeile 36  
4010 Linz  
Tel.: (+43) 732 77 01 01 - 90  
consumer.service@husqvarna.at

**Belgium**

GARDENA Belgium NV/SA  
Sterrebeekstraat 163  
1930 Zaventem  
Phone: (+32) 2 720 92 12  
Mail: info@gardena.be

**Bosnia / Herzegovina**

SILK TRADE d.o.o.  
Industrijska zona Bukva bb  
74260 Tešanj

**Brazil**

Palash Comércio e  
Importação Ltda.  
Rua São João do Araguaia, 338  
- Jardim Califórnia -  
Barueri - SP - Brasil -  
CEP 06409-060  
Phone: (+55) 11 4198-9777  
eduardo@palash.com.br

**Bulgaria**

Хускварна България ЕООД  
Бул. „Андрей Ляпчев“ № 72  
1799 София  
Тел.: (+359) 02/9753076  
www.husqvarna.bg

**Canada / USA**

GARDENA Canada Ltd.  
100 Summerlea Road  
Brampton, Ontario L6T 4X3  
Phone: (+1) 905 792 9330  
info@gardenacanada.com

**Chile**

Antonio Martinic y Cia Ltda.  
Cassillas 272  
Centro de Cassillas  
Santiago de Chile  
Phone: (+56) 2 20 10 708  
garfar\_ci@yahoo.com

**Costa Rica**

Compania Exim  
Euroiberoamericana S.A.  
Los Colegios, Moravia,  
200 metros al Sur del Colegio Saint  
Francis - San José  
Phone: (+506) 297 68 83  
exim\_euro@racsa.co.cr

**Croatia**

SILK ADRIA d.o.o.  
Josipa Lončara 3  
10090 Zagreb  
Phone: (+385) 1 3794 580  
silk.adria@zg.t-com.hr

**Cyprus**

FARMOKIPIKI LTD  
P.O. Box 7098  
74, Digeni Akrita Ave.  
1641 Nicosia  
Phone: (+357) 22 75 47 62  
condam@spidernet.com.cy

**Czech Republic**

Husqvarna Česko s.r.o.  
Türkova 2319/5b  
149 00 Praha 4 - Chodov  
Bezplatná infolinka: 800 100 425  
servis@cz.husqvarna.com

**Denmark**

GARDENA / Husqvarna  
Consumer Outdoor Products  
Salgsafdelning Danmark  
Box 9003  
S-200 39 Malmö  
info@gardena.dk

**Estonia**

Husqvarna Eesti OÜ  
Consumer Outdoor Products  
Kesk tee 10, Aaviku küla  
Rae vald  
Harju maakond  
75305 Estonia  
kontakt.etj@husqvarna.ee

**Finland**

Oy Husqvarna Ab  
Consumer Outdoor Products  
Lautatarhankatu 8 B / PL 3  
00581 HELSINKI  
info@gardena.fi

**France**

GARDENA France  
Immeuble Exposial  
9 - 11 allée des Pierres Mayettes  
ZAC des Barbanniers, B.P. 99  
-F- 92232 GENNEVILLIERS  
cedex  
Tél. (+33) 01 40 85 30 40  
service.consommateurs@  
gardena.fr

**Great Britain**

Husqvarna UK Ltd  
Preston Road  
Aycliffe Industrial Park  
Newton Aycliffe  
County Durham - DL5 6UP  
info.gardena@husqvarna.co.uk

**Greece**

HUSQVARNA ΕΛΛΑΣ Α.Ε.Β.Ε.  
Υπ/μα Ηφαίστου 33Α  
Βλ. Πε. Κωρωπίου  
194 00 Κωρωπί Αττικής  
V.A.T. EL094094640  
Phone: (+30) 210 66 20 225  
info@husqvarna-consumer.gr

**Hungary**

Husqvarna Magyarország Kft.  
Ezred u. 1 - 3  
1044 Budapest  
Telefon: (+36) 1 251-4161  
vevoszolgalat.husqvarna@  
husqvarna.hu

**Iceland**

Ö. Johnson & Kaaber  
Tunguhalsi 1  
110 Reykjavik  
ooj@ojk.is

**Ireland**

McLoughlin's RS  
Unit 5,  
Northern Cross Business Park  
North Road, Finglas  
Dublin 11

**Italy**

GARDENA Italia S.p.A.  
Via Santa Vecchia 15  
23868 VALMADRERA (LC)  
Phone: (+39) 0341.203.111  
info@gardenaitalia.it

**Japan**

KAKUICHI Co. Ltd.  
Sumitomo Realty &  
Development Kojimachi  
BLDG., 8F  
5-1 Nibanncyo  
Chiyoda-ku  
Tokyo 102-0084  
Phone: (+81) 33 264 4721  
m\_isihara@kaku-ichi.co.jp

**Latvia**

Husqvarna Latvija  
Consumer Outdoor Products  
Bākūzu iela 6  
LV-1024 Rīga  
info@husqvarna.lv

**Lithuania**

UAB Husqvarna Lietuva  
Consumer Outdoor Products  
Ateities pl. 77C  
LT-52104 Kaunas  
centras@husqvarna.lt

**Luxembourg**

Magasins Jules Neuberg  
39, rue Jacques Stas  
Luxembourg-Gasperich 2549  
Case Postale No. 12  
Luxembourg 2010  
Phone: (+352) 40 14 01  
api@neuberg.lu

**Netherlands**

GARDENA Nederland B.V.  
Postbus 50176  
1305 AD ALMERE  
Phone: (+31) 36 521 00 00  
info@gardena.nl

**Neth. Antilles**

Jonka Enterprises N.V.  
Sta. Rosa Weg 196  
P.O. Box 8200  
Curaçao  
Phone: (+599) 9 767 66 55  
pgm@jonka.com

**New Zealand**

Husqvarna New Zealand Ltd.  
PO Box 76437  
Manukau City 2241  
Phone: (+64) (0) 9 9202410  
support.nz@husqvarna.co.nz

**Norway**

GARDENA  
Husqvarna Consumer Outdoor  
Products  
Salgskontor Norge  
Kleverteien 6  
1540 Vestby  
info@gardena.no

**Poland**

Husqvarna Poland Spółka z o.o.  
ul. Wysockiego 15 b  
03-371 Warszawa  
Phone: (+48) 22 330 96 00  
gardena@gardena.pl

**Portugal**

GARDENA Portugal Lda.  
Sintra Business Park  
Edifício 1  
Fracção 0-G  
2710-089 Sintra  
Phone: (+351) 21 922 85 30  
info@gardena.pt

**Romania**

Madex International Srl  
Soseaua Odaii 117- 123,  
RO 013603, București, S 1  
Phone: (+40) 21 352.76.03  
madex@ines.ro

**Russia**

ООО „Хускварна“  
141400, Московская обл.,  
г. Химки,  
улица Ленинградская,  
владение 39,  
Химки Бизнес Парк,  
Здание II, 4 этаж.

**Serbia**

Domel d.o.o.  
Autoput za Novi Sad b.b.  
11080 Beograd  
Phone: (+381) 11 2772 204  
miroslav.jejina@domel.co.yu

**Singapore**

Hy-Ray PRIVATE LIMITED  
40 Jalan Pemimpin  
#02-08 Tat Ann Building  
Singapore 577185  
Phone: (+65) 6253 2277  
shiyang@hyray.com.sg

**Slovak Republic**

Husqvarna Česko s.r.o.  
T - L s.r.o.  
Fedinová 6 - 8  
851 01 Bratislava  
Bezplatná infolinka: 800 154 044  
servis@sk.husqvarna.com

**Slovenia**

GARDENA d.o.o.  
Brodišče 15  
1236 Trzin  
Phone: (+386) 1 580 93 32  
servis@gardena.si

**South Africa**

GARDENA  
South Africa (Pty.) Ltd.  
P.O. Box 11534  
Vorna Valley 1686  
Phone: (+27) 11 315 02 23  
sales@gardena.co.za

**Spain**

Husqvarna España S.A.  
C/ Basauri, nº 6  
La Florida  
28023 Madrid  
Phone: (+34) 91 708 05 00  
atencioncliente@gardena.es

**Sweden**

Husqvarna AB  
S-561 82 Huskvarna  
info@gardena.se

**Switzerland / Schweiz**

Husqvarna Schweiz AG  
Consumer Products  
Industriestrasse 10  
5506 Mägenwil  
Phone: (+41) (0) 848 800 464  
info@gardena.ch

**Turkey**

GARDENA Dost Diş Ticaret  
Mümesillik A.Ş.  
Sanayi Çad. Adil Sokak  
No: 1/B Kartal  
34873 Istanbul  
Phone: (+90) 216 38 93 939  
info@gardena-dost.com.tr

**Ukraine / Україна**

ТОВ «Хусварна Україна»  
вул. Васильківська, 34,  
офіс 204-г  
03022, Київ  
Тел. (+38) 044 498 39 02  
info@gardena.ua

1830-28.960.08/0411  
© GARDENA  
Manufacturing GmbH  
D-89070 Ulm  
http://www.gardena.com