

T 1030 D
Art. 1825-28

GB Operating Instructions
Water Timer electronic

FIN Käyttöohje
Elektroninen kasteluajastin

S Bruksanvisning
Bevattningstimer electronic

DK Brugsanvisning
Vandingsur electronic

N Bruksanvisning
Vanningstimer electronic

EST Kasutusjuhend
Kastmistaimer electronic

LT Eksplotavimo instrukcija
Elektroninis laistymo laikmatis

LV Lietošanas instrukcija
Elektroniskais laistišanas taimeris

GB

FIN

S

DK

N

EST

LT

LV

GARDENA Water Timer electronic T 1030 D

Welcome to the Garden of GARDENA...



Translation of the original instructions from German.

Please read these operating instructions carefully and observe the notes given. Use these instructions to familiarise yourself with the Water Timer electronic and its proper use as well as the notes on safety.



For safety reasons, children and young people under 16 as well as anyone who is not familiar with these operating instructions may not use the Water Timer.

Persons with reduced physical or mental abilities may use the product only if they are supervised or instructed by a responsible person.

→ Please keep these operating instructions in a safe place.

Contents

1. Where to Use Your GARDENA Water Timer	3
2. Safety Instructions	3
3. Function	5
4. Putting Your Water Timer into Operation	6
5. Operating Your Water Timer	8
6. Putting Your Water Timer Out of Operation	13
7. Trouble-Shooting	14
8. Technical Data	15
9. Service / Warranty	16

1. Where to Use Your GARDENA Water Timer

Intended use

The GARDENA Water Timer is intended for private use in domestic and hobby gardens, exclusively for outdoor use, to control sprinklers and watering systems.

Please note



The GARDENA Water Timer must not be used for industrial purposes or in conjunction with chemicals, foodstuffs, easily flammable and explosive materials.

2. Safety Instructions

Use:

Warning!

→ Only use the Water Timer outdoors.

The water timer is not approved for indoor use.

The minimum operating pressure is 0.5 bar, the maximum operating pressure is 12 bar. The minimum flow rate is 20 l/h.

→ Check the filter in the sleeve nut regularly and clean if necessary.

→ Do not pull the hose connected to the Water Timer and avoid tensile strain.

Battery:

For functional safety reasons, only use a 9V alkali-manganese (alkaline) battery type IEC 6LR61.

The Water Timer will only run for approx. 1 year if the new alkaline battery has a nominal voltage of at least 9V.

→ Check the battery before you buy it.

Putting your Water Timer into operation:

To prevent water entering the battery compartment, the Water Timer must only be mounted in a perpendicular position with the sleeve nut pointing upwards.

After you have selected the watering program, the Water Timer opens at the selected starting time. To avoid getting wet when operating the Water Timer, connect the hose or turn off the tap before selecting the program. Alternatively, the control unit can be removed for programming.


Water flow:

The max. temperature for the water is 40 °C.

→ Only use clear fresh water.


3. Function

Control knob and OK button:

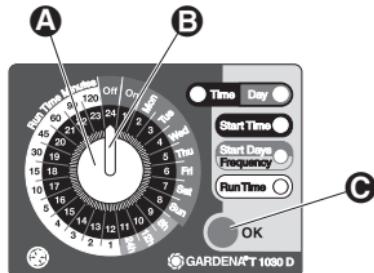

- A** Control knob
- B** Control knob pointer
- C** OK button

Battery status display:

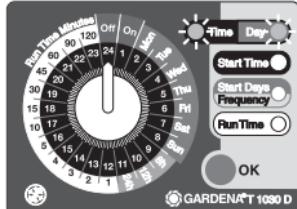

The GARDENA Water Timer electronic allows you to set different watering cycles for different watering times independent of whether you are using a sprinkler, a sprinkler system installation or drip-head watering system to irrigate your garden.

Your Water Timer electronic will water your garden completely automatically according to the program you choose. You can set the timer to water your garden early in the morning or late at night when water evaporates the least, or while you are away on holiday.

You simply program the time (to the nearest hour), day, watering starting time / cycle / days and duration by turning the pointer **B** of the control knob **A** to the correct time and pressing the **OK button C**.

The Water Timer opens at the starting time you have selected.

The 2 LEDs **Time** and **Day** flash to indicate that the battery is flat.



→ Replace the battery (see 4. Putting Your Water Timer into Operation “Inserting the Battery”).

The functional safety of the water timer depends on the capability of the battery.

If you change the battery the program is not saved. You must reprogram the Water Timer (see 5. Operation).


4. Putting Your Water Timer into Operation

Inserting the battery:

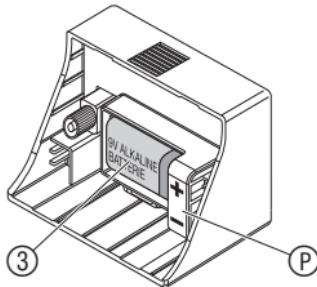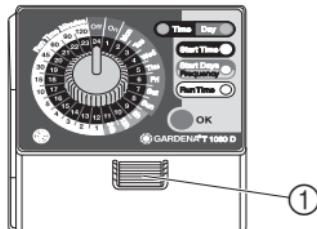

1. Press the release button ① and remove the control unit ② from the housing of the Water Timer.
2. Insert the battery ③ in the battery compartment. Pay attention to the polarity ④ (+/- markings).
The Time LED flashes.
3. Re-attach the control unit ② to the housing.


Make sure you exchange the battery at the right time to prevent the Water Timer failing due to a low battery when you are away for longer periods of time.

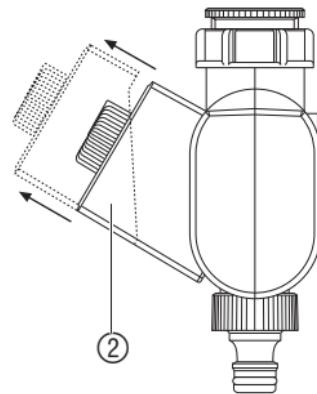

Make sure that the time the battery has been in operation and the time you are planning to be away does not add up to more than a year.

Even if the battery is almost empty, the Water Timer ensures that an open valve is always closed since less energy is required to close the valve than to open it.


Connecting your Water Timer:

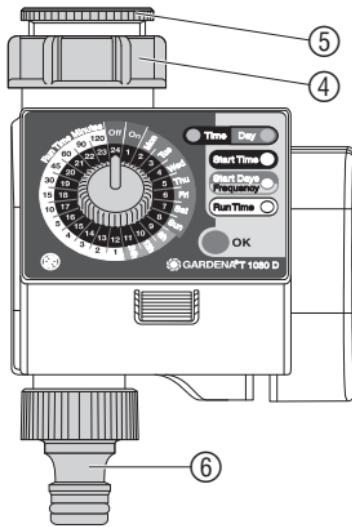

The Water Timer is fitted with a sleeve nut ④ for taps with G 1" (33.3 mm) thread. The adaptor supplied ⑤ allows the Water Timer to be connected to taps with a G 3/4" (26.5 mm) thread.

1. **For tap with a G 3/4" (26.5 mm) thread:** Screw adaptor ⑤ on to the tap manually (do not use pliers).
2. Screw sleeve nut ④ of the Water Timer on to the adaptor thread by hand (do not use pliers).
3. Screw tap connector ⑥ on to the Water Timer.
4. Open the tap.

Installing the anti-theft protection (optional):

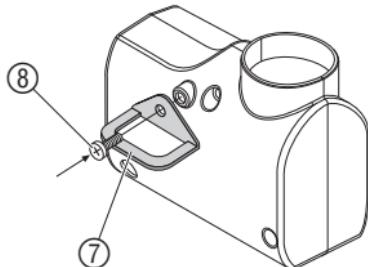

To protect your Water Timer against theft, the **GARDENA Anti-Theft Protection Art. No. 1815-00.791.00** is available from the GARDENA Service.

1. Fasten the bracket ⑦ to the back of the Water Timer using the screw ⑧.
2. The bracket can be used to attach a chain, for example.

The screw cannot be loosened once it has been screwed in.


5. Operation

Setting the watering program:

The Water Timer control unit ② can be removed. This allows you to set the watering program somewhere other than where the Water Timer is to be used.

Notes to program the water timer:

- The current time is entered to the nearest hour. We recommend that you select the time to the full hour.
- Confirm the selected point of the program within 120 seconds by pressing the **OK button**, otherwise the program has not been stored.

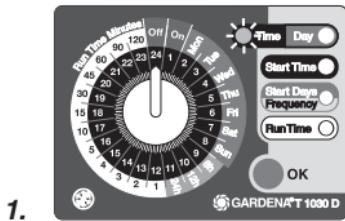


1.

- Turn the control knob to **Off** and confirm by pressing the **OK button**.

The program stored in the memory is overwritten.

*The **Time** LED flashes.*

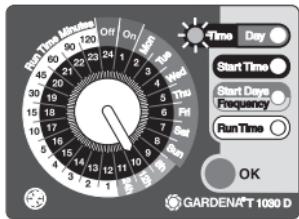


2.

Setting the current time:

- Set the current time on the **inner black scale** by turning the control knob and confirm the time you have selected by pressing the **OK button** (e.g.: **10:00 am**).

*The **Time** LED lights up for half a second and the current time is entered to the nearest hour.*

*The **Day** LED flashes.*

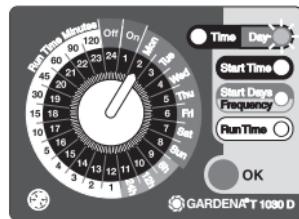

3.


Setting the current day:

- Set the current day on the **outer grey scale** by turning the control knob and confirm the day you have selected by pressing the **OK button** (e.g.: **Mon Monday**).

*The **Day** LED lights up for half a second and the current day has been stored.*

*The **Start Time** LED flashes.*

4.

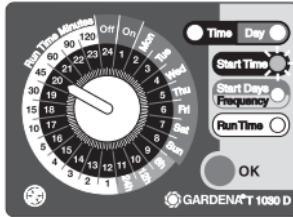

Setting the watering starting time:


- Set the watering starting time on the **inner black scale** by turning the control knob and confirm the time you have selected by pressing the **OK button** (e.g.: 20:00).

The Start Time LED lights up for half a second and the watering starting time has been stored.

The Start Days / Frequency LED flashes.

If the start-up time corresponds to the current time of day entered immediately beforehand, watering starts at the next start-up time.

5.

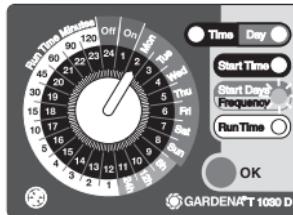

Setting the watering days:

If watering is to be carried out every day, this point can be omitted and you can continue with point 6 "Setting the watering cycle (Frequency)".

- Set the watering day on the **outer grey scale** using the control knob and confirm your selection by pressing the **OK button** (e.g.: **Mon Monday**).

The Start Days LED lights up for half a second and the watering day has been stored.

Repeat the process for all desired days.

The Start Days / Frequency LED continues flashing.

Setting the watering cycle (Frequency):

24h: 1 watering cycle per day

12h: 2 watering cycles per day from start time

8h: 3 watering cycles per day from start time

6. Set the watering cycle on the **outer blue scale** using the control knob and confirm your selection by pressing the **OK button** (e.g.: **12 hour cycle = 2 x daily**).

The Frequency LED lights up for half a second and the watering cycle has been stored.


The Run TimeLED flashes.

Setting the watering time:


7. Set the watering time on the **outer white scale** (Run Time Minutes) using the control knob and confirm your selection by pressing the **OK button** (e.g.: **30 minutes**).

The Run Time LED lights up for half a second and the watering time has been stored.

The program you have selected is now active.

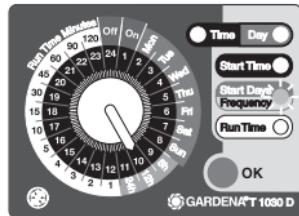


6.

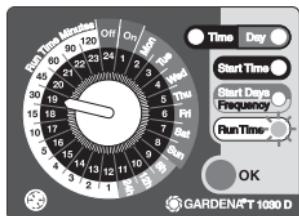


7.

Changing the watering time:

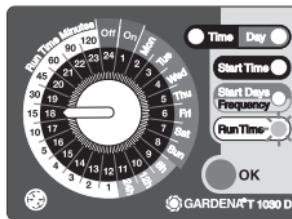

Manual watering (On):

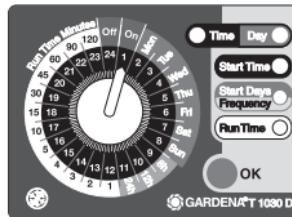

On hot or cooler days you can change the watering time.
The program you have set remains unchanged.

- Select the new watering time on the **outer white scale** (Run Time Minutes) by turning the control knob and confirm your selection by pressing the **OK button** (e.g.: 15 minutes).

The Run Time LED flashes for a half second and the watering time is changed.

The program with the new watering time is now active.


On especially hot days the programmed watering cycle is sometimes insufficient. You can then turn on your irrigation system manually. **The program you have set remains unchanged.**

- Turn the control knob to **On**.

The valve opens for 30 minutes independent of the set program.

To activate the set program again, you must reset the watering time to the time originally set.

Bad-weather function (Off):

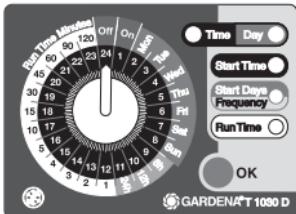

On rainy days the programmed watering cycle is often unnecessary. You can therefore stop the programmed watering cycle (bad-weather function). **The program you have set remains unchanged.**

- Turn the control knob to **Off**.

The valve closes and remains closed, independent of the watering cycle you have set.

To activate the set program again, you must reset the watering time to the time originally set.

6. Putting Your Water Timer Out of Operation

Storage/Wintering:

- Store your Water Timer in a dry place away from frost before the first frost sets in.

Disposing of flat batteries:

- Please return flat batteries to a GARDENA dealer or dispose of them properly at your nearest recycling centre.

Only dispose of batteries when they are flat.

Disposal:

(in accordance with
RL2002/96/EC)



The product must not be added to normal household waste. It must be disposed of in line with local environmental regulations.

- Important: Make sure that the unit is disposed of via your municipal recycling collection centre.

7. Trouble-Shooting

Fault	Possible cause	Remedy
Not able to open the Water Timer manually using On/Off	Battery capacity too low (2 LEDs flash).	→ Insert a new alkaline battery.
	Tap turned off.	→ Turn on tap.
Watering not initiated	Control knob turned to Frequency or On/Off.	→ Turn the control knob to "Run Time Minutes".
	Battery capacity too low (2 LEDs flash).	→ Insert a new alkaline battery.
	Data input/changes made while the program was starting or immediately before.	→ Input data or make changes before or after the starting times you have chosen.
	Tap turned off.	→ Turn on tap.
Valves do not close	No hose attached to outlet.	→ Attach hose with consumer.
Battery flat after working for a short time	The battery you inserted is not an alkaline battery.	→ Use an alkaline battery.



In the event of other faults please contact GARDENA Service.
Repairs should only be carried out by GARDENA service centres or dealers authorised by GARDENA.

8. Technical Data

Min./max. operating pressure:	0.5 bar / 12 bar
Minimum flow rate:	20 l/h
Flow medium:	clean fresh water
Max. water temperature:	40 °C
Number of program-controlled watering cycles per day:	every 8, 12, 24 hours
Watering cycles per week:	each day can be selected / not selected
Watering time per program:	1, 2, 3, 4, 5, 10, 15, 30, 45, 60, 90 or 120 minutes
Battery:	1 x 9 V alkali-manganese (alkaline) type IEC 6LR61
Running time:	Approx. 1 year

9. Service / Warranty

GARDENA guarantees this product for 2 years (from date of purchase). This guarantee covers all serious defects of the unit that can be proved to be material or manufacturing faults.

Under warranty we will either replace the unit or repair it free of charge if the following conditions apply:

- The unit must have been handled properly and in keeping with the requirements of the operating instructions.
- Neither the purchaser or a non-authorised third party have attempted to repair the unit.
- Faults which occur as a result of incorrectly installed or leaking batteries are not covered by the guarantee.
- Damage caused by frost is not covered by the warranty.

This manufacturer's guarantee does not affect the user's existing warranty claims against the dealer/seller.

If you have any problems with your Water Timer, please contact our Customer Service or return the defective unit together with a short description of the problem directly to one of the GARDENA Service Centres listed on the back of this leaflet.

GB Product Liability

We expressly point out that, in accordance with the product liability law, we are not liable for any damage caused by our units if it is due to improper repair or if parts exchanged are not original GARDENA parts or parts approved by us, and, if the repairs were not carried out by a GARDENA Service Centre or an authorised specialist. The same applies to spare parts and accessories.

FIN Tuotevastuu

Korostamme nimenomaan, että tuotevastuuain nojalla emme ole vastuussa laitteistamme johtuneista vahingoista, mikäli nämä ovat aiheutuneet epääsianmukaisesta korjauksesta tai osia vaihdettaessa ei ole käytetty alkuperäisiä GARDENA- varaosia tai hyväksyämme osia ja korjauksen on suorittanut muu kuin GARDENA -huoltokeskus tai valtuuttamamme ammattihenkilö. Tämä pätee myös lisäosiin ja lisävarusteisiin.

S Produktansvar

Tillverkaren är inte ansvarig för skada som orsakats av produkten om skadan beror på att produkten har reparerats felaktigt eller om, vid reparation eller utbyte, andra än Original GARDENA reservdelar har använts. Samma sak gäller för kompletteringsdelar och tillbehör.

DK Produktansvar

Vi gør udtrykkeligt opmærksom på at i henhold til produktansvarsloven er vi ikke ansvarlige for skader forårsaget af vores udstyr, hvis det skyldes uautoriserede reparationer eller hvis dele er skiftet ud og der ikke er anvendt originale GARDENA dele eller dele godkendt af os, eller hvis reparationerne ikke er udført af GARDENA-service eller en autoriseret fagmand. Det samme gælder for ekstra udstyr og tilbehør.

EST Tootevastutus

Juhime teie tähelepanu sellele, et tootevastutusseaduse kohaselt ei vastuta me meie seadmete poolt põhjustatud kahjude eest, kui need on tekinud asjatundmatu paranduse tagajärvel või kui detaili vahetamisel ei kasutatud GARDENA originaalvaruosi ega meie poolt kasutada lubatud varuosi ja kui parandustöid ei ole teinud GARDENA klienditeenindusspetsialistid ega meie volitatud spetsialistid. Sama kehtib lisadetailide ja tarvikute kohta.

LT Atsakomybė už produkciją

Prašome atkreipti dėmesį, kad remdamiesi „Mašinų saugos“ įstatymu, neatsakome už nuostolius, sukeltus mūsų prietaisų, jei jie atsirado dėl netinkamo remonto, arba, jei keičiant dalis, buvo naudojamos neoriginalios GARDENA dalys arba dalys, kurių mes neleidome naudoti, o remontą atliko ne GARDENA serviso centras ar įgaliotas specialistas. Tas pats galioja papildomoms dalims ir priedams.

LV Produktā atbildība

Mēs skaidri norādām uz to, ka saskaņā ar Produktu atbildības likumu, mēs neatbildam par mūsu iekārtu radītiem zaudējumiem, ciktāl tos ir izraisījis neatbilstošs remonts vai daļu nomaiņa ar neoriģinālām GARDENA daļām vai ne ar mūsu norādītajām detaļām un remontu nav veicis GARDENA serviss vai pilnvarots speciālists. Tas pats attiecas uz papildinošajām daļām un piederumiem.

GB EU Certificate of Conformity

The undersigned Husqvarna AB, 561 82 Huskvarna, Sweden, hereby certifies that, when leaving our factory, the units indicated below are in accordance with the harmonised EU guidelines, EU standards of safety and product specific standards. This certificate becomes void if the units are modified without our approval.

FIN EY-vaatimustenmukaisuusvakuutus

Allekirjoittanut Husqvarna AB, 561 82 Huskvarna, Sweden vakuuttaa, että allamaanitut laitteet täyttävät tehtaan- tamme lähtiessään yhdenmukaistettujen EY-direktiivien, EY-turvallisuusstandardien ja tuotekohtaisten standardien vaatimukset. Laitteisiin tehdyt muutokset, joista ei ole sovittu kanssamme, johtavat tämän vakuutuksen raukeamiseen.

S EU Tillverkarintyg

Undertecknad firma Husqvarna AB, 561 82 Huskvarna, Sweden, intygar härmed att nedan nämnda produkter överensstämmer med EU:s direktiv, EU:s säkerhetsstandard och produktspecifikation. Detta intyg upphör att gälla om produkten ändras utan vårt tillstånd.

DK EU Overensstemmelse certifikat

Undertegnede Husqvarna AB, 561 82 Huskvarna, Sweden bekræfter hermed, at en-heder listet herunder, ved afsendelse fra fabrikken, er i overensstemmelse med harmoniserede EU retningslinier, EU sikkerhedsstandarder og produkt-specifikationsstandarder. Dette certifikat træder ud af kraft hvis enhederne er ændret uden vor godkendelse.

EST ELi vastavusdeklaratsioon

Allakirjutanu Husqvarna AB, 561 82 Huskvarna, Sweden kinnitab, et kirjeldatud seade vastab meie poolt ringlusse viidud kujul ELi harmoniseeritud direktiividele, ELi ohutusstandarditele ja tootega seotud standarditele. Meiega kooskõlastamata muudatuse tegemise korral seadmel kaotab see deklaratsioon kehtivuse.

LT ES Atitikties deklaracija

Pasirašanti Husqvarna AB, 561 82 Huskvarna, Sweden patvirtina, kad žemiau nurodyti prietaisai ir jų modeliai, kuriuos paleidome į apyvartą, patenkinia harmonizuotas ES direktyvas, ES saugumo standartus ir specifinius gaminio standartus. Atlirkus bet kokį prietaiso pakeitimą, kuris néra suderintas su mumis, ši deklaracija praranda galiojimą.

LV ES-atbilstības deklarācija

Parakstījusies Husqvarna AB, 561 82 Huskvarna, Sweden, Vācija apstiprina, ka sekojoši apzīmētās iekārtas, kuras mēs izplatām, savā izpildījumā atbilst harmonizētajām ES direktīvām, ES drošības standartiem un produkta specifiskajiem standartiem. Ar mūsu neapstiprinātām izmaiņām iekārtā šī deklarācija zaudē savu derīgumu.

Description of the unit:	Water Timer electronic	Type:	Art. No.:
Laitteiden nimitys:	Elektroninen kasteluajustin	Tyypit:	Art.-n:o. :
Produktbeskrivning:	Bevattningstimer electronic	Typ:	Art.nr.
Beskrivelse af enhederne:	Vandtidsur electronic	Type:	T 1030 D Varenr. : 1825
Seadmete nimetus:	Kastmistaimer electronic	Tüübidi:	Toote nr:
Gaminio pavadinimas:	Elektroninis laistymo laikmatis	Tipas:	Gaminio Nr.:
Iekārtu apzīmējums:	Elektroniskais laistīšanas taimeris	Tipi:	Art.-Nr.:
EU directives:		Year of CE marking:	
EEY-direktiiviit:	2004/108/EC	CE-merkin kiinnitysvuosi:	
EU direktiv:		CE-Märkningsår:	
EU Retningslinier:	93/68/EC	CE-Mærkningsår:	2004
ELI direktiivid:		CE-märgistuse paigaldamise aasta:	
ES direktyvos:	2011/65/EC	CE- markējuma uzlikšanas gads:	
ES-direktīvas:		Metai, kuriais paženklinta CE-ženklu:	
Hinterlegte Dokumentation:	GARDENA Technische Dokumentation E. Renn 89079 Ulm	Ulm, 20.11.2008 Ulmissa, 20.11.2008	Authorised representative Valtuutettu edustaja
Deposited Documentation:	GARDENA Technical Documentation E. Renn 89079 Ulm	Ulm, 2008.11.20. Ulm, 20.11.2008	Behörig Firmatecknare Teknisk direktør
Documentation déposée :	Documentation technique GARDENA E. Renn 89079 Ulm	Ulm, 20.11.2008 Ulm, 2008.11.20. Ulma, 20.11.2008	Volitatud esindaja Igalotasis astovas Pilnvarotā persona
 A. Disch Vice President			

Deutschland / Germany
GARDENA GmbH
Central Service
Hans-Lorenser-Straße 40
D-89079 Ulm
Produktfragen:
(+49) 731 490-123
Reparaturen:
(+49) 731 490-290
service@gardena.com

Albania
COBALT Sh.p.k.
Rr. Siri Kodra
1000 Tirana

Argentina
Husqvarna Argentina S.A.
Av.del Libertador 5954 -
Piso 11 - Torre B
(C1428ARP) Buenos Aires
Phone: (+54) 11 5194 5000
info.gardena@
ar.husqvarna.com

Armenia
Garden Land Ltd.
61 Tigran Mets
0005 Yerevan

Australia
Husqvarna Australia Pty. Ltd.
Locked Bag 5
Central Coast BC
NSW 2252
Phone: (+61) (0) 2 4352 7400
customer.service@
husqvarna.com.au

Austria / Österreich
Husqvarna Austria GmbH
Consumer Products
Industriezeile 36
4010 Linz
Tel.: (+43) 732 77 01 01-90
consumer.service@husqvarna.at

Azerbaijan
Firm Progress
a. Aliyev Str. 26A
1052 Baku

Belgium
GARDENA Belgium NV/SA
Sterrebeekstraat 163
1930 Zaventem
Phone: (+32) 2 720 92 12
Mail: info@gardena.be

Bosnia / Herzegovina
SILK TRADE d.o.o.
Industrijska zona Bukva bb
74260 Tešanj

Brazil
Husqvarna do Brasil Ltda
Av. Francisco Matarazzo,
1400 – 1º andar
São Paulo - SP
CEP: 05001-903
Tel: 0800-112252
marketing.br.husqvarna@
husqvarna.com.br

Bulgaria
Хускварна България ООД
Бул. „Андрей Ляпчев“ № 72
1799 София
Тел.: (+359) 02/9753076
www.husqvarna.bg

Canada / USA
GARDENA Canada Ltd.
100 Summerlea Road
Brampton, Ontario L6T 4X3
Phone: (+1) 905 792 93 30
info@gardenacanada.com

Chile
Maquinarias Agroforestales
Ltda. (Maga Ltda.)
Santiago, Chile
Avda. Chesterton
8355 comuna Las Condes
Phone: (+56) 2 202 4417
Dalton@maga.cl
Zipcode: 7560330

Temuco, Chile
Avda. Valparaíso # 01466
Phone: (+56) 45 222 126
Zipcode: 4780441

China
Husqvarna (China) Machinery
Manufacturing Co., Ltd.
No. 1355, Jia Xin Rd.,
Ma Lu Zhen, Jia Ding Dist.,
Shanghai
201801
Phone: (+86) 21 59159629
Domestic Sales
www.gardena.com.cn

Colombia
Husqvarna Colombia S.A.
Calle 18 No. 68 D-31, zona
Industrial de Montevideo
Bogotá, Cundinamarca
Tel. 571 2922700 ext. 105
jairo.salazar@
husqvarna.com.co

Costa Rica
Compania Exim
Euroberoamericana S.A.
Los Colegios, Moravia,
200 metros al Sur del Colegio
Saint Francis - San José
Phone: (+506) 297 68 83
exim_euro@racsa.co.cr

Croatia
SILK ADRIA d.o.o.
Josipa Lončara 3
10090 Zagreb
Phone: (+385) 1 3794 580
silk.adria@zg.t-com.hr

Cyprus
Med Marketing
17 Digeni Akrata Ave
P.O. Box 27017
1641 Nicosia

Czech Republic
Husqvarna Česko s.r.o.
Túrkova 2319/5b
149 00 Praha 4 – Chodov
Bezplatná infolinka:
800 100 425
servis@cz.husqvarna.com

Denmark
GARDENA / Husqvarna
Consumer Outdoor Products
Salgsafdelning Danmark
Box 9003
S-200 39 Malmö
info@gardena.dk

Dominican Republic
BOSQUESA, S.R.L.
Carretera Santiago Licey
Km. 5 ½
Esquina Copal II.
Santiago, Dominican Republic
Phone: (+809) 736-0333
joserbosquesa@claro.net.do

Ecuador
Husqvarna Ecuador S.A.
Arupos E1-181 y 10 de Agosto
Quito, Pichincha
Tel. (+593) 22800739
francisco.jacome@
husqvarna.com.ec

Estonia
Husqvarna Eesti OÜ
Consumer Outdoor Products
Kesk tee 10, Aaviku küla
Rae vald
Harju maakond
75305 Estonia
kontakt.et@husqvarna.ee

Finland
Oy Husqvarna Ab
Consumer Outdoor Products
Lautatarhankatu 8 B / PL 3
00581 HELSINKI
info@gardena.fi

France
GARDENA France
Immeuble Exposial
9-11 allée des Pierres Mayettes
ZAC des Barbanniers, B.P. 99
-F. 92232 GENNEVILLIERS
cedex
Tél. (+33) 01 40 85 30 40
service.consummateurs@
gardena.fr

Georgia
ALD Group
Beliashvili 8
1159 Tbilisi

Great Britain
Husqvarna UK Ltd
Preston Road
Aycliffe Industrial Park
Newton Aycliffe
County Durham
DL5 6UP
info.gardena@
husqvarna.co.uk

Greece
HUSQVARNA
ΕΛΛΑΣ Α.Ε.Β.Ε.
Υπ/μα Ηφαιστίου 33Α
Βι. Πε. Κορωπίου
194 00 Κορωπί ΑΤΤΙΚΗΣ
V.A.T. EL094094640
Phone: (+30) 210 66 20 225
info@husqvarna-consumer.gr

Hungary
Husqvarna Magyarország Kft.
Ezred u. 1-3
1044 Budapest
Telefon: (+36) 1 251-4161
vevoszolgatal.husqvarna@
husqvarna.hu

Iceland
Ó. Johnson & Kaaber
Tunguhalsi 1
110 Reykjavík
oo@ojk.is

Ireland
Husqvarna UK Ltd
Preston Road
Aycliffe Industrial Park
Newton Aycliffe
County Durham
DL5 6UP
info.gardena@
husqvarna.co.uk

Italy Husqvarna Italia S.p.A. Via Como 72 23868 VALMADRERA (LC) Phone: (+39) 0341.203.111 info@gardenaitalia.it	Mexico AFOSA Av. Lopez Mateos Sur # 5019 Col. La Calma 45070 Zapopan, Jalisco Mexico Phone: (+52) 33 3818-3434 icornejo@afosa.com.mx	Poland Husqvarna Poland Spółka z o.o. ul. Wysockiego 15 b 03-371 Warszawa Phone: (+48) 22 330 96 00 gardena@husqvarna.com.pl	Slovak Republic Husqvarna Česko s.r.o. Tříkova 2319/5b 149 00 Praha 4 – Chodov Bezplatná infolinie: 800 154 044 servis@sk.husqvarna.com	Switzerland / Schweiz Husqvarna Schweiz AG Consumer Products Industriestrasse 10 5506 Mägenwil Phone: (+41) (0) 848 800 464 info@gardena.ch
Japan KAKUCHI Co. Ltd. Sumitomo Realty & Development Kojimachi BLDG., 8F 5-1 Nibanocy Chiyoda-ku Tokyo 102-0084 Phone: (+81) 33 264 4721 m_iishihara@kaku-ichi.co.jp	Moldova Convel S.R.L. 290/A Muncesti Str. 2002 Chisinau	Portugal Husqvarna Portugal, SA Lagoa - Albarraque 2635 - 595 Rio de Mouro Tel.: (+351) 21 922 85 30 Fax : (+351) 21 922 85 36 info@gardena.pt	Slovenia Husqvarna Austria GmbH Consumer Products Industriezeile 36 4010 Linz Tel.: (+43) 732 77 01 01 - 90 consumer.service@ husqvarna.at	Turkey GARDENA Dost Dış Ticaret Mümessilik A.Ş. Sanayi Cad. Adil Sokak No: 1/B Kartal 34873 İstanbul Phone: (+90) 216 38 93 939 info@gardena-dost.com.tr
Kazakhstan LAMED Ltd. 155/1, Tazhibayevi Str. 050060 Almaty IP Schmidt Abayavenue 3B 110 005 Kostanay	Netherlands GARDENA Nederland B.V. Postbus 50176 1305 AD ALMERE Phone: (+31) 36 521 00 00 info@gardena.nl	Romania Madex International Srl Soseava Odaii 117 - 123, RO 013603 Bucureşti, S1 Phone: (+40) 21 352.76.03 madex@ines.ro	South Africa Husqvarna South Africa (Pty) Ltd Postnet Suite 250 Private Bag X6, Cascades, 3202 South Africa Phone: (+27) 33 846 9700 info@gardena.co.za	Ukraine / Україна ТОВ «Хусварна Україна» вул. Васильківська, 34, офіс 204-г 03022, Київ Тел. (+38) 044 498 39 02 info@gardena.ua
Kyrgyzstan Aly Maki av. Moladaya Guardir J 3 720014 Bishkek	Neth. Antilles Jonka Enterprises N.V. Sta. Rosa Weg 196 P.O. Box 8200 Curaçao Phone: (+599) 9 767 66 55 pgm@jonka.com	Russia ООО „Хускварна“ 141400, Московская обл., г. Химки, улица Ленинградская, владение 39, стр.6 Бизнес Центр „Химки Бизнес Парк“, помещение ОВ02_04	Spain Husqvarna España S.A. C/Basauri, nº 6 La Florida 28023 Madrid Phone: (+34) 91 708 05 00 atencioncliente@gardena.es	Uruguay FELI SA Entre Ríos 1083 CP 11800 Montevideo - Uruguay Tel: (+598) 22 03 18 44 info@felisa.com.uy
Latvia Husqvarna Latvija Consumer Outdoor Products Bāķužu iela 6 LV-1024 Rīga info@husqvarna.lv	New Zealand Husqvarna New Zealand Ltd. PO Box 76-437 Manukau City 2241 Phone: (+64) (0) 9 9202410 support.nz@husqvarna.co.nz	Serbia Domel d.o.o. Autoput za Novi Sad bb 11273 Belgrade Phone: (+381) 11 84 88 12 miroslav.jejina@domel.rs	Suriname Agrofix n.v. Verlengde Hogestraat # 22 Phone: (+597) 472426 agrofix@sr.net Pobox: 2006 Paramaribo Suriname-South America	Venezuela Corporación Casa y Jardín C.A. Av. Caroni, Edif. Trezmen, PB. Colinas de Bello Monte. 1050 Caracas. Tlf: (+58) 212 992 33 22 info@casayjardin.net.ve
Lithuania UAB Husqvarna Lietuva Consumer Outdoor Products Ateities pl. 77C LT-52104 Kaunas centras@husqvarna.lt	Norway GARDENA Husqvarna Consumer Outdoor Products Salgskontor Norge Kleverveien 6 1540 Vestby info@gardena.no	Singapore Hy-Ray PRIVATE LIMITED 40 Jalan Pemimpin #02-08 Tat Ann Building Singapore 577185 Phone: (+65) 6253 2277 shiyng@hyray.com.sg	Sweden Husqvarna AB S-561 82 Huskvarna info@gardena.se	1825-28.960.08/1112 © GARDENA Manufacturing GmbH D-89070 Ulm http://www.gardena.com
Luxembourg Magasins Jules Neuberg 39, rue Jacques Stas Luxembourg-Gasperich 2549 Case Postale No. 12 Luxembourg 2010 Phone: (+352) 40 14 01 api@neuberg.lu	Peru Husqvarna Perú S.A. Jr. Ramón Cárcamo 710 Lima 1 Tel: (+51) 1 3320400 ext. 416 juan.remuzgo@husqvarna.com			