


Art. 8885

ClassicCut

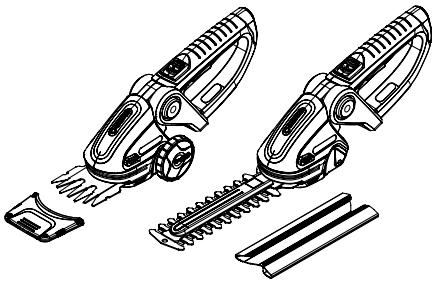

Art. 8893

ComfortCut

Art. 8895

**D** Betriebsanleitung  
Accu-Schere

**GB** Operating Instructions  
Accu Shears

**F** Mode d'emploi  
Cisailles sur accu

**NL** Gebruiksaanwijzing  
Accuschaar

**S** Bruksanvisning  
Accu-sax

**DK** Brugsanvisning  
Accu-saks

**FI** Käyttöohje  
Accu-sakset

**N** Bruksanvisning  
Accu-saks

**I** Istruzioni per l'uso  
Forbici a batteria

**E** Instrucciones de empleo  
Tijeras cortacésped con Accu

**P** Manual de instruções  
Tesouras Accu

**PL** Instrukcja obsługi  
Nożyce akumulatorowe

**H** Használati utasítás  
Akkumulátoros olló

**CZ** Návod k obsluze  
Akumulátorové nůžky

**SK** Návod na obsluhu  
Akumulátorové nožnice

**GR** Οδηγίες χρήσης  
Ψαλίδι μπαταρίας

**RUS** Инструкция по эксплуатации  
Аккумуляторные ножницы

**SLO** Navodilo za uporabo  
Aku-škarje

**HR** Upute za uporabu  
Škare s akumulatorskim sustavom

**SRB** Uputstvo za rad  
BIH Baterijske makaze

**UA** Інструкція з експлуатації  
Ножиці акумуляторні

**RO** Instrucțiuni de utilizare  
Foarfeca cu acumulator

**TR** Kullanma Kılavuzu  
Accu Makası

**BG** Инструкция за експлоатация  
Accu-ножица

**AL** Manual përdorimi  
Gérshëre me bateri

**EST** Kasutusjuhend  
Akukäärid

**LT** Eksploatavimo instrukcija  
Akumuliatorinės žirklės

**LV** Lietošanas instrukcija  
Accu šķēres

# GARDENA Accu Shears ClassicCut/ComfortCut



## Translation of the original German operating instructions.

Please read the operating instructions carefully and observe the notes given. Use these operating instructions to familiarise yourself with the product, the proper use and the safety instructions.



For safety reasons, children and young people under the age of 16, as well as people not familiar with these operating instructions, may not use this product. Persons with reduced physical or mental abilities may use the product only if they are supervised or instructed by a responsible person. Children must be supervised to ensure that they do not play with the product.

→ Keep these operating instructions in a safe place.

## Contents:

1. Area of application of your GARDENA Accu Shears .....	12
2. Safety instructions .....	12
3. Assembly .....	15
4. Initial Operation .....	15
5. Operation .....	16
6. Putting into Storage .....	17
7. Maintenance .....	18
8. Trouble-Shooting .....	18
9. Available accessories .....	19
10. Technical Data .....	20
11. Service / Warranty .....	20

## 1. Area of application of your GARDENA Accu Shears

### **Proper use with Grass and Boxwood Blade:**

The GARDENA Accu Grass Shears are suitable for cutting lawn edges, smaller grass areas and for precise shaping of shrubs, in particular boxwood, for the private home or hobby garden.

### **Proper use with Shrub Blade:**

The GARDENA Accu Shrub Shears are intended for cutting individual bushes, shrubs and climbing plants in private domestic and hobby gardens.

**DANGER!**  
Risk of injury!



**The Accu Shears may not be used for chopping in the sense of composting.**

**With the Shrub Blade Art. 2342 / 2343, the Accu Shears are not suited for cutting lawns / lawn edges.**

## 2. Safety instructions

→ Please note the safety instructions on the Accu Shears.



### **WARNING!**

→ Please read the operating instructions before using this tool.



### **DANGER!**

Cutting tool continues to run after switching off!



### **WARNING!**

→ Do not use in rain or wet conditions.



### **DANGER!**

→ Keep bystanders away.

## General Power Tool Safety Warnings



**WARNING! Read all safety warnings and all instructions.** Failure to follow the warnings and instructions may result in electric shock, fire and / or serious injury.

**Save all warnings and instructions for future reference.** The term "power tool" in the warnings refers to your mains operated (corded) power tool or battery-operated (cordless) power tool.

### 1) Work area safety

**a) Keep work area clean and well lit.**

Cluttered or dark areas invite accidents.

**b) Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.

**c) Keep children and bystanders away while operating a power tool.**

Distractions can cause you to lose control.

### 2) Electrical safety

**a) Power tool plugs must match the outlet.**

Never modify the plug in any way. Do not use any adaptor plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.

**b) Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.

**c) Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.

**d) Do not abuse the cord.** Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.

**e) When operating a power tool outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric shock.

**f) If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.**

Use of an RCD reduces the risk of electric shock.

### 3) Personal safety

**a) Stay alert, watch what you are doing and use common sense when operating a power tool.** Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.

**b) Use personal protective equipment.** Always wear eye protection. Protective equipment such as dust mask, non-skid safety shoes, hard hat and hearing protection used for appropriate conditions will reduce personal injuries.

**c) Prevent unintentional starting.** Ensure the switch is in the off-position before connecting to power source and / or battery pack, picking up or carrying the tool. Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.

**d) Remove any adjusting key or wrench before turning the power tool on.**

A wrench or a key left attached to a rotating part of the power tools may result in personal injury.

**e) Do not overreach.** Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.

**f) Dress properly.** Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.

**g) If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** Use of dust collection can reduce dust-related hazards.

### 4) Power tool use and care

**a) Do not force the power tool.** Use the correct power tool for your application.

The correct power tool will do the job better and safer at the rate for which it was designed.

**b) Do not use the power tool if the switch does not turn it on and off.**

Any power tool that cannot be controlled with the switch is dangerous and must be repaired.

**c) Disconnect the plug from the power source and /or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools.**

Such preventive safety measures reduce the risk of starting the power tool accidentally.

**d) Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** Power tools are dangerous in the hands of untrained users.

**e) Maintain power tools.** Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.

**f) Keep cutting tools sharp and clean.**

Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.

**g) Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.**

Use of the power tool for operations different from those intended could result in a hazardous situation.

### 5. Battery tool use and care

**a) Recharge only with the charger specified by the manufacturer.** A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.

**b) Use power tools only with specifically designated battery packs.** Use of any other battery packs may create a risk of injury and fire.

**c) When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.** Shorting the battery terminals together may cause burns or a fire.

**d) Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.**

## 6. Service

**Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.**

### Hedge trimmer safety warnings:

- Keep all parts of the body away from the cutter blade. Do not remove cut material or hold material to be cut when blades are moving. Make sure the switch is off when clearing jammed material. A moment of inattention while operating the hedge trimmer may result in serious personal injury.
- Carry the hedge trimmer by the handle with the cutter blade stopped. When transporting or storing the hedge trimmer always fit the cutting device cover. Proper handling of the hedge trimmer will reduce possible personal injury from the cutter blades.
- Hold the power tool by insulated gripping surfaces only, because the cutter blade may contact hidden wiring. Cutter blades contacting a "live" wire may make exposed metal parts of the power tool "live" and could give the operator an electric shock.

### Additional Safety Recommendations

#### Work area safety

Only use the product in the manner and for the functions described in these instructions.

The operator or user is responsible for accidents or hazards occurring to other people or their property.

Warning! This machine produces an electromagnetic field during operation. This field may under some circumstances interfere with active or passive medical implants. To reduce the risk of serious or fatal injury, we recommend persons with medical implants to consult their physician and the medical implant manufacturer before operating this machine. Danger! Small parts could be swallowed during assembly and there is a risk of suffocation from the polybag. Keep infants away during assembly. Do not use the product when a thunderstorm is approaching.

#### Electrical safety

Use only on AC mains supply voltage shown on the product rating label.

Under no circumstances should an earth be connected to any part of the product.

#### Personal safety

Always wear suitable clothing, gloves, and stout shoes. Thoroughly inspect the area where the product is to be used and remove all wires and other foreign objects. All adjustments have to be made with the sheath in place, and the Accu Shears must not rest on the blade in the process. Before using the machine and after any impact, check for signs of wear or damage and repair as necessary.

If the device can no longer be switched off in the event of a defect, place the device on a solid surface and monitor it until the battery is empty. Send the defective device to our GARDENA Service Centre.

Never attempt to use an incomplete product or one with an unauthorised modification.

#### Power tool use and care

Know how to stop the product quickly in an emergency. Never hold the product by the guard.

Do not use the Accu Shears if the protection equipment (protection cover, quick blade-stop) are damaged.

Do not use ladders whilst operating the product.

Remove the battery:

- before leaving the product unattended for any period;
- before clearing a blockage;
- before checking, cleaning or working on the appliance;
- if you hit an object. Do not use your product until you are sure that the entire product is in a safe operating condition;
- if the product starts to vibrate abnormally. Check immediately. Excessive vibration can cause injury.
- before passing to another person.

#### Maintenance and storage



#### RISK OF INJURY!

**Do not touch blades.**

- When work is finished or interrupted, refit the protective blade cover.

Keep all nuts, bolts and screws secure to be sure the Accu Shears is in safe working condition.

#### Battery safety



#### FIRE RISK!

The battery to be charged must be placed on a non-flammable, heat resistant and non-conductive surface while charging.

Keep corrosive, flammable and easily combustible objects clear of the battery charger and the battery. Do not cover the battery charger and the battery while charging.

Unplug the battery charger immediately in the event of smoke formation or fire.

Only use the original GARDENA Battery Charger for charging. The use of other battery chargers may damage the batteries irreparably and even cause a fire.



#### RISK OF EXPLOSION!

- Protect Accu Shears from heat and fire. Do not leave on radiators or expose to strong sunshine for long periods.



**Do not use the battery charger outdoors.**

- Protect the battery charger from damp or wet areas.

Only use your Accu Shears in an ambient temperature between -10 °C and + 45 °C.

A non-functioning battery must be disposed of correctly. It may not be sent via post. For further details, please contact your local disposal companies.

The battery charger should be checked regularly for signs of damage or ageing (brittleness) and may only be used if it is in perfect condition.

The charger unit provided may only be used to charge the rechargeable batteries supplied with the Accu Shears.

Non-rechargeable batteries must not be charged with this battery charger (danger of fire).

The Accu Shears must not be operated during charging.

After charging, disconnect the charger from the mains and from the battery.

Only charge battery between 10 – 45 °C.

After heavy duty service allow battery to cool down first.


### Storage

The Accu Shears must not be stored over 35 °C or under direct exposure to sunlight.

Do not store the Accu Shears in places with static electricity.

## 3. Assembly

### Fitting / Removing the Wheels:

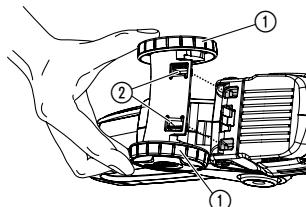

Wheels are only included with the Grass Shears (Art. 8890 / Art. 8893).

(They may be ordered separately from GARDENA Service).

### Fitting the Wheels:


→ From below, press the wheels ① into the grass shears until the two pins ② click into place.

### Removing the Wheels:

→ From the underside of the grass shears, push both wheels together ① and pull them off.

## 4. Initial Operation

### Charging the Accu:

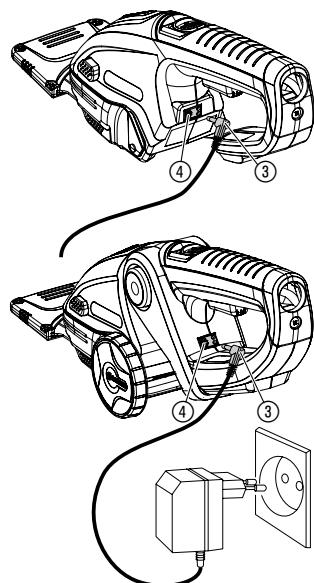

The battery should be fully charged before using for the first time. Charging time, see 10. Technical Data.

The lithium-ion battery can be re-charged in any state of charge, and the charging process can be interrupted at any time without damaging the battery (no memory effect).

The Accu Shears cannot be started during charging.



### WARNING!

**Incorrect mains voltage damages batteries and the battery charger.**

→ Ensure the correct mains voltage.

1. Connect charging cable ③ to the jack ④ of the Accu Shears.

2. Connect battery charger to an electrical socket.

*During charging, the jack ④ flashes green. The battery is charged.*

When the jack ④ lights up green, the battery is fully charged.

Check the charge status regularly while charging.

3. First pull the charging cable ③ out of the jack ④ and then unplug the battery charger from the electrical socket.

When there is a sharp fall in the power of the Accu Shears, the battery needs to be charged. Do not wait until the blade comes to an absolute stop.

If the jack lights up red or yellow during charging then there is an error (see 8. Trouble-Shooting).

## LED Accu Battery Display Level:

After each switch-off of the Accu Shears, the charge level of the battery is shown for approx. 20 sec.

**LED lights up green:** Accu is fully charged.

**LED lights up yellow:** Accu is half-full.

**LED lights up red:** Accu is empty and must be recharged.

## 5. Operation


**WARNING!**  
**Risk of Injury!**




There is a risk of injury if the switching devices installed on the Shears are removed or bridged (e.g. by fastening the on switch to the handle). This prevents the Accu Shears switching off automatically.

→ Never remove or bridge the switching devices.

### Cut grass / shrubs:

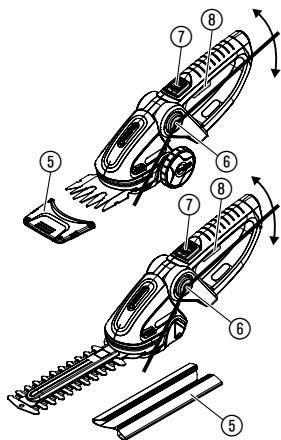

### Telescopic Swivel Handle Art. 8899 (optional):

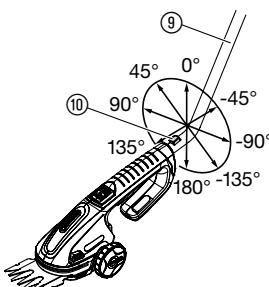

The starting lockout ⑦ prevents your GARDENA Accu Shears from being switched on unintentionally.


#### 1. Grass Shears:

Clear the area to be cut of stones and other solid objects and remove the blade guard ⑤ from the cutting blade.

#### Accu Shrub Shears:

Remove the blade guard ⑤ from the cutting blade.

#### 2. Ergonomic design ComfortCut:

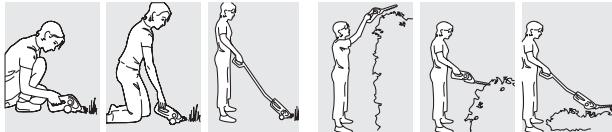

Press elbow joint ⑥ on both sides and adjust motor housing with blade to desired angle.

#### 3. Cutting:

Disengage the starting lockout ⑦ by pushing it forwards and press the ON button ⑧. Release the starting lockout ⑦ again.

The GARDENA Telescopic Swivel Handle Art. No. 8899 for the Accu Shears can be mounted in 45° steps. The swivel handle is fully height adjustable (85 – 120 cm) and can be adapted to suit your height.

→ Slide blade protection ⑤ onto shear blade.


#### Fitting the Telescopic Swivel Handle:

→ Guide the swivel handle ⑨ at the desired angle into the handle holder of the Accu Shears until the lock engages.

#### Removing the Telescopic Swivel Handle:

→ Press the release button ⑩ and pull out the swivel handle.


The starting lockout ⑦ and ON button ⑧ on the Accu Shears no longer function when the swivel handle is mounted.

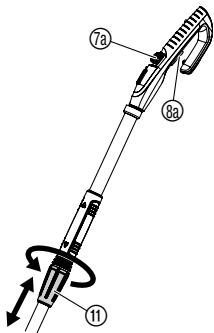

### Cutting with the Telescopic Swivel Handle:

1. Attach the Telescopic Swivel Handle.
2. Loosen the adjusting bolt (11).
3. Set the handle to the correct length and tighten the adjusting bolt (11).
4. Disengage the starting lockout (72) by pushing it forwards and press the ON button (85).
5. Release the starting lockout (72) again.

### Change Shears Set of Blades:

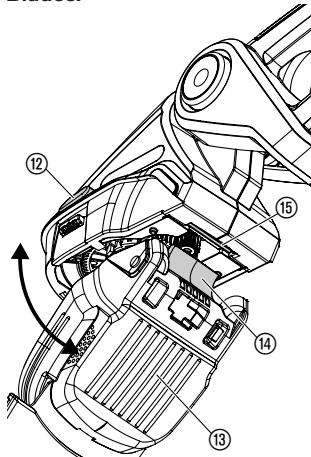

**Please only use original GARDENA Accu Shears Cutting Blades.**

- Grass+Boxwood-Blade Set cutting width 8 cm Art. 2340
- Shrub-Blade Set cutting length 12.5 cm Art. 2342
- Shrub Blade Set cutting length 18 cm Art. 2343

1. Press both lock buttons (12) at the same time, flip up shear blade set (13) and remove.
2. If necessary clean transmission chamber and lubricate gear wheels with some acid-free grease (Vaseline).
3. Place the shear blade set (13) with the snap-in lug (14) into the groove (15) and snap shut until both lock buttons (12) have audibly engaged.
4. If necessary, spray the shear blades with Cleaning Spray Art. 2366. *This increases the running time.*

When first switching on after changing the blade set, there can be an audible click when the cam engages with the shear blade connecting link.

## 6. Putting into Storage

### Storage / Overwintering:

**Store your Accu Shears out of the reach of children.**


1. Charge battery. This increases the life of the battery.
2. Clean Accu Shears and shear blade with GARDENA Cleaning Spray Art. 2366 (see 7. Maintenance).
3. Slide blade protection onto the shear blade.
4. Store Shears in a cool, dry place where they are protected from frost.

### Disposal:

(in accordance with  
RL 2012/19/EU)



The product must not be added to normal household waste.  
It must be disposed of in line with local environmental regulations.

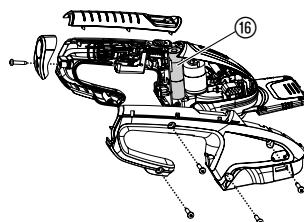
**Disposal of batteries:**

ClassicCut

The GARDENA Accu Shears contains lithium-ion cells that should not be discarded with normal household waste at the end of their life.

Please return the lithium-ion cells to your GARDENA dealer or dispose of them properly at a public recycling centre.

1. Discharge lithium-ion cells completely.
2. Remove lithium-ion cells (16) from the Accu Shears.
3. Dispose of lithium-ion cells (16) properly.

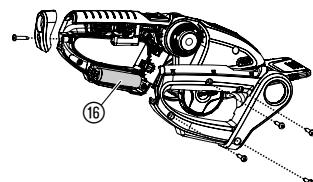

ComfortCut

## 7. Maintenance

**DANGER!**  
*Risk of Injury!*



**Blades can cause injury.**

→ For maintenance work, slide on the blade protection and do not push the safety lock forward.

**DANGER!**  
*Personal Injury and Damage to Property!*



**There is a risk of personal injury and damage to the Shears if you clean them under running water (especially under high pressure).**

→ Never clean your Shears under running water.

**Cleaning the Accu Shears and Oiling the Blades:**

To increase operating time, the Accu Shears should be cleaned and sprayed after each use.

1. Clean your Accu Shears with a damp cloth.
2. Spray shear blade with **GARDENA Cleaning Spray Art. 2366**.

## 8. Trouble-Shooting

**DANGER!**  
*Risk of Injury!*



**Blades can cause serious injury.**

→ When troubleshooting, slide on blade protection and do not push the safety lock of the Accu Shears forward.


**Replacing the Cutting Blades:**



If the Accu Shears do not cut cleanly even after thorough cleaning, the cutting blades are defective and must be replaced with new ones (see 5. Operation "Change blade set").

**Please only use original GARDENA Accu Shears Cutting Blades.**

Problem	Possible Cause	Remedy
<b>During charging socket flashes red</b>	A fault has occurred during charging.	→ Unplug and reinsert charging cable. <i>The fault will be reset.</i>
<b>During operation the charging jack flashes yellow</b>	The motor is overloaded through a blockage of the blades and switches off.	→ Remove blockage. Start Accu Shears anew. <i>The fault is remedied.</i>
<b>Shrub Blade will not function</b>	Cam of the Accu Shears does not engage with the Shrub Blade connecting link ⑯.	→ Pull connecting link ⑯ down and place Shrub Blade on anew.

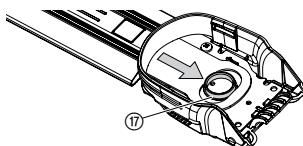

<b>Runtime too low</b>	Blade soiled.	→ Clean and lubricate scissor blade in accordance with the maintenance instructions.
------------------------	---------------	--



For any other malfunctions please contact the GARDENA service department.  
Repairs must only be carried out by GARDENA service departments or specialist dealers authorised by GARDENA.

## 9. Available accessories

<b>GARDENA Telescopic Swivel Handle</b>	Suitable for all GARDENA Accu Shears	Art. 8899
<b>GARDENA Grass + Boxwood Set of Blades</b>	Cutting width 8 cm	Art. 2340
<b>GARDENA Shrub Set of Blades</b>	Cutting length 12.5 cm	Art. 2342
<b>GARDENA Shrub Set of Blades</b>	Cutting length 18 cm	Art. 2343
<b>GARDENA Cleaning Spray</b>	For care and longer operating time	Art. 2366
<b>GARDENA Wheels</b>	Available from GARDENA Service	

## 10. Technical Data

	Art. 8885 ClassicCut	Art. 8886 ClassicCut	Art. 8893 ComfortCut	Art. 8895 ComfortCut
<b>Battery</b>	1 Li-Ion battery		2 Li-Ion batteries	
<b>Battery capacity</b>	1.5 Ah with 3.6 V		1.5 Ah with 7.2 V	
<b>Battery charging time</b>	Approx. 3.5 hrs. 90 %/ up to 5 hrs. 100 %		Approx. 6 hrs. 90 %/ up to 7.5 hrs. 100 %	
<b>Battery charger</b>				
<b>Mains voltage</b>	100 – 240 V / 50 – 60 Hz		100 – 240 V / 50 – 60 Hz	
<b>Rated output current</b>	150 mA		150 mA	
<b>Max. output voltage</b>	19 V (DC)		19 V (DC)	
<b>Shear blade</b>	Grass + Box- wood Set of Blades 8 cm	Shrub Set of Blades 12,5 cm	Grass + Box- wood Set of Blades 8 cm	Shrub Set of Blades 18 cm
<b>Operating time (with fully charged accu)</b>	up to 45 min.	up to 55 min.	up to 90 min.	up to 90 min.
<b>Weight with cutting blade</b>	approx. 640 g	approx. 740 g	approx. 825 g	approx. 990 g
<b>Noise level L<sub>WA</sub><sup>2)</sup></b>	–	measured: 77 dB (A) guaranteed: 79 dB (A)	–	measured: 78 dB (A) guaranteed: 80 dB (A)
<b>Uncertainty k<sub>WA</sub></b>		2 dB (A)		2 dB (A)
<b>Hand/Arm vibrations a<sub>vhw</sub><sup>1)</sup></b>	< 2,5 m/s <sup>2</sup>	< 2,5 m/s <sup>2</sup>	< 2,5 m/s <sup>2</sup>	< 2,5 m/s <sup>2</sup>

Measuring method according to <sup>1)</sup> 60335-2-94 <sup>2)</sup> RL 2000 /14 / EC

Set Art. 8887 consisting of Art. 8885 Classic Cut with Blade Set      Art. 2340, Art. 2342  
 Set Art. 8897 consisting of Art. 8895 Comfort Cut with Blade Set      Art. 2340, Art. 2343

## 11. Service/Warranty

### Warranty:

GARDENA guarantees this product for 2 years (from date of purchase). This guarantee covers all serious defects of the unit that can be proved to be material or manufacturing faults. Under warranty we will either replace the unit or repair it free of charge if the following conditions apply:

- The unit must have been handled properly and in keeping with the requirements of the operating instructions.
- Neither the purchaser or a non-authorised third party have attempted to repair the unit.

The Trimmer Blades are wearing parts and are not covered by the guarantee.

This manufacturer's guarantee does not affect the user's existing warranty claims against the dealer/seller.

If you have any problems with this product, please contact our Service or return the defective unit together with a short description of the problem – in case of guarantee, with a copy of the receipt – postage paid to one of the GARDENA Service Centres listed on the back of this leaflet.

## **D Produkthaftung**

Wir weisen ausdrücklich darauf hin, dass wir nach dem Produkthaftungsgesetz nicht für durch unsere Geräte hervorgerufene Schäden einzustehen haben, sofern diese durch unsachgemäße Reparatur verursacht oder bei einem Teiletausch nicht unsere originale GARDENA Teile oder von uns freigegebene Teile verwendet wurden und die Reparatur nicht vom GARDENA Service oder dem autorisierten Fachmann durchgeführt wird. Entsprechendes gilt für Ergänzungsteile und Zubehör.

## **GB Product Liability**

We expressly point out that, in accordance with the product liability law, we are not liable for any damage caused by our units if it is due to improper repair or if parts exchanged are not original GARDENA parts or parts approved by us, and, if the repairs were not carried out by a GARDENA Service Centre or an authorised specialist. The same applies to spare parts and accessories.

## **F Responsabilité**

Nous vous signalons expressément que GARDENA n'est pas responsable des dommages causés par ses appareils, dans la mesure où ces dommages seraient causés suite à une réparation non conforme, dans la mesure où, lors d'un échange de pièces, les pièces d'origine GARDENA n'auraient pas été utilisées, ou si la réparation n'a pas été effectuée par le Service Après-Vente GARDENA ou l'un des Centres SAV agréés GARDENA. Ceci est également valable pour tout ajout de pièces et d'accessoires autres que ceux préconisés par GARDENA.

## **NL Productaansprakelijkheid**

Wij wijzen er nadrukkelijk op, dat wij op grond van de wet aansprakelijkheid voor producten niet aansprakelijk zijn voor schade ontstaan door onze apparaten, indien deze door onvakkundige reparatie veroorzaakt zijn, of er bij het uitwisselen van onderdelen geen gebruik gemaakt werd van onze originele GARDENA onderdelen of door ons vrijgegeven onderdelen en de reparatie niet door de GARDENA technische dienst of de bevoegde vakman uitgevoerd werd. Ditzelfde geldt voor extra-onderdelen en accessoires.

## **S Produktansvar**

Tillverkaren är inte ansvarig för skada som orsakats av produkten om skadan beror på att produkten har reparerats felaktigt eller om, vid reparation eller utbyte, andra än Original GARDENA reservdelar har använts. Samma sak gäller för kompletteringsdelar och tillbehör.

## **DK Produktansvar**

Vi gør udtrykkeligt opmærksom på, at vi i henhold til produktansvarsloven ikke er ansvarlige for skader forårsaget af vores udstyr, såfremt det sker på grund af uautoriserede reparationer eller hvis dele er skiftet ud og der ikke er anvendt originale GARDENA dele eller dele godkendt af os, eller hvis reparationerne ikke er udført af GARDENA-service eller en autoriseret fagmand. Det samme gælder for ekstra udstyr og tilbehør.

## **FI Tuotevastuu**

Korostamme nimenomaan, että tuotevastuulainoja joillakin emme ole vastuussa laitteistamme johtuneista vahingoista, mikäli nämä ovat aiheutuneet epäasiamukaisesta korjauksesta tai osia vaihdettaessa ei ole käytetty alkuperäisiä GARDENA-varaosia tai hyväksymäämme osia ja korjaukset on suorittanut muu kuin GARDENA-huoltokeskus tai valtuuttamamme ammattihienkilö. Tämä pääte myös lisäosia ja lisävarusteisiin.

## **I Responsabilità del prodotto**

Si rende espressamente noto che, conformemente alla legislazione sulla responsabilità del prodotto, non si risponde di danni causati dai nostri articoli se originati da riparazioni eseguite non correttamente o da sostituzioni di parti effettuate con materiale non originale GARDENA o comunque da noi non approvato e, in ogni caso, qualora l'intervento non venga eseguito da un centro assistenza GARDENA o da personale specializzato autorizzato. Lo stesso vale per le parti complementari e gli accessori.

## **E Responsabilidad de productos**

Advertimos que conforme a la ley de responsabilidad de productos no nos responsabilizamos de daños causados por nuestros aparatos, siempre y cuando dichos daños hayan sido originados por arreglos o reparaciones indebidas, por recambios con piezas que no sean piezas originales GARDENA o bien piezas no autorizadas por nosotros, así como en aquellos casos en que la reparación no haya sido efectuada por un Servicio Técnico GARDENA o por un técnico autorizado. Lo mismo es aplicable para las piezas complementarias y accesorios.

## **P Responsabilidade sobre o produto**

Queremos salientar que segundo a lei da responsabilidade do fabricante, nós não nos responsabilizaremos por danos causados pelo nosso equipamento, quando estes ocorram em decorrência de reparações inadequadas ou da substituição de peças por peças não originais da GARDENA, ou peças não autorizadas. A responsabilidade tornar-se-á nula também depois de reparações realizadas por oficinas não autorizadas pela GARDENA. Esta restrição valerá também para peças adicionais e acessórios.

## **PL Odpowiedzialność za produkt**

Zwracamy Państwa uwagę, że nie ponosimy odpowiedzialności za uszkodzenia naszych maszyn, bądź szkody spowodowane ich wadliwym funkcjonowaniem, powstałe na skutek nieprawidłowo przeprowadzonych napraw lub użycia nieoryginalnych części zamiennych. Naprawy winny być przeprowadzane tylko przez punkty serwisowe Husqvarna lub autoryzowane serwisy. Dotyczy to również części uzupełniających i oprzyrządowania.

## **H Termékszavatosság**

Nyomatékosan utalunk arra a tényre, hogy a természetes szavatossági törvény szerint nem kell jótlárást vállálnunk azokra a károkra, amelyeket nem a mi készülékeink okoztak, ha ezeket szakszerűen javítás okozta vagy egy alkatrész kicsérélésénél nem a mi eredeti GARDENA alkatrészeinek vagy általunk engedélyezett alkatrészeket használtuk fel és a javítást nem a GARDENA szolgálat vagy egy erre felhatalmazott szakember végezte. Hasonlóképpen érvényes ez a kiegészítő alkatrészre és tartozékra is.

## **CZ Odovpovědnost za výrobek**

Výslovně upozorňujeme na to, že podle zákona o odovpovědnosti za výrobek neneseme odovpovědnost za škody způsobené našimi přístroji, pokud byly způsobené neodbornou opravou nebo použitím jiných než našich originálních náhradních dílů GARDENA nebo námí schválených dílů a neprověřeném opravě servisem GARDENA nebo autorizovaným odborníkem. Odpovidající platí i pro doplňkové díly a příslušenství.

## **SK Predmet záruky**

Upozorňujeme dôrazne na to, že podľa zákona o poskytovaní záruk nezodpovedáme za škody spôsobené našimi výrobkami, v prípade, že boli boli vyvolané neodbornými opravami, výmenou dielcov, ktoré nepatria k originálnym dielom GARDENA alebo neboli nami schválené arovnako boli spôsobené servisnými zásahmi, ktoré neboli vykonané servisom GARDENA alebo autorizovaným odborníkom. Rovnako to platí pre doplnky a príslušenstvo.

## **GR Ευθύνη για το προϊόν**

Σας υπενθυμίζουμε ότι, όταν σύμφωνα με το νόμο περί ευθύνης για τα προϊόντα δεν ευθυνόμαστε για ενδεχόμενες βλάβες που προκαλούνται από τη συσκευές μας, εφόσον οφείλονται σε μία ακατάλληλη επισκευή ή σε μια αντικατάσταση τμημάτων για την οποία δεν έχουν χρησιμοποιηθεί τα πρωτότυπα ανταλλακτικά της GARDENA ή τα από μας εγκεκριμένα ανταλλακτικά και σε περίπτωση που δεν εκτελείται η επισκευή από το Τμήμα Εξυπρέπησης Πελατών της GARDENA ή από έναν εξουσιοδοτημένο εξειδικευμένο τεχνίτη. Το ίδιο ισχύει για εξαρτήματα και συμπληρωματικά τμήματα.

## **SLO Jamstvo za izdelek**

Pismeno poudarjamo, da po zakonu jamstva za izdelek nismo odgovorni za škodo, ki bi nastala zaradi uporabe našega izdelka, prav tako tudi ne za škodo ki bi nastala zaradi nepravilnega popravila izdelka ali pri napačni zamenjavi delov, ki niso originalni deli GARDENA ali pri uporabi z naše strani potrjenih delov, ki pa niso bili vgrajeni v servisu GARDENA ali v naši pooblaščeni servisni službi. Enako velja tudi za nadomestne dele in opremo.

## **HR Odgovornost za proizvod**

Izričito napominjemo da u skladu sa Zakonom o odgovornosti za proizvode nismo odgovorni za štete uzrokovane našim uredajima ako su one izazvane nestručnim popravkom ili u slučaju zamjene dijelova nisu korišteni originalni GARDENA dijelovi ili dijelovi koje smo odobrili i popravak nije izvršio GARDENA servis ili ovlašteni stručnjak. Isto vrijedi i za dodatne dijelove i pribor.

## **RO Responsabilitatea legală a produsului**

Mentionam în mod expres ca, în concordanță cu responsabilitatea legală a produsului, nu suntem răspunzători de nici un accident provocat de produsele noastre dacă se datorează reparării necorespunzătoare sau dacă piesele de schimb nu sunt originale GARDENA sau aprobată de GARDENA, sau dacă reparările nu au fost efectuate de un Centru de Service GARDENA sau un specialist autorizat. Aceleași prevederi se aplică și pieselor de schimb și accesoriilor.

## **BG Отговорност за качество**

Изрично подчертаваме, че съгласно закона за отговорност за качество, ние не носим отговорност за вредите причинени от нашите уреди, ако същите са причинени от неправилен ремонт или при подмяната на части не са използвани оригинални части на GARDENA или части одобрени от нас и ремонта не е извършен от сервис на GARDENA или оторизиран специалист. Същото важи за допълнителните части и принадлежности.

## **EST Tootevastustus**

Juhime teie tähelepanu sellele, et tootevastutusseaduse kohaselt ei vastuta me meie seadmete poolt põhjustatud kahjude eest, kui need on tekkinud asjatundmatu paranduse tagajärvel või kui detaili vahetamisel ei kasutatud GARDENA originaalvaruosi ega meie poolt kasutada lubatud varuosi ja kui parandustöid ei ole teinud GARDENA klienditeenindusspetsialistid ega meie volitatud spetsialistid. Sama kehtib lisadetailide ja tarvikute kohta.

## **LT Atsakomybė už produkciją**

Nurodome, kad remdamiesi Atsakomybės už produkciją įstatymu, neatsakome už nuostolius, sukeltus mūsų prietaisų, jei jie atsirado dėl netinkamo remonto, arba, jei keičiant dalis, buvo naudojamos neoriginalios GARDENA dalys arba dalys, kurių mes neleidome naudoti, o remontą atliko ne GARDENA servisas arba neįgaliotasis specialistas. Tas pats galioja papildomoms dalims ir priedams.

## **LV Produkta atbildība**

Mēs skaidri norādām uz to, ka saskaņā ar Produktu atbildības likumu, mēs neatbildam par mūsu iekārtu radītiem zaudējumiem, ciklāl tos ir izraisījis neatbilstošs remonts vai daļu nomaina ar neorigānām GARDENA daļām vai ne ar mūsu norādītajām detalām un remontu nav veicis GARDENA serviss vai pilnvarots speciālists. Tas pats attiecas uz papildinošajām daļām un piederumiem.

<p><b>D EG-Konformitätserklärung</b> Der Unterzeichnende Husqvarna AB, 561 82 Huskvarna, Sweden bestätigt, dass die nachfolgend bezeichneten Geräte in der von uns in Verkehr gebrachten Ausführung die Anforderungen der harmonisierten EU-Richtlinien, EU-Sicherheitsstandards und produktspezifischen Standards erfüllen. Bei einer nicht mit uns abgestimmten Änderung der Geräte verliert diese Erklärung ihre Gültigkeit.</p>	<p><b>H EU-Megfelelőségi nyilatkozat</b> Aláíró, a Husqvarna AB, 561 82 Huskvarna, Sweden igazolja azt, hogy az alábbiakban megnevezett készülékek, az általunk forgalomba hozott kivitelben teljesítik a harmonizációs EU-irányelvök, az EU biztonsági szabványok és a termékre jellemző szabványok követelményeit. Ha a készülékeken a mi beleegyezésünk nélküli változtatást végeznek, akkor ez a nyilatkozat érvényt veszti.</p>
<p><b>GB EU Declaration of Conformity</b> The undersigned Husqvarna AB, 561 82 Huskvarna, Sweden hereby certifies that, when leaving our factory, the units indicated below are in accordance with the harmonised EU guidelines, EU standards of safety and product specific standards. This certificate becomes void if the units are modified without our approval.</p>	<p><b>CZ Prohlášení o shodě EU</b> Podpísaný Husqvarna AB, 561 82 Huskvarna, Sweden potvrzuje, že dále uvedené přístroje v námi do provozu uvedeném provedení splňují požadavky harmonizovaných směrnic EU, bezpečnostních norem EU a norem specifických pro výrobek. Při námi neschváleném změně přístroj ztrácí toto prohlášení platnost.</p>
<p><b>F Certificat de conformité aux directives européennes</b> Le constructeur, soussigné : Husqvarna AB, 561 82 Huskvarna, Sweden déclare qu'à la sortie de ses usines le matériel neuf désigné ci-dessous était conforme aux prescriptions des directives européennes énoncées ci-après et conforme aux règles de sécurité et autres règles qui lui sont applicables dans le cadre de l'Union européenne. Toute modification portée sur ce produit sans l'accord express de GARDENA supprime la validité de ce certificat.</p>	<p><b>SK EU-Vyhľásenie o zhode</b> Nižšie uvedená firma Husqvarna AB, 561 82 Huskvarna, Sweden vyhľasuje, že uvedené zariadenia, ktoré súme uvedli na trh v ich vyhotovení splňajú požiadavky harmonizovaných predpisov EU, bezpečnostných štandardov EU a výrobno-špecifických štandardov. Pri zmeni zariadenia, ktorá nebola odsúhlasená výrobcom stráca toto vyhľasenie platnosť.</p>
<p><b>NL EU-overeenstemmingsverklaring</b> Ondergetekende Husqvarna AB, 561 82 Huskvarna, Sweden bevestigt, dat de volgende genoemde apparaten in de door ons in de handel gebrachte uitvoering voldoen aan de eisen van, en in overeenstemming zijn met de EU-richtlijnen, de EU-eveleidingsstandaard en de voor het product specifieke standaard. Bij een niet met ons afgesproken verandering aan de apparaten verliest deze verklaring haar geldigheid.</p>	<p><b>GR Δήλωση Συμφόρωσης προς τις Οδηγίες της ΕΕ</b> Η υπογράφουσα Husqvarna AB, 561 82 Huskvarna, Sweden δηλώνει, ότι τα εξής αναφερόμενα εκδίδομενα από την εταιρία μας προϊόντα ανταποκρίνονται σε όλες τις εναρμονισμένες προδιαγραφές της ΕΕ, στα πρότυπα ασφαλείας της ΕΕ καθ απόδικα για το προϊόν προτύπια. Σε μια μη συμφωνημένη με την εταιρία μας τροποποίηση των συσκευών αυτή η δήλωση χάνει την ισχύ της.</p>
<p><b>S EU Tillverkarintyg</b> Undertecknade firma Husqvarna AB, 561 82 Huskvarna, Sweden intygar härmed att nedan nämnda produkter överensstämmer med EU:s direktiv, EU:s säkerhetsstandard och produktspecifikation. Detta intyg upphör att gälla om produkten ändras utan varit tillstånd.</p>	<p><b>SLO EV-izjava o skladnosti</b> Podpisani prvoizvajalec »Husqvarna AB, 561 82 Huskvarna, Sweden« s podpisom potrdjuje, da sledete opisana naprava, ki smo jo postali na tržišče izpolnjuje zahteve harmoniziranih standardov ES-smernic, ES-varnostnih standardov in izdelku specifičnih standardov. V primeru sprememb na napravi brez našega pisnega dovoljenja ta izjava izgubi svoj pomen in veljavnost.</p>
<p><b>DK EU Overensstemmelse certifikat</b> Undertegnede Husqvarna AB, 561 82 Huskvarna, Sweden bekræfter hermed, at enhederne listet herunder, ved afsendelse fra fabrikken, er i overensstemmelse med harmoniserede EU retningslinjer, EU sikkerheds standarder og produkt specifikations standarder. Dette certifikat træder ud af kraft hvis enhederne er ændret uden vor godkendelse.</p>	<p><b>HR Izjava o sukladnosti EU-a</b> Dolje potpisana tvrtka Husqvarna AB, 561 82 Huskvarna, Sweden ovime potvrđuje da dolje navedeni uređaji u izvedbi plasirano na tržište ispunjavaju zahteve harmoniziranih EU smjernica, EU sigurnosnih normi i normi za određene proizvode. Ova izjava postaje nistavna u slučaju izmjene uređaja koje nismo odobrili.</p>
<p><b>FI EY-vaatimustenmukaisuusvakuuutus</b> Allekirjoittanut Husqvarna AB, 561 82 Huskvarna, Sweden vaatuu, että allamainitut laitteet täytävät teknialtaamme lähtöessään yhdenmukaiset tyyppi- ja tekniset vaatimukset. Laiteesiin tehdyn muutoksen jälkeen ei ole sovitua kanssamme, johtavat tämän vaatuksen raukeamiseen.</p>	<p><b>RO UE-Certificat de conformitate</b> Prin prezenta Husqvarna AB, 561 82 Huskvarna, Sweden, certifica faptul ca, în momentul în care produsele menționate mai jos les din fabrică sunt în concordanță cu directivele UE, standardele de siguranță UE și standardele specifice ale produsului UE. Acest certificat devine nul în cazul modificării aparatului fără aprobarea noastră.</p>
<p><b>I Dichiarazione di conformità alle norme UE</b> La sottoscritta Husqvarna AB, 561 82 Huskvarna, Sweden certifica che il prodotto qui di seguito indicato, nei modelli da noi commercializzati, è conforme alle direttive armonizzate EU nonché agli standard di sicurezza e agli standard specifici di prodotto. Qualunque modifica apportata al prodotto senza nostra specifica autorizzazione invalida la presente dichiarazione.</p>	<p><b>BG ЕС-Декларация за съответствие</b> Подписаната фирма Husqvarna AB, 561 82 Huskvarna, Sweden декларира, че описанието по-долу уреди, пуснати в продажба съгласно нашата спецификация, изпълняват изискванията на гармонизирани ЕС-директиви, ЕС-стандарти за безопасност и специфичните производствени стандарти. При промяна на уреда, която не е съгласувана с нас, тази декларация губи своята валидност.</p>
<p><b>E Declaración de conformidad de la UE</b> El que subscrive Husqvarna AB, 561 82 Huskvarna, Sweden declara que la presente mercancía, objeto de la presente declaración, cumple con todas las normas de la UE, en lo que a normas técnicas, de homologación y de seguridad se refiere. En caso de realizar cualquier modificación en la presente mercancía sin nuestra previa autorización, esta declaración pierde su validez.</p>	<p><b>EST Eli vastavusdeklaratsioon</b> Allkirjutanud Husqvarna AB, 561 82 Huskvarna, Sweden kinnitab, et kirjeldatud seade vastab meie poolt ringlusse viitud kujul ELI harmoniseeritud direktiivide, ELI ohutustandardide ja tooteaga seotud standardidele. Meie kooskõlastamata muudatuse tegemise korral seadmel kaotab see deklaratsioon kehtivuse.</p>
<p><b>P Certificado de conformidade da UE</b> Os abaixo mencionados Husqvarna AB, 561 82 Huskvarna, Sweden, por este meio certificam que os sair da fábrica osaparelhos abaixo mencionados estão de acordo com as diretrizes harmonizadas da UE, padrões de segurança e de produtos específicos. Este certificado ficará nulo se as unidades forem modificadas sem a nossa aprovação.</p>	<p><b>LT ES Atitikties deklamacija</b> Pasirašanti firma Husqvarna AB, 561 82 Huskvarna, Sweden patvirtina, kad žemiau nurodyti prietaisai ir jų modeliai, kuriuos paleidome į apyvartą, patenkiniai harmonizuotas ES direktyvās, ES saugumo standartus ir specifinius gaminių standartus. Atlikus bet kokią prietaiso pakeitimą, kuris néra suderintas su mumsiems, ši deklaracija praranda galiojimą.</p>
<p><b>PL Deklaracja zgodności Unii Europejskiej</b> Husqvarna AB, 561 82 Huskvarna, Sweden potwierdza, że poniżej określone urządzenia w wersji oferowanej przez nas do sprzedzania spełnia wymagania harmonizowanych dyrektyw Unii Europejskiej, standardu bezpieczeństwa Unii Europejskiej i standardu specyficzego dla tego typu produktów. W przypadku zmiany urządzenia, która nie została z nami uzgodniona, niniejsza deklaracja traci moc obowiązywaną.</p>	<p><b>LV ES-atbilstības deklarācija</b> Parakstījusies Husqvarna AB, 561 82 Huskvarna, Sweden, Vācija apstiprina, ka sekojoši apzīmētie iekārtas, kuras mēs izplatām, savā izplūdījumā atbilst harmonizētajām ES direktyvām, ES drošības standartiem un produkta specifikācijām standartiem. Ar mūsu neapstiprinātām izmaiņām iekārtā šī deklarācija zaudē savu derīgumu.</p>

Bezeichnung der Geräte: Description of the units: Désignation du matériel : Omschrijving van de apparaten: Produktbeschreibung: Beskrivelse af produktet: Laitteiden nimitys: Descrizione dei prodotti: Descripción de la mercancía: Descrição dos aparelhos: Nazwa urządzenia: A készüléknek megnevezése: Označení přístrojů: Označenie zariadenia: Ovojnosička tης συσκευής: Opis naprave: Oznaka uredaja:  Descrierea articolelor: Обозначение на уредите: Seadmete nimetus: Prietaisų pavadinimas: Iekārtu apzīmējums:	Accu-Schere Accu Shears Cisailles sur accu Accuschaar Accu-sax Accu-saks Accu-sakset Forbici a batteria Tijeras cortacésped con Accu Tesouras Accu Nozyce akumulatorowe Akumulátoros olló Akumulátorové nůžky Akumulátorové nožnice Ψαλίδι μπαταρίας Aku-škarje Škare s akumulatorskim sustavom Foarfeca cu acumulator Accu-ножица Akukäärid Akumuliatorinės žirklės Accu šķēres	Schall-Leistungspegel: Noise level: Puissance acoustique : Geluidsniveau: Ljudnivå: Lydryksniveau: Melun tehotaso: Livello rumorosità: Nivel sonoro: Nível de ruido: Poziom natężenia dźwięku: Zajteljesítmény szint: Hluková hladina výkonu: Výkonová hodnota hluku: Επίπεδο ισχύος ήχου: Nivo hrupa: Razina zvučne snage Nivel de putere acustică: Ниво на шума: Helivõimsuse tase: Garso stiprumo lygis: Trokšņu jaudas līmenis:	gemessen/garantiert measured/guaranteed mesurée/garantie gemeten/ gegarandeerd uppmätt/garanterad afmålt/garanti mitattu/taattu testato/garantito medido/garantizado medido/garantido zmierzone/gwarantowane mér/garantált naměřeno/garantováno meraná/garantovaná μετρηθκαν/εγνημένα izmerjeno/zagotovljeno izmjereno/garantirano mäsurat/garantat измерено/гарантирано mőödetud/garantitut išmatuotas/garantutas izmērītās/garantētās		
Typen: Types: Types : Type: Tipu:br/>Typ: Typipit: Tipi: Tipos: Tipos: Tipos: Typy:	Típusok: Typy: Typy: Típus: Tipi: Tipovi: Tipuri: Tipi: Típove: Tüübidi: Tipai: Tipi:	Art.-Nr.: Art. No.: Référence : Art.nr.: Art.nr.: Art. nr.: Tuoteno: Art.: Art. No.: Art. no: Nr artykulu:	Cikkszám: Číslo artiklu: Art.: Apíθ. eíδους: Art št.: br. art. Nr art.: Арт. номер: Toote nr : Gaminio nr.: Izstr.:	<b>Art. 8886</b> <b>Art. 8895</b>	<b>77 dB (A) / 79 dB (A)</b> <b>78 dB (A) / 80 dB (A)</b>
<b>ClassicCut</b> <b>ClassicCut</b> <b>ComfortCut</b> <b>ComfortCut</b>	<b>8885</b> <b>8886</b> <b>8893</b> <b>8895</b>				
EU-Richtlinien: EU direktives: Directives européennes : EU-richtlijnen: EU direktif: EU Retningslinjer: EY-direktiivit: Directive UE: Normativa UE: Directrices da UE: Dyrektwy Unii Europejskiej:	EU-irányelvezek: Směrnice EU: EU-Predpisy: Οδηγίες της ΕΕ: ES-smernice: EU smernice: Directive UE: EC-директиви: ELI direktiivid: ES direktivos: ES direktivas:	Rok nadania oznakowania CE: CE-jelzés elhelyezésének éve:	Rok umístění značky CE: Rok udelenia značky CE: Έτος σήματος CE: Leto namestive CE-oznake: Anul de marcarea CE: Година на поставяне на CE-маркировка: CE-märkistuse paigaldamise aasta: Metal, kuriaiš pažymėta CE-ženklui: CE-markējuma uzlikšanas gads:		
<b>2006/42/EG</b> <b>2006/95/EG</b> (bis 19.04.2016), <b>2004/108/EG</b> (bis 19.04.2016), <b>2000/14/EG</b> <b>2014/35/EG</b> (ab 20.04.2016) <b>2014/30/EG</b> (ab 20.04.2016)			<b>2010</b>		
Harmonisierte EN: <b>EN 60745-1</b> <b>EN 60745-2-15</b> <b>EN ISO 12100</b>	<b>IEC 60335-1</b> <b>IEC 60335-2-94</b> <b>EN 61558-1</b> <b>EN 61558-2-16</b>				
Hinterlegte Dokumentation: GARDENA-Technische Dokumentation, M. Kugler 89079 Ulm Deposited Documentation: GARDENA Technical Documentation, M. Kugler 89079 Ulm Documentation déposée: Documentation technique GARDENA, M. Kugler 89079 Ulm	Konformitätsbewertungs-verfahren: Nach 2000/14/ EG Art. 14 Anhang V Conformity Assessment Procedure: according to 2000/14/EC Art.14 Annex V Procédure d'évaluation de la conformité : Selon 2000/14/CE art. 14 Annexe V				
 Reinhard Pompe Vice president					

<b>Deutschland / Germany</b> GARDENA GmbH Central Service Hans-Lorenser-Straße 40 D-89079 Ulm Produktfragen: (+49) 731 490-123 Reparaturen: (+49) 731 490-290 service@gardena.com	<b>China</b> Husqvarna (China) Machinery Manufacturing Co., Ltd. No. 1355, Jia Xin Rd., Ma Lu Zhen, Jia Ding Dist., Shanghai 201801 Phone: (+86) 21 59159629 Domestic Sales www.gardena.com.cn	<b>Georgia</b> ALD Group Bellashvili 8 1159 Tbilisi	<b>Luxembourg</b> Magasins Jules Neuberg 39, rue Jacques Stas Luxembourg-Gasperich 2549 Case Postale No. 12 Luxembourg 2010 Phone: (+352) 40 14 01 api@neuberg.lu	<b>Singapore</b> Hy-Ray PRIVATE LIMITED 40 Jalan Pemimpin #02-08 Tat Ann Building Singapore 577185 Phone: (+65) 6253 2277 shiyang@hyray.com.sg
<b>Albania</b> COBALT Sh.p.k. Rr. Siri Kodra 1000 Tirana	<b>Colombia</b> Husqvarna Colombia S.A. Calle 18 No. 68 D-31, zona Industrial de Montevideo Bogotá, Cundinamarca Tel. 571 2922700 ext. 105 jairo.salazar@ husqvarna.com.co	<b>Great Britain</b> Husqvarna UK Ltd Preston Road Aycliffe Industrial Park Newton Aycliffe County Durham DL5 6UP info.gardena@ husqvarna.co.uk	<b>Mexico</b> AFOSA Av. Lopez Mateos Sur # 5019 Col. La Calma 45070 Zapopan, Jalisco Mexico Phone: (+52) 33 3818-3434 iornojo@afosa.com.mx	<b>Slovak Republic</b> Husqvarna Česko s.r.o. Turkova 2319/56 149 00 Praha 4 – Chodov Bezplatná infolinka: 800 154 044 servis@sk.husqvarna.com
<b>Argentina</b> Husqvarna Argentina S.A. Av del Libertador 5954 – Piso 11 – Torre B (C1428ARP) Buenos Aires Phone: (+54) 11 5194 5000 info.gardena@ ar.husqvarna.com	<b>Greece</b> Π.ΠΑΠΑΔΟΠΟΥΛΟΣ ΑΕΒΕ Λεωφ. Αθηνών 92 Αθήνα Τ.Κ.104 42 Ελλάδα Τηλ. (+30) 210 5193100 info@papadopoulos.gr	<b>Hungary</b> Husqvarna Magyarország Kft. Ezred u. 1-3 1044 Budapest Telefon: (+36) 1 251-4161 vevoszolgatalt.husqvarna@ husqvarna.hu	<b>Moldova</b> Convel S.R.L. 290A Muncesti Str. 2002 Chisinau	<b>Slovenia</b> Husqvarna Austria GmbH Consumer Products Industriezeile 36 4010 Linz Tel.: (+43) 732 77 01 01 - 90 consumer.service@ husqvarna.at
<b>Armenia</b> Garden Land Ltd. 61 Tigran Mets 0005 Yerevan	<b>Croatia</b> SILK ADRIA d.o.o. Josipa Lončara 3 10090 Zagreb Phone: (+385) 1 3794 580 silk.adria@zg-t.com.hr	<b>Iceland</b> Ó. Johnson & Kaaber Tunguháls 1 110 Reykjavík ooj@oik.is	<b>Netherlands</b> GARDENA Nederland B.V. Postbus 50176 1305 AD ALMERE Phone: (+31) 36 521 00 00 info@gardena.nl	<b>South Africa</b> Husqvarna South Africa (Pty) Ltd Postnet Suite 250 Private Bag X6, Cascades, 3202 South Africa Phone: (+27) 33 846 9700 info@gardena.co.za
<b>Australia</b> Husqvarna Australia Pty. Ltd. Locked Bag 5 Central Coast BC NSW 2252 Phone: (+61) 02 4352 7400 customer.service@ husqvarna.com.au	<b>Cyprus</b> Med Marketing 17 Digeni Arkite Av P.O. Box 27017 1641 Nicosia	<b>Ireland</b> Husqvarna UK Ltd Preston Road Aycliffe Industrial Park Newton Aycliffe County Durham DL5 6UP info.gardena@ husqvarna.co.uk	<b>Neth. Antilles</b> Jonka Enterprises N.V. Sta. Rosa Weg 196 P.O. Box 8200 Curaçao Phone: (+599) 9 767 66 55 pgm@jonka.com	<b>Spain</b> Husqvarna España S.A. C/Basauri, nº 6 La Florida 28023 Madrid Phone: (+34) 91 708 05 00 atencioncliente@gardena.es
<b>Austria / Österreich</b> Husqvarna Austria GmbH Industriezeile 36 4010 Linz Tel.: (+43) 732 77 01 01-485 service.gardena@ husqvarnagroup.com	<b>Czech Republic</b> Husqvarna Česko s.r.o. Turkova 2319/56 149 00 Praha 4 – Chodov Bezplatná infolinka: 800 100 425 servis@cz.husqvarna.com	<b>Croatia</b> SILK ADRIA d.o.o. Josipa Lončara 3 10090 Zagreb Phone: (+385) 1 3794 580 silk.adria@zg-t.com.hr	<b>New Zealand</b> Husqvarna New Zealand Ltd. Preston Road Aycliffe Industrial Park Newton Aycliffe County Durham DL5 6UP info.gardena@ husqvarna.co.uk	<b>Suriname</b> Agrofix n.v. Verlengde Hogestraat #22 Phone: (+597) 472426 agrofix@sr.net Pobox : 2006 Paramaribo Suriname – South America
<b>Azerbaijan</b> Firm Progress a. Aliyev Str. 26A 1052 Baku	<b>Cyprus</b> Med Marketing 17 Digeni Arkite Av P.O. Box 27017 1641 Nicosia	<b>Denmark</b> GARDENA / Husqvarna Consumer Outdoor Products Salgsafdelingen Danmark Box 9003 S-200 39 Malmö info@gardena.dk	<b>Italy</b> Husqvarna Italia S.p.A. Via Como 72 23868 VALMADRELLA (LC) Phone: (+39) 0341.203.111 info@gardenaitalia.it	<b>Norway</b> GARDENA Husqvarna Consumer Outdoor Products Salgskontor Norge Kverkeveien 6 1540 Vestby info@gardena.no
<b>Belgium</b> GARDENA Belgium NV/SA Sterrebeekstraat 163 1930 Zaventem Phone: (+32) 2 720 92 12 Mail: info@gardena.be	<b>Czech Republic</b> Husqvarna Česko s.r.o. Turkova 2319/56 149 00 Praha 4 – Chodov Bezplatná infolinka: 800 100 425 servis@cz.husqvarna.com	<b>Denmark</b> GARDENA / Husqvarna Consumer Outdoor Products Salgsafdelingen Danmark Box 9003 S-200 39 Malmö info@gardena.dk	<b>Japan</b> KAKUCHI Co. Ltd. Sumitomo Realty & Development Kojimachi BLDG., 8F 5-1 Nibannocy Chiyoda-ku Tokyo 102-0084 Phone: (+81) 33 264 4721 m_iishi@kaku-ichi.co.jp	<b>Peru</b> Husqvarna Perú S.A. Jr. Ramón Cárcamo 710 Lima 1 Tel: (+511) 1 3320 400 ext. 4116 juan.remucho@ husqvarna.com
<b>Bosnia / Herzegovina</b> SILK TRADE d.o.o. Industrska zona Bukva bb 74260 Tešanj	<b>Dominican Republic</b> BOSQUESA, S.R.L Carretera Santiago Licey Km. 5 ½ Esquina Copal II. Santiago	<b>Japan</b> KAKUCHI Co. Ltd. Sumitomo Realty & Development Kojimachi BLDG., 8F 5-1 Nibannocy Chiyoda-ku Tokyo 102-0084 Phone: (+81) 33 264 4721 m_iishi@kaku-ichi.co.jp	<b>Poland</b> Husqvarna Poland Spółka z o.o. ul. Wysockiego 15 b 03-371 Warszawa Phone: (+48) 22 330 96 00 gardena@husqvarna.com.pl	<b>Sweden</b> Husqvarna AB S-561 82 Huskvarna info@gardena.se
<b>Brazil</b> Husqvarna do Brasil Ltda Av. Francisco Matarazzo, 1400 – 1º andar São Paulo – SP CEP: 05001-903 Tel: 0800-112252 marketing.br.husqvarna@ husqvarna.com.br	<b>Dominican Republic</b> BOSQUESA, S.R.L Carretera Santiago Licey Km. 5 ½ Esquina Copal II. Santiago	<b>Ecuador</b> Husqvarna Ecuador S.A. Arujos E-181 y 10 de Agosto Quito, Pichincha Tel.: (+593) 22800739 francisco.jacome@ husqvarna.com.ec	<b>Kazakhstan</b> LAMED LTD 155/1, Tazhibayevi Str. 050600 Almaty IP Schmidt Abayavenue 3B 110 005 Kostanay	<b>Switzerland / Schweiz</b> Husqvarna Schweiz AG Consumer Products Industriestrasse 10 5506 Mägenwil Phone: (+41) 0 62 887 37 90 info@gardena.ch
<b>Bulgaria</b> Хускварна България ЕООД Бул. „Андрей Ляпчев“ № 72 1799 София Тел.: (+359) 02/ 97 50 76 www.husqvarna.bg	<b>Ecuador</b> Husqvarna Ecuador S.A. Arujos E-181 y 10 de Agosto Quito, Pichincha Tel.: (+593) 22800739 francisco.jacome@ husqvarna.com.ec	<b>Estonia</b> Husqvarna Eesti OÜ Consumer Outdoor Products Kesk tee 10, Aaviku küla Rae vald Hari jaakond 75305 Estonia kontakt.etj@husqvarna.ee	<b>Korea</b> Kyung Jin Trading CO., LTD. 107-4, SunDuk Bld., Yangjae-dong, Seocho-gu, Seoul, (zipcode: 137-891) Phone: (+82) 0574-6300	<b>Turkey</b> GARDENA Dost Dış Ticaret Mümessilik A.Ş. Sanayi Cad. Adil Sokak No: 1/ B Kartal 34873 İstanbul Phone: (+90) 216 38 93 939 info@gardena-dost.com.tr
<b>Canada / USA</b> GARDENA Canada Ltd. 100 Summerlea Road Brampton, Ontario L6T 4X3 Phone: (+1) 905 792 93 30 info@gardenaacanada.com	<b>Estonia</b> Husqvarna Eesti OÜ Consumer Outdoor Products Kesk tee 10, Aaviku küla Rae vald Hari jaakond 75305 Estonia kontakt.etj@husqvarna.ee	<b>Finland</b> Oy Husqvarna Ab Consumer Outdoor Products Lauttarankatu 8 / BL 3 00581 HELSINKI info@gardena.fi	<b>Kyrgyzstan</b> Alye Maki av. Moladaya Guardir J 3 720014 Bishkek	<b>Ukraine / Україна</b> ТОВ „Хускварна Україна“ бул. Васильківська, 34, офіс 204-р 03022, Київ Tel. (+381) 044 498 39 02 info@gardena.ua
<b>Chile</b> Maquinarias Agroforestales Ltda. (Maga Ltda.) Santiago, Chile Avda. Chesterton # 8355 comuna Las Condes Phone: (+56) 2 202 4417 Dalton@maga.cl Zipcode: 7560330	<b>Finland</b> Oy Husqvarna Ab Consumer Outdoor Products Lauttarankatu 8 / BL 3 00581 HELSINKI info@gardena.fi	<b>France</b> Husqvarna France 9/11 Allée des pierres mayettes 92635 Gennevilliers Cedex France http://www.gardena.com/fr N° AZUR: 0 810 00 78 23 (Prix d'un appel local)	<b>Latvia</b> Husqvarna Latvija Consumer Outdoor Products Bākužu iela 6 LV-1024 Riga info@husqvarna.lv	<b>Russia / Россия</b> ООО „Хускварна“ 141400, Московская обл., г. Химки, улица Ленинградская, здание 39, стр. 6 Бизнес Центр „Химки Бизнес Парк“, помещение ОВ02_04 http://www.gardena.ru
<b>Canada / USA</b> GARDENA Canada Ltd. 100 Summerlea Road Brampton, Ontario L6T 4X3 Phone: (+1) 905 792 93 30 info@gardenaacanada.com	<b>France</b> Husqvarna France 9/11 Allée des pierres mayettes 92635 Gennevilliers Cedex France http://www.gardena.com/fr N° AZUR: 0 810 00 78 23 (Prix d'un appel local)	<b>Lithuania</b> UAB Husqvarna Lietuva Consumer Outdoor Products Ateities pl. 77/C LT-52104 Kaunas centras@husqvarna.lt	<b>Serbia</b> Domet d.o.o. Autoput za Novi Sad bb 11273 Belgrade Phone: (+381) 11 84 88 12 miroslav.jelina@domet.rs	<b>Venezuela</b> Corporación Casa y Jardín C.A. Av. Caroni, Edif. Trezmen, PB. Colinas de Bello Monte. 1050 Caracas. Tlf: (+58) 212 992 33 22 info@casavardin.net.ve
<b>Chile</b> Maquinarias Agroforestales Ltda. (Maga Ltda.) Santiago, Chile Avda. Chesterton # 8355 comuna Las Condes Phone: (+56) 2 202 4417 Dalton@maga.cl Zipcode: 7560330	<b>France</b> Husqvarna France 9/11 Allée des pierres mayettes 92635 Gennevilliers Cedex France http://www.gardena.com/fr N° AZUR: 0 810 00 78 23 (Prix d'un appel local)	<b>Lithuania</b> UAB Husqvarna Lietuva Consumer Outdoor Products Ateities pl. 77/C LT-52104 Kaunas centras@husqvarna.lt	<b>Serbia</b> Domet d.o.o. Autoput za Novi Sad bb 11273 Belgrade Phone: (+381) 11 84 88 12 miroslav.jelina@domet.rs	<b>Singapore</b> Hy-Ray PRIVATE LIMITED 40 Jalan Pemimpin #02-08 Tat Ann Building Singapore 577185 Phone: (+65) 6253 2277 shiyang@hyray.com.sg
<b>Temuco, Chile</b> Avda. Valparaíso # 01466 Phone: (+56) 45 222 126 Zipcode: 4780441				