

TCS Li-18/20 Art. 8866

**D Betriebsanleitung**  
Accu-Hochentaster

**GB Operating Instructions**  
Battery Pole Pruner

**F Mode d'emploi**  
Élagueuse sur perche sur accu

**NL Gebruiksaanwijzing**  
Accu-telescoopkettingzaag

**S Bruksanvisning**  
Batteridriven Kvistsåg

**DK Brugsanvisning**  
Akku-grensav til højtsiddende grene

**FI Käyttöohje**  
Accu-raivaussaha

**N Bruksanvisning**  
Accu-beskæringssaks

**I Istruzioni per l'uso**  
Potatore telescopico a batteria

**E Instrucciones de empleo**  
Sierra de pértiga telescópica  
con accu

**P Manual de instruções**  
Serra accu para poda em altura

**PL Instrukcja obsługi**  
Akumulatorowa pilarka łańcuchowa  
z trzonkiem teleskopowym

**H Használati utasítás**  
Akkumulátoros magassági ágvágó

**CZ Návod k obsluze**  
Akumulátorová teleskopická  
vyvětovací pilka

**SK Návod na obsluhu**  
Akumulátorový teleskopický  
odvetvovač

**GR Οδηγίες χρήσης**  
Τηλεσκοπικό αλυσοτρίονο  
μπαταρίας

**RUS Инструкция по эксплуатации**  
Аккумуляторный высоторез

**SLO Navodilo za uporabo**  
Akumulatorski obrezovalnik  
za veje

**HR Upute za uporabu**  
Akumulatorska teleskopska pila

**SRB Uputstvo za rad**  
**BIH** Akumulatorska teleskopska  
testera

**UA Інструкція з експлуатації**  
Акумуляторного телескопічного  
сучкоріза-пилки

**RO Instrucțiuni de utilizare**  
Foarfecă cu acumulator pentru  
rărirea crengilor copacilor înalți

**TR Kullanma Kılavuzu**  
Accu High Kesici

**BG Инструкция за експлоатация**  
Телескопична акумулаторна  
кастракча

**AL Manual përdorimi**  
Sharrë degësh me bateri

**EST Kasutusjuhend**  
Akuga körglöikur

**LT Eksplotavimo instrukcija**  
Akumuliatorinė aukštąjapovė

**LV Lietošanas instrukcija**  
Atzarotājs ar akumulatoru un  
teleskopisko kātu

# GARDENA Battery Pole Pruner TCS Li-18/20



## Translation of the original German operating instructions.

Please read the operating instructions carefully and observe the notes given. Use these operating instructions to familiarise yourself with the product, the proper use and the safety instructions.



For safety reasons, children and young people under the age of 16, as well as people not familiar with these operating instructions, may not use this product. Persons with reduced physical or mental abilities may use the product only if they are supervised or instructed by a responsible person. Children must be supervised to ensure that they do not play with the product.

→ Keep these operating instructions in a safe place.

## Contents:

1. Area of applications of your GARDENA	
Battery Pole Pruner .....	16
2. Safety Instructions .....	16
3. Assembly .....	19
4. Initial Operation .....	20
5. Operation .....	22
6. Storage .....	23
7. Maintenance .....	24
8. Troubleshooting .....	25
9. Available accessories .....	26
10. Technical Data .....	26
11. Service/Warranty .....	27

## 1. Area of applications of your GARDENA Battery Pole Pruner

### Correct Use:

The GARDENA Battery Pole Pruner is intended for delimiting trees, hedges, shrub and bushes with limbs of up to 8 cm in diameter in private domestic gardens or allotments.

Compliance with these operating instructions is a prerequisite for the proper use of this Pole Pruner.

### Please note:



### WARNING! Risk of injury!

**The Pole Pruner must not be used for felling trees.  
Cut branches into parts to ensure that you cannot be struck by falling branches or that fallen branches can bounce up from the soil.**

**Do not stand under the branch while cutting.**

## 2. Safety Instructions



If not used properly this product can be dangerous. The warnings and safety instructions must be followed to ensure reasonable safety and efficiency in using this product. The operator is responsible for following the warnings and instructions in this manual and on the product. Never use the product unless the guards provided by the manufacturer are in the correct position.

## Explanation of Symbols on your product.



### **WARNING!**

Read the user instructions carefully to make sure you understand all the controls and what they do.



Risk of fatal injury due to electric shock!  
Keep at least 10 m away from electricity lines.



Always wear protective gloves.



Always wear non-slip safety shoes.




Always wear a hard hat.



Always wear eye and ear protection.



Do not expose to rain.  
Do not leave the product outdoors while it is raining.

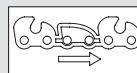

Direction of movement of the chain.

## General Power Tool Safety Warnings



### **WARNING ! Read all safety warnings and all instructions.**

Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

### Save all warnings and instructions for future reference.

The term "power tool" in the warnings refers to your mains operated (corded) power tool or battery-operated (cordless) power tool.

#### **1) Work area safety**

a) Keep work area clean and well lit.  
*Cluttered or dark areas invite accidents.*

b) Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.

c) Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

#### **2) Electrical safety**

a) Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adaptor plugs with earthed (grounded) power tools.  
*Unmodified plugs and matching outlets will reduce risk of electric shock.*

b) Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.

c) Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.

d) Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.

e) When operating a power tool outdoors, use an extension cord suitable for outdoor use.

*Use of a cord suitable for outdoor use reduces the risk of electric shock.*

f) If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply. Use of an RCD reduces the risk of electric shock.

#### **3) Personal safety**

a) Stay alert, watch what you are doing and use common sense when operating a power tool. Do not operate power tools if you are tired or ill or if you are under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.

b) Use personal protective equipment. Always wear eye protection. Personal protective equipment can be purchased from specialist traders.

*Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.*

c) Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool. Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.

d) Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tools may result in personal injury.

e) Do not overreach. In order to prevent overtiredness, alternate working positions and ensure sufficient breaks are taken. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.

f) Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.

g) If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.  
*Use of dust collection can reduce dust-related hazards.*

#### **4) Power tool use and care**

a) Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.

**b) Do not use the power tool if the switch does not turn it on and off.**

*Any power tool that cannot be controlled with the switch is dangerous and must be repaired.*

**c) Disconnect the plug from the power source and / or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.**

**d) Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.**

*Power tools are dangerous in the hands of untrained users.*

**e) Maintain power tools.**

**Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use.**

*Many accidents are caused by poorly maintained power tools.*

**f) Keep cutting tools sharp and clean.**

*Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.*

**g) Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.**

*Use of the power tool for operations different from those intended could result in a hazardous situation.*

**5) Battery tool use and care**

**a) Recharge only with the charger specified by the manufacturer.**

*A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.*

**b) Use power tools only with specifically designated battery packs.**

*Use of any other battery packs may create a risk of injury and fire.*

**c) When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.**

*Shorting the battery terminals together may cause burns or a fire.*

**d) Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.**

*Liquid ejected from the battery may cause irritation or burns.*

**6) Service**

**a) Have your power tool serviced by a qualified repair person using only identical replacement parts.**

*This will ensure that the safety of the power tool is maintained.*

**Pole Pruner – safety instructions:**

- Always ensure that body parts are kept clear of the chain area. Do not remove the cut material or hold the material that is to be cut when the blades are

**turning. Only remove blocked material when the device is switched off.**

*One moment of negligence when handling the Pole Pruner can cause severe injuries.*

- **Always carry the Pole Pruner at its handle, and only when the chain is not moving. During transport or whilst storing the Pole Pruner, the bar cover must be applied. Proper use of the Pole Pruner reduces the risk of injuries by the chain.**

- **Hold the power tool by the insulated handle surfaces as the chain may come into contact with hidden power cables.**

*The contact of the bar with a "live" wire may energize metal parts of the device and lead to electric shock.*

**Additional Safety Recommendations**

**Work area safety**

Only use the Pole Pruner as intended.

The operator or user is responsible for accidents or hazards occurring to other people or their property. Pay special attention to the hazard for third parties posed by the increased working radius when the telescopic tube is extended.

Warning! When wearing hearing protection, and due to the noise produced by the product, the operator may not notice persons approaching.

Warning! This unit makes an electromagnetic field while it operates. This field may under some conditions interfere with active or passive medical implants.

To decrease the risk of conditions that can possibly injure or kill, we recommend persons with medical implants to speak with their physician and the medical implant manufacturer before operating.

Do not use the product when a thunderstorm is approaching.

**Electrical safety**

Only connect charger to the AC voltage specified on the rating plate.

Under no circumstances should an earth be connected to any part of the product.

**Personal safety**

Always wear suitable clothing, gloves, and stout shoes.

Thoroughly inspect the areas where the Pole Pruner is to be used and remove all wires, hidden electric cables and other foreign objects.

All adjustments (tilting the cutting head, adjusting the length of the telescopic tube) must be made with the protective cover applied and the Pole Pruner must not be supported by the blade whilst doing so.

Before using the machine and after any impact, check for signs of wear or damage. Have repairs carried out as and when required.

Never attempt to work with an incomplete Pole Pruner or one that has been subjected to unauthorised modifications.

**Power tool use and care**

You should know how to switch off the device in the event of an emergency.

Never hold the Pole Pruner at the protective cover.

Do not use the Pole Pruner when its safety devices are damaged.

Do not use a ladder when using the Pole Pruner.

Always use the device when standing on solid ground.

Remove the battery:

- before leaving the Pole Pruner unmonitored;
- before removing a blockage;
- before inspecting or cleaning the Pole Pruner or performing other work;
- when hitting an object. You may only continue to use the Pole Pruner once you are absolutely sure that the entire Pole Pruner is in a safe operating condition;
- when the Pole Pruner begins to vibrate unusually heavily. In this case, it must be inspected immediately. Excessive vibration can cause injuries.
- before handing over the device to another person.

**Warning!** Keep toddlers away when you assemble the unit. Small parts can be easily swallowed. There is also a risk that the polybag can suffocate toddlers.

#### Maintenance and storage



##### RISK OF INJURY!

**Do not touch the chain.**

→ When work is finished or interrupted, refit the protective blade cover.

All nuts and screws must be firmly tightened to ensure a safe operating condition of the device.

#### Battery safety



##### FIRE RISK!

The battery to be charged must be placed on a non-flammable, heat resistant and non-conductive surface while charging. Keep corrosive, flammable and easily combustible objects clear of the battery charger and the battery. Do not cover the battery charger and the battery while charging. Unplug the

battery charger immediately in the event of smoke formation or fire.

Only use the GARDENA Battery Charger supplied. The use of other battery chargers may damage the batteries irreparably and even cause a fire.



##### RISK OF EXPLOSION!

→ Protect battery from heat and fire.

Do not leave on radiators or expose to strong sunshine for long periods.



Do not use the battery charger outdoors.

→ Protect the the battery charger from damp or wet areas.

Only use the battery in ambient temperatures of between 0 °C and 40 °C. A non-functioning battery must be disposed of correctly. It may not be sent via post. For further details, please contact your local disposal companies. The charging cable should be checked regularly for signs of damage or ageing (brittleness) and may only be used if it is in perfect condition. The charger unit provided may only be used to charge the rechargeable batteries supplied with the unit. Non-rechargeable batteries must not be charged with this battery charger (danger of fire). After charging, disconnect the charger from the mains and from the battery. Only charge battery between 0 – 45 °C. After heavy duty service allow battery to cool down first.

#### Storage



The Pole Pruner must not be exposed to direct sunlight while in storage.

Do not store the Pole Pruner in places with static electricity.

## 3. Assembly


The Pole Pruner, battery, battery charger, chain, bar, protective cover complete with Allen key and the operating instructions are included in the scope of delivery.

#### Installing the telescopic handle:

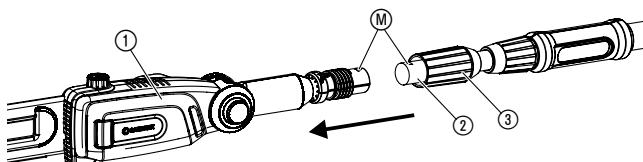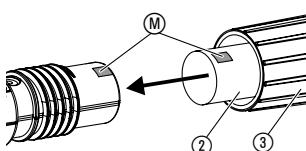

1. Slide telescopic pipe ② into the motor unit ① until you reach the stop position. Ensure that the two markings ④ face each other.
2. Tighten the grey nut ③.

## Installing the shoulder strap:

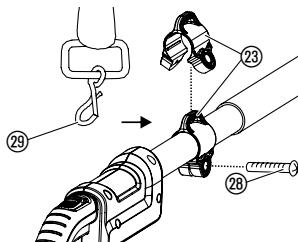


1. Widen the belt clip ② and fasten it onto the beam using the screw ④.
2. Engage the shoulder strap clasp ⑨ to the belt clip ②.
3. Adjust the shoulder strap to the desired length by using the quick strap fastener.

**CAUTION!**

The supplied shoulder strap must be used.

## 4. Initial Operation

### Charging the battery:

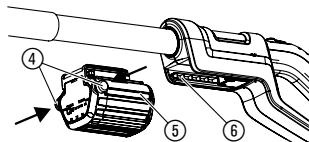

**WARNING!**

Overvoltage damages batteries and the battery charger.

→ Ensure the correct mains voltage.

Before using for the first time, the battery must be fully charged. Charging time (for uncharged battery) see 10. Technical Data. The lithium-ion battery can be charged in any state of charge, and the charging process can be interrupted at any time without harming the battery (no memory effect).

1. Depress both locking buttons ④ and remove the battery ⑤ from the battery holder ⑥ on the handle.
2. Plug the plug of the charger cable ⑦ into the battery ⑤.
3. Plug battery charger ⑧ into a mains socket.

**Charging indicator lamp ⑨ at the charger unit flashes green once per second: Battery is being charged.**

**Charging indicator lamp ⑨ at the charger unit is lit green: Battery is fully charged.**  
(For charging time, see 10. Technical Data.)


**Battery charging status indicator during charging:**

100 % charged L1, L2 and L3 lit.

66 – 99 % charged L1 and L2 lit, L3 flashing.

33 – 65 % charged L1 lit, L2 flashing.

0 – 32 % charged L1 flashing.

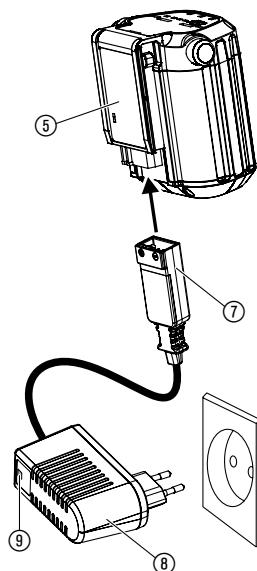

**Check the charge status regularly while charging.**

4. Once completely charged, disconnect the battery ⑤ from the battery charger ⑧. Disconnect the battery ⑤ from the battery charger ⑧ first, then unplug the battery charger ⑧.
5. Slide battery ⑤ onto the battery holder ⑥ on the handle until it audibly engages.



### Avoid exhaustive discharge:

If the battery is empty, the full discharge protection automatically switches off the device to prevent the battery from discharging fully. To prevent the fully charged battery from self-discharging via the unplugged charger, it should be disconnected from the charger after charging. If the battery was stored for more than 1 year, it must be fully recharged. If the battery was fully discharged, the charging indicator lamp ⑨ will flash rapidly at the start of charging (twice per second). If the charging indicator lamp ⑨ still flashes rapidly after 10 minutes, a fault has occurred (see 8. Troubleshooting). If the error-LED ⑩ on the battery flashes, a fault has occurred (see 8. Troubleshooting). In case of a completely empty battery it will take approx. 20 minutes until the LEDs on the battery will indicate charging. But the charging process is indicated by the flashing LED ⑨ on the charger.

### Battery charging status indicator during operation:

→ Press button ⑧ on the battery.

66 – 99 % charged L1, L2 and L3 lit.


33 – 65 % charged L1 and L2 lit.

10 – 32 % charged L1 lit.

1 – 9 % charged L1 flashing.

0 % charged No indicator.

### Filling in chain oil:

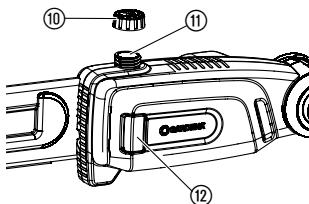

### DANGER!

**Physical injury due to chain breakage when the chain on the bar is not sufficiently lubricated.**

→ Check whether sufficient quantities of chain oil are delivered prior to each use.

We recommend to use **Art. 6006 GARDENA Oil** or an equivalent mineral chain oil from a specialist supplier.

1. Unscrew lid of oil tank ⑩.
2. Fill chain oil into the filler neck ⑪ until the viewing window ⑫ is fully filled with oil.
3. Close the lid of oil tank ⑩ again.

The device must be cleaned thoroughly if oil has been spilled.

→ Point the bar ⑯ at a bright wood cutting surface at a distance of approx. 20 cm. After operating the machine for one minute, clear traces of oil must be visible on the surface.





**Never let the bar come into contact with sand or soil as this will lead to increased wear of the chain.**

### Checking the oil lubrication system:

## 5. Operation

### Working positions:

The Pole Pruner can be operated in 2 working positions (above/below). To ensure a tidy cutting edge, thick branches should be cut in 2 steps (illustrations similar).

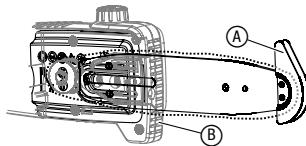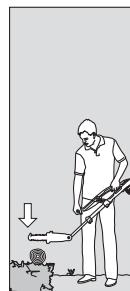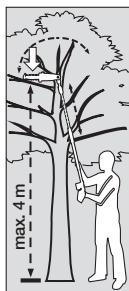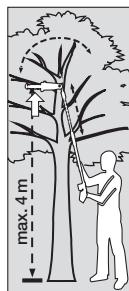

#### Above

(thick branches):

1. From below, saw the branch to no more than 1/3 of the diameter (chain will push towards the stop at the front A).
2. Cut off the branch from above (chain will push towards the stop at the back B).

#### Above

(thick branches):

1. From below, saw the branch to no more than 1/3 of the diameter (chain will push towards the stop at the front A).
2. Cut off the branch from above (chain will push towards the stop at the back B).

#### Below:


Cut off from above (chain will push towards the stop at the back B).



### DANGER!

**Do not stand under the branch while cutting.**


### Tilting the motor unit:

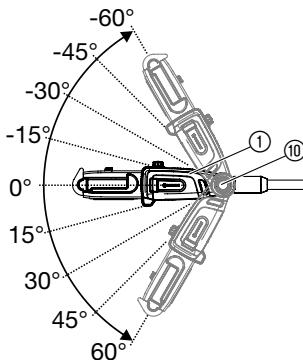

The motor unit ① can be tilted in 15° increments from 60° to -60°.

1. Remove the battery from the handle (see 4. Initial Operation).
2. Keep both orange buttons ⑩ pressed.
3. Tilt motor unit ① in the required direction.
4. Release both orange buttons ⑩ and allow motor unit ① to engage.
5. Put the battery on the handle (see 4. Initial Operation).


### Extending the telescopic pipe:

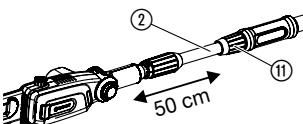

The telescopic tube ② can be continuously extended by up to 50 cm.

1. Remove the battery from the handle (see 4. Initial Operation).
2. Loosen the orange nut ⑪, extend the telescopic pipe ② to the required length, and tighten the orange nut ⑪ again.
3. Put the battery on the handle (see 4. Initial Operation).

## Starting the Pole Pruner:

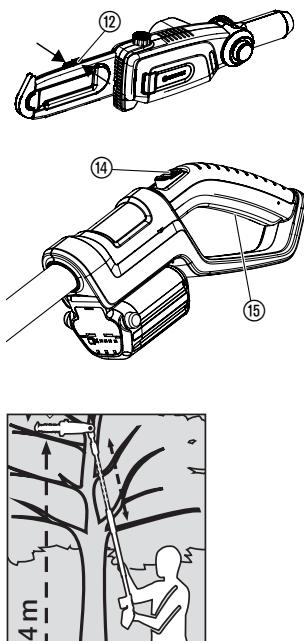

### DANGER!

Physical injury due to cut injury!

→ Never override the safety devices (e.g. by strapping down the starting lock-out and/or the start button).

GB

Verify that the following conditions are met before commencing work:

- The tank has been filled with sufficient chain oil and the lubrication system has been checked (see 4. Initial Operation).
- The chain is tensioned (see 7. Maintenance).

### Switching on the Pole Pruner:


1. Open the snap fit of the protective cover (12) and remove from the bar.
2. Slide the battery onto the handle (see 4. Initial Operation).
3. Hold the telescopic pipe of the Pole Pruner with one hand and the handle with the other hand.
4. Push the starting lock-out (14) forwards and press the start button (15). *The Pole Pruner starts.*
5. Release the starting lock-out (14).

### Switch off the Pole Pruner:

1. Release the start button (15).
2. Remove the battery from the handle (see 4. Initial Operation).
3. Slide the protective cover (12) onto the bar and close until the snap fit engages.

## 6. Storage

### To put into storage:

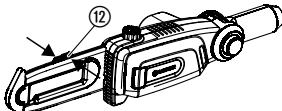

### Store out of the reach of children.

1. Remove and charge battery (see 4. Initial Operation).
2. Clean Pole Pruner (see 7. Maintenance), and slide protective cover (12) onto the bar and close until the snap fit engages.
3. Store Pole Pruner in a dry and frost-free location.

### Disposal:

(in accordance with  
RL 2012/19/EU)



The product must not be added to normal household waste. It must be disposed of in line with local environmental regulations.

→ Important: Make sure that the unit is disposed of via your municipal recycling collection centre.

**Disposal of batteries:**





The GARDENA Pole Pruner contains lithium-ion batteries that should not be discarded with normal household waste at the end of their life.

**Important:**

Please return the lithium-ion batteries to your GARDENA dealer or dispose of them properly at a public recycling centre.

1. Discharge lithium-ion batteries completely.
2. Dispose of lithium-ion batteries properly.

## 7. Maintenance

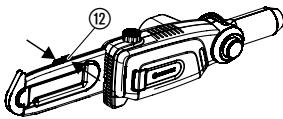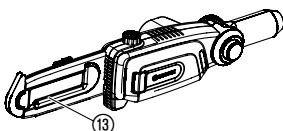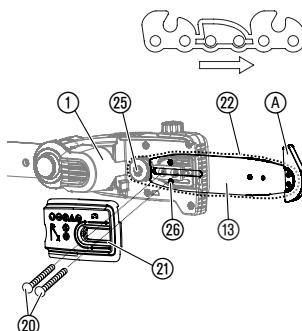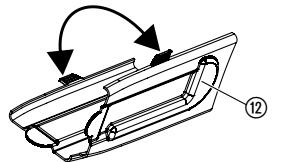**Cleaning the Pole Pruner:****Replacing the chain:****DANGER! Physical injury!**

**Cut injury when the Pole Pruner switches on unintentionally.**

→ Before performing maintenance work, remove the battery (see 4. Initial Operation), and slide the protective cover (12) onto the bar and close until the snap fit engages.

**CAUTION! Damage to the Pole Pruner!**

→ Do not clean Pole Pruner under running water or high pressure.

1. Clean Pole Pruner with a damp cloth.
2. Clean bar (13) with a brush, if necessary.

**CAUTION! Physical injury!**


**Cut injury due to the chain.**

→ Wear protective gloves when replacing the chain.

When the cutting performance reduces significantly (dull chain), the chain must be replaced. The Allen key for the screws (20) is situated inside the protective cover (12). Only the original GARDENA Spare Chain and Bar Art. 4048 or Spare Chain Art. 4049 may be used.

1. Unscrew both screws (20) and remove the lid (21).
2. Remove the bar (13) along with the chain (22) and release the used chain (22) from the bar (13).
3. Clean motor unit (1), bar (13) and lid (21). In doing so, pay particular attention to the rubber washers in the casing and cover (21).
4. Mount the new chain (22) via the stop at the front (A) of the bar (13), and ensure the direction of movement of the chain and that the stop at the front faces upwards.
5. Place the bar (13) on the motor unit (1) in such a way that the bolt (20) is inserted in the bar (13) and the chain (22) is placed around the drive sprocket (25).
6. Replace the lid (21) (taking care of the rubber sealing gasket) and fasten slightly with the two screws (20).
7. Tension the chain.

### Tensioning the chain:

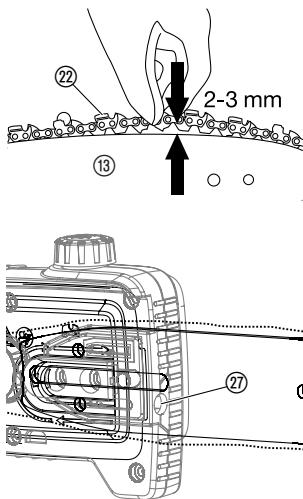


### RISK OF BURN INJURIES!

A too tightly tensioned chain can lead to motor overload and damage, whereas insufficient tensioning can cause the chain to jump off the rail. A correctly tensioned chain offers the best cutting performance, **optimum battery life** and a longer service life. Therefore, you should check the tensioning regularly as the chain may expand when being used (especially when the chain is new; following first installation, the tensioning of the chain must be checked after the chainsaw has been used for a few minutes).

→ However, do not tension the chain immediately after use but wait until it has cooled down.

1. Lift the chain (22) off the bar (13) in the middle of the bar. The gap should be approx. 2 – 3 mm.
2. Turn the adjustment screw (27) clockwise when the tensioning of the chain is too low, or turn the adjustment screw (27) anticlockwise when the tensioning of the chain is too strong.
3. Screw on the lid (21).
4. Start the device for approx. 10 sec.
5. Check the tensioning of the chain again and re-adjust, if necessary.

## 8. Troubleshooting

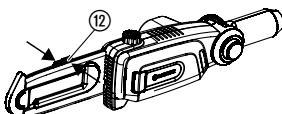

### DANGER! Risk of physical injury!

Cut injury when the Pole Pruner switches on unintentionally.

→ Before performing troubleshooting work, remove the battery (see 4. Initial Operation), and slide the protective cover (12) onto the bar and close until the snap fit engages.

Problem	Possible Cause	Remedy
Pole Pruner does not start up	Battery is flat.	→ Charge battery (see 4. Initial Operation).
	Battery not pushed onto the handle properly.	→ Push battery onto the handle and make sure that the locking buttons snaps in correctly.
	Chain blocked.	→ Remove blockage.
Low runtime	Chain tensioned excessively.	→ Tension chain (see 7. Maintenance).
	Chain not lubricated due to lack of oil.	→ Refill oil (see 4. Initial Operation).
Hedge is not cleanly cut	Chain dull or damaged.	→ Replace chain.
Pole Pruner cannot be switched off	Start button is stuck.	→ Remove battery and loosen start button.
Pole Pruner stops. Error-LED (8) flashes	Battery overload.	→ Wait for 10 sec. Press button (8) on the battery and restart.

Problem	Possible Cause	Remedy
<b>Pole Pruner stops. Error-LED  flashes</b>	High temperature. The allowed operation temperature was exceeded.	→ Leave battery to cool for approx. 15 min. Press button  on the battery and restart.
<b>Charging indicator lamp  on the charger does not light up</b>	Battery charger or charging cable not plugged in properly.	→ Plug in battery charger and charging cable properly.
<b>Charging control lamp  on the charger flashes rapidly (twice per second)</b>	Charging error.	→ Unplug charger and plug in again.
<b>Pole Pruner stops. Error-LED  is lit</b>	Battery error/ battery defective.	→ Press button  on the battery and restart.
<b>The battery can no longer be charged</b>	Battery is defective.	→ Replace the battery (Art. 9840).

Only the original GARDENA Replacement Battery BLi-18 (Art. 9840) may be used.  
This can be obtained from your GARDENA dealer or directly from GARDENA Service.



For any other malfunctions please contact the GARDENA service department.  
Repairs must only be done by GARDENA service departments or specialist dealers approved by GARDENA.

## 9. Available accessories

<b>GARDENA Replacement Battery BLi-18</b>	Battery for additional duration or for replacement.	<b>Art. 9840</b>
<b>GARDENA Replacement Chain and Bar</b>	Chain and bar for replacement.	<b>Art. 4048</b>
<b>GARDENA Replacement Chain</b>	Chain for replacement.	<b>Art. 4049</b>
<b>GARDENA Chainsaw Oil</b>	For lubricating the chain.	<b>Art. 6006</b>

## 10. Technical Data

### TCS Li-18/20 (Art. 8866)

<b>Chain speed</b>	3.8 m/s
<b>Bar length</b>	20 cm
<b>Chain type</b>	90 px
<b>Oil tank volume</b>	60 ml
<b>Range of extension of telescopic tube</b>	0 – 50 cm
<b>Weight including battery</b>	3.5 kg

<b>Workplace related sound pressure level <math>L_{PA}^{1)}</math></b>	79 dB(A)
<b>Uncertainty <math>k_{PA}</math></b>	3 dB(A)
<b>Noise emission value <math>L_{WA}^{1)}</math></b>	89 dB(A)
<b>Uncertainty <math>k_{WA}</math></b>	3 dB(A)
<b>Hand/arm vibration <math>a_{vhw}^{2)}</math></b>	< 2.5 m/s <sup>2</sup>
<b>Uncertainty <math>k_a</math></b>	1.5 m/s <sup>2</sup>
<b>Battery</b>	lithium ion (18 V)
<b>Battery capacity</b>	2.6 Ah
<b>Battery charging time</b>	approx. 3.5 Std. 80 % / approx. 5 Std. 100 %
<b>Idling time *</b>	approx. 30 min. (with full battery)
<b>Battery charger</b>	
<b>Mains voltage</b>	230 V / 50 – 60 Hz
<b>Max. output current</b>	600 mA
<b>Output voltage</b>	18 V (DC)

Measuring process complying with <sup>1)</sup> DIN EN ISO 22868 <sup>2)</sup> DIN EN ISO 22867.

\* The actual running time may differ from the stated idle time depending on application, type of cuttings and state of maintenance.



The stated vibration emission value has been measured according to a standardised test procedure and can be used for comparison of one electric power tool with another. It can also be used for preliminary evaluation of exposure. The vibration emission value can vary during actual use of the electric power tool.

## 11. Service/Warranty

### Service:

Please contact the address on the back page.

### Guarantee:

GARDENA Manufacturing GmbH guarantees this unit for 2 years (from date of purchase). This guarantee covers all serious defects of the unit that can be proved to be material or manufacturing faults. Under warranty we will either replace the unit or repair it free of charge if the following conditions apply:

- The unit must have been handled properly and in keeping with the requirements of the operating instructions.
- Neither the purchaser or a non-authorised third party have attempted to repair the unit.

The chain and bar are wearing parts and are not covered by the guarantee.

This manufacturer's guarantee does not affect the user's existing warranty claims against the dealer/seller.

If you have problems with this unit, please contact our Service.

## **D Produkthaftung**

Wir weisen ausdrücklich darauf hin, dass wir nach dem Produkthaftungsgesetz nicht für durch unsere Geräte hervorgerufene Schäden einzustehen haben, sofern diese durch unsachgemäße Reparatur verursacht oder bei einem Teiletausch nicht unsere originale GARDENA Teile oder von uns freigegebene Teile verwendet wurden und die Reparatur nicht vom GARDENA Service oder dem autorisierten Fachmann durchgeführt wird. Entsprechendes gilt für Ergänzungsteile und Zubehör.

## **GB Product Liability**

We expressly point out that, in accordance with the product liability law, we are not liable for any damage caused by our units if it is due to improper repair or if parts exchanged are not original GARDENA parts or parts approved by us, and, if the repairs were not carried out by a GARDENA Service Centre or an authorised specialist. The same applies to spare parts and accessories.

## **F Responsabilité**

Nous vous signalons expressément que GARDENA n'est pas responsable des dommages causés par ses appareils, dans la mesure où ces dommages seraient causés suite à une réparation non conforme, dans la mesure où, lors d'un échange de pièces, les pièces d'origine GARDENA n'auraient pas été utilisées, ou si la réparation n'a pas été effectuée par le Service Après-Vente GARDENA ou l'un des Centres SAV agréés GARDENA. Ceci est également valable pour tout ajout de pièces et d'accessoires autres que ceux préconisés par GARDENA.

## **NL Productaansprakelijkheid**

Wij wijzen er nadrukkelijk op, dat wij op grond van de wet aansprakelijkheid voor producten niet aansprakelijk zijn voor schade ontstaan door onze apparaten, indien deze door onvakkundige reparatie veroorzaakt zijn, of er bij het uitwisselen van onderdelen geen gebruik gemaakt werd van onze originele GARDENA onderdelen of door ons vrijgegeven onderdelen en de reparatie niet door de GARDENA technische dienst of de bevoegde vakman uitgevoerd werd. Ditzelfde geldt voor extra-onderdelen en accessoires.

## **S Produktansvar**

Tillverkaren är inte ansvarig för skada som orsakats av produkten om skadan beror på att produkten har reparerats felaktigt eller om, vid reparation eller utbyte, andra än Original GARDENA reservdelar har använts. Samma sak gäller för kompletteringsdelar och tillbehör.

## **DK Produktansvar**

Vi gør udtrykkeligt opmærksom på, at vi i henhold til produktansvarsloven ikke er ansvarlige for skader forårsaget af vores udstyr, såfremt det sker på grund af uautoriserede reparationer eller hvis dele er skiftet ud og der ikke er anvendt originale GARDENA dele eller dele godkendt af os, eller hvis reparationerne ikke er udført af GARDENA-service eller en autoriseret fagmand. Det samme gælder for ekstra udstyr og tilbehør.

## **FI Tuotevastuu**

Korostamme nimenomaan, että tuotevastuulainoja jojalla emme ole vastuussa laitteistamme johtuneista vahingoista, mikäli nämä ovat aiheutuneet epäasiamukaisesta korjauksesta tai osia vaihdettaessa ei ole käytetty alkuperäisiä GARDENA-varaosia tai hyväksymäämme osia ja korjaukset on suorittanut muu kuin GARDENA-huoltokeskus tai valtuuttamamme ammattihienkilö. Tämä pääte myös lisäosia ja lisävarusteisiin.

## **I Responsabilità del prodotto**

Si rende espressamente noto che, conformemente alla legislazione sulla responsabilità del prodotto, non si risponde di danni causati dai nostri articoli se originati da riparazioni eseguite non correttamente o da sostituzioni di parti effettuate con materiale non originale GARDENA o comunque da noi non approvato e, in ogni caso, qualora l'intervento non venga eseguito da un centro assistenza GARDENA o da personale specializzato autorizzato. Lo stesso vale per le parti complementari e gli accessori.

## **E Responsabilidad de productos**

Advertimos que conforme a la ley de responsabilidad de productos no nos responsabilizamos de daños causados por nuestros aparatos, siempre y cuando dichos daños hayan sido originados por arreglos o reparaciones indebidas, por recambios con piezas que no sean piezas originales GARDENA o bien piezas no autorizadas por nosotros, así como en aquellos casos en que la reparación no haya sido efectuada por un Servicio Técnico GARDENA o por un técnico autorizado. Lo mismo es aplicable para las piezas complementarias y accesorios.

## **P Responsabilidade sobre o produto**

Queremos salientar que segundo a lei da responsabilidade do fabricante, nós não nos responsabilizaremos por danos causados pelo nosso equipamento, quando estes ocorram em decorrência de reparações inadequadas ou da substituição de peças por peças não originais da GARDENA, ou peças não autorizadas. A responsabilidade tornar-se-á nula também depois de reparações realizadas por oficinas não autorizadas pela GARDENA. Esta restrição valerá também para peças adicionais e acessórios.

## **PL Odpowiedzialność za produkt**

Zwracamy Państwa uwagę, że nie ponosimy odpowiedzialności za uszkodzenia naszych maszyn, bądź szkody spowodowane ich wadliwym funkcjonowaniem, powstałe na skutek nieprawidłowo przeprowadzonych napraw lub użycia nieoryginalnych części zamiennych. Naprawy winny być przeprowadzane tylko przez punkty serwisowe Husqvarna lub autoryzowane serwisy. Dotyczy to również części uzupełniających i oprzyrządowania.

## **H Termékszavatosság**

Nyomatékosan utalunk arra a tényre, hogy a természetes szavatossági törvény szerint nem kell jóvállást vállálnunk azokra a károkra, amelyeket nem a mi készülékeink okoztak, ha ezeket szakszerűen javítás okozta vagy egy alkatrész kicsérélésénél nem a mi eredeti GARDENA alkatrészeinek vagy általunk engedélyezett alkatrészeket használtuk fel és a javítást nem a GARDENA szolgálat vagy egy erre felhatalmazott szakember végezte. Hasonlóképpen érvényes ez a kiegészítő alkatrészre és tartozékra is.

## **CZ Odovpovědnost za výrobek**

Výslovně upozorňujeme na to, že podle zákona o odovpovědnosti za výrobek neneseme odovpovědnost za škody způsobené našimi přístroji, pokud byly způsobené neodbornou opravou nebo použitím jiných než našich originálních náhradních dílů GARDENA nebo námí schválených dílů a neprověřeném opravě servisem GARDENA nebo autorizovaným odborníkem. Odpovidající platí i pro doplňkové díly a příslušenství.

## **SK Predmet záruky**

Upozorňujeme dôrazne na to, že podľa zákona o poskytovaní záruk nezodpovedáme za škody spôsobené našimi výrobkami, v prípade, že boli boli vyvolané neodbornými opravami, výmenou dielcov, ktoré nepatria k originálnym dielom GARDENA alebo neboli nami schválené arovnako boli spôsobené servisnými zásahmi, ktoré neboli vykonané servisom GARDENA alebo autorizovaným odborníkom. Rovnako to platí pre doplnky a príslušenstvo.

## **GR Ευθύνη για το προϊόν**

Σας υπενθυμίζουμε ότι, όταν σύμφωνα με το νόμο περί ευθύνης για τα προϊόντα δεν ευθυνόμαστε για ενδεχόμενες βλάβες που προκαλούνται από τη συσκευές μας, εφόσον οφείλονται σε μία ακατάλληλη επισκευή ή σε μια αντικατάσταση τμημάτων για την οποία δεν έχουν χρησιμοποιηθεί τα πρωτότυπα ανταλλακτικά της GARDENA ή τα από μας εγκεκριμένα ανταλλακτικά και σε περίπτωση που δεν εκτελείται η επισκευή από το Τμήμα Εξυπρέπησης Πελατών της GARDENA ή από έναν εξουσιοδοτημένο εξειδικευμένο τεχνίτη. Το ίδιο ισχύει για εξαρτήματα και συμπληρωματικά τμήματα.

## **SLO Jamstvo za izdelek**

Pismeno poudarjamo, da po zakonu jamstva za izdelek nismo odgovorni za škodo, ki bi nastala zaradi uporabe našega izdelka, prav tako tudi ne za škodo ki bi nastala zaradi nepravilnega popravila izdelka ali pri napačni zamenjavi delov, ki niso originalni deli GARDENA ali pri uporabi z naše strani potrjenih delov, ki pa niso bili vgrajeni v servisu GARDENA ali v naši pooblaščeni servisni službi. Enako velja tudi za nadomestne dele in opremo.

## **HR Odgovornost za proizvod**

Izričito napominjemo da u skladu sa Zakonom o odgovornosti za proizvode nismo odgovorni za štete uzrokovane našim uredajima ako su one izazvane nestručnim popravkom ili u slučaju zamjene dijelova nisu korišteni originalni GARDENA dijelovi ili dijelovi koje smo odobrili i popravak nije izvršio GARDENA servis ili ovlašteni stručnjak. Isto vrijedi i za dodatne dijelove i pribor.

## **RO Responsabilitatea legală a produsului**

Mentionam în mod expres ca, în concordanță cu responsabilitatea legală a produsului, nu suntem răspunzători de nici un accident provocat de produsele noastre dacă se datorează reparării necorespunzătoare sau dacă piesele de schimb nu sunt originale GARDENA sau aprobată de GARDENA, sau dacă reparările nu au fost efectuate de un Centru de Service GARDENA sau un specialist autorizat. Aceleași prevederi se aplică și pieselor de schimb și accesoriilor.

## **BG Отговорност за качество**

Изрично подчертаваме, че съгласно закона за отговорност за качество, ние не носим отговорност за вредите причинени от нашите уреди, ако същите са причинени от неправилен ремонт или при подмяната на части не са използвани оригинални части на GARDENA или части одобрени от нас и ремонта не е извършен от сервис на GARDENA или оторизиран специалист. Същото важи за допълнителните части и принадлежности.

## **EST Tootevastustus**

Juhime teie tähelepanu sellele, et tootevastutusseaduse kohaselt ei vastuta me meie seadmete poolt põhjustatud kahjude eest, kui need on tekkinud asjatundmatu paranduse tagajärvel või kui detaili vahetamisel ei kasutatud GARDENA originaalvaruosi ega meie poolt kasutada lubatud varuosi ja kui parandustöid ei ole teinud GARDENA klienditeenindusspetsialistid ega meie volitatud spetsialistid. Sama kehtib lisadetailide ja tarvikute kohta.

## **LT Atsakomybė už produkciją**

Nurodome, kad remdamiesi Atsakomybės už produkciją įstatymu, neatsakome už nuostolius, sukeltus mūsų prietaisų, jei jie atsisirado dėl netinkamo remonto, arba, jei keičiant dalis, buvo naudojamos neoriginalios GARDENA dalys arba dalys, kurių mes neleidome naudoti, o remontą atliko ne GARDENA servisas arba neįgaliotasis specialistas. Tas pats galioja papildomoms dalims ir priedams.

## **LV Produkta atbildība**

Mēs skaidri norādām uz to, ka saskaņā ar Produktu atbildības likumu, mēs neatbildam par mūsu iekārtu radītiem zaudējumiem, ciklāl tos ir izraisījis neatbilstošs remonts vai daļu nomaina ar neorigānām GARDENA daļām vai ne ar mūsu norādītajām detalām un remontu nav veicis GARDENA serviss vai pilnvarots speciālists. Tas pats attiecas uz papildinošajām daļām un piederumiem.

<p><b>D EG-Konformitätserklärung</b> Der Unterzeichnende Husqvarna AB, 561 82 Huskvarna, Sweden bestätigt, dass die nachfolgend bezeichneten Geräte in der von uns in Verkehr gebrachten Ausführung die Anforderungen der harmonisierten EU-Richtlinien, EU-Sicherheitsstandards und produktspezifischen Standards erfüllen. Bei einer nicht mit uns abgestimmten Änderung der Geräte verliert diese Erklärung ihre Gültigkeit.</p>	<p><b>H EU-Megfelelőségi nyilatkozat</b> Aláírtuk, a Husqvarna AB, 561 82 Huskvarna, Sweden igazolja azt, hogy az alábbiakban megnevezett készülékek, az általunk forgalomba hozott kivitelben teljesítik a harmonizált EU-irányelvök, az EU biztonsági szabványok és a termékre jellemző szabványok követelményeit. Ha a készülékeken a mi beleegyezésünk nélküli változtatást végeznek, akkor ez a nyilatkozat érvényét veszti.</p>
<p><b>GB EU Declaration of Conformity</b> The undersigned Husqvarna AB, 561 82 Huskvarna, Sweden hereby certifies that, when leaving our factory, the units indicated below are in accordance with the harmonised EU guidelines, EU standards of safety and product specific standards. This certificate becomes void if the units are modified without our approval.</p>	<p><b>CZ Prohlášení o shodě EU</b> Podpísaný Husqvarna AB, 561 82 Huskvarna, Sweden potvrzuje, že dále uvedené přístroje v námi do provozu uvedeném provedení splňují požadavky harmonizovaných směrnic EU, bezpečnostních norem EU a norem specifických pro výrobek. Při námi neschváleném změně přístroj ztrácí toto prohlášení platnost.</p>
<p><b>F Certificat de conformité aux directives européennes</b> Le constructeur, soussigné : Husqvarna AB, 561 82 Huskvarna, Sweden déclare qu'à la sortie de ses usines le matériel neuf désigné ci-dessous était conforme aux prescriptions des directives européennes énoncées ci-après et conforme aux règles de sécurité et autres règles qui lui sont applicables dans le cadre de l'Union européenne. Toute modification portée sur ce produit sans l'accord express de GARDENA supprime la validité de ce certificat.</p>	<p><b>SK EU-Vyhľásenie o zhode</b> Nižšie uvedená firma Husqvarna AB, 561 82 Huskvarna, Sweden vyhľasuje, že uvedené zariadenia, ktoré uvedla na trhu v tomto vyhotovení, spĺňajú požiadavky harmonizovaných smerníc EU, bezpečnostných norem EU a norem specifických pre výrobok. Pri zmene zariadenia, ktorá nebola odsúhlasená výrobcom stráca toto vyhľásenie platnosť.</p>
<p><b>NL EU-overeenstemmingsverklaring</b> Ondergetekende Husqvarna AB, 561 82 Huskvarna, Sweden bevestigt, dat de volgende genoemde apparaten in de door ons in de handel gebrachte uitvoering voldoen aan de eisen van, en in overeenstemming zijn met de EU-richtlijnen, de EU-eveleidingsstandaard en voor het product specifieke standaard. Bij een niet met ons afgesproken verandering aan de apparaten verliest deze verklaring haar geldigheid.</p>	<p><b>GR Δήλωση Συμφόρωσης προς τις Οδηγίες της ΕΕ</b> Η υπογράφουσα Husqvarna AB, 561 82 Huskvarna, Sweden δηλώνει, ότι τα εξής αναφερόμενα εκδίδομενα από την εταιρία μας προϊόντα ανταποκρίνονται σε όλες τις εναρμονισμένες προδιαγραφές της ΕΕ, στα πρότυπα ασφαλείας της ΕΕ καθ απόδικα για το προϊόν προτύπια. Σε μια μισημένη με την εταιρία μας τροποποίηση των συσκευών αυτή η δήλωση χάνει την ισχύ της.</p>
<p><b>S EU Tillverkarintyg</b> Undertecknade firma Husqvarna AB, 561 82 Huskvarna, Sweden intygar härmed att nedan nämnda produkter överensstämmer med EU:s direktiv, EU:s säkerhetsstandard och produktspecifikation. Detta intyg upphör att gälla om produkten ändras utan varit tillstånd.</p>	<p><b>SLO EV-izjava o skladnosti</b> Podpisani prvoizvajalec »Husqvarna AB, 561 82 Huskvarna, Sweden« s podpisom potrdjuje, da sledete opisana naprava, ki smo jo postali na tržišče izpolnjuje zahteve harmoniziranih standardov ES-smernic, ES-varnostnih standardov in izdelku specifičnih standardov. V primeru sprememb na napravi brez našega pisnega dovoljenja ta izjava izgubi svoj pomen in veljavnost.</p>
<p><b>DK EU Overensstemmelse certifikat</b> Undertegnede Husqvarna AB, 561 82 Huskvarna, Sweden bekræfter hermed, at enhederne listet herunder, ved afsendelse fra fabrikken, er i overensstemmelse med harmoniserede EU retningslinjer, EU sikkerheds standarder og produkt specifikations standarder. Dette certifikat træder ud af kraft hvis enhederne er ændret uden vor godkendelse.</p>	<p><b>HR Izjava o sukladnosti EU-a</b> Dolje potpisana tvrtka Husqvarna AB, 561 82 Huskvarna, Sweden ovime potvrđuje da dolje navedeni uređaji u izvedbi plasirano na tržište ispunjavaju zahteve harmoniziranih EU smjernica, EU sigurnosnih normi i normi za određene proizvode. Ova izjava postaje nistavna u slučaju izmjene uređaja koje nismo odobrili.</p>
<p><b>FI EU-yhdenmukaisuusvakuutus</b> Allekirjoittanut Husqvarna AB, 561 82 Huskvarna, Sweden vakuuttaa, että aallamainitut laitteet täytävät tehtävämme lähtivässään yhdenmukaiset EU-direktiivien, EU-turvallisuusstandardien ja tuotekohdisten standardien vaatimukset. Laiteesiin tehdyn muutoksen jäljistä ei ole sovitua kanssamme, johtavat tämän vakuutuksen raukeamiseen.</p>	<p><b>RO UE-Certificat de conformitate</b> Prin prezenta Husqvarna AB, 561 82 Huskvarna, Sweden, certifica faptul ca, în momentul în care produsele menționate mai jos les din fabrică sunt în concordanță cu directivele UE, standardele de siguranță UE și standardele specifice ale produsului UE. Acest certificat devine nul în cazul modificării aparatului fără aprobarea noastră.</p>
<p><b>I Dichiarazione di conformità alle norme UE</b> La sottoscritta Husqvarna AB, 561 82 Huskvarna, Sweden certifica che il prodotto qui di seguito indicato, nei modelli da noi commercializzati, è conforme alle direttive armonizzate EU nonché agli standard di sicurezza e agli standard specifici di prodotto. Qualunque modifica apportata al prodotto senza nostra specifica autorizzazione invalida la presente dichiarazione.</p>	<p><b>BG ЕС-Декларация за съответствие</b> Подписната фирма Husqvarna AB, 561 82 Huskvarna, Sweden декларира, че описаните по-долу уреди, пуснати в продажба съгласно нашата спецификация, изпълняват изискванията на гармонизирани ЕС-директиви, ЕС-стандарти за безопасност и специфичните производствени стандарти. При промяна на уреда, която не е съгласувана с нас, тази декларация губи своята валидност.</p>
<p><b>E Declaración de conformidad de la UE</b> El que subscrive Husqvarna AB, 561 82 Huskvarna, Sweden declara que la presente mercancía, objeto de la presente declaración, cumple con todas las normas de la UE, en lo que a normas técnicas, de homologación y de seguridad se refiere. En caso de realizar cualquier modificación en la presente mercancía sin nuestra previa autorización, esta declaración pierde su validez.</p>	<p><b>EST ELi vastavusdeklaratsioon</b> Allkirjutanu Husqvarna AB, 561 82 Huskvarna, Sweden kinnitab, et kirjeldatud seade vastab meie poolt ringlusse viitud kujul ELi harmoniseeritud direktiivide, ELi ohutustandardite ja tooteaga seotud standarditele. Meie kooskõlastamata muudatuse tegemise korral seadmel kaotab see deklaratsioon kehtivuse.</p>
<p><b>P Certificado de conformidade da UE</b> Os abaixo mencionados Husqvarna AB, 561 82 Huskvarna, Sweden, por este meio certificam que os sair da fábrica osaparelhos abaixo mencionados estão de acordo com as diretrizes harmonizadas da UE, padrões de segurança e de produtos específicos. Este certificado ficará nulo se as unidades forem modificadas sem a nossa aprovação.</p>	<p><b>LT ES Atitikties deklaracija</b> Pasirašanti įmonė Husqvarna AB, 561 82 Huskvarna, Sweden patvirtina, kad žemiau nurodyti prietaisai ir jų modeliai, kurie buvo pagaminti mūsy gamyklose atitinkamai ES direktyvās, ES saugumo standartus ir specifinius standartus. Atlikus bet koki prietaiso pakeitimą, kuris nėra suderintas su mumsi, ši deklaracija praranda galiojimą.</p>
<p><b>PL Deklaracja zgodności Unii Europejskiej</b> Husqvarna AB, 561 82 Huskvarna, Sweden potwierdza, że poniżej określone urządzenia w wersji oferowanej przez nas do sprzedzania spełnia wymagania harmonizowanych dyrektyw Unii Europejskiej, standardu bezpieczeństwa Unii Europejskiej i standardu specyficzego dla tego typu produktów. W przypadku zmiany urządzenia, która nie została z nami uzgodniona, niniejsza deklaracja traci moc obowiązywaną.</p>	<p><b>LV ES-atbilstības deklaracija</b> Parakstījusies Husqvarna AB, 561 82 Huskvarna, Sweden, Vācija apstiprina, ka sekojoši apzīmētie iekārtas, kurus mēs izplatām, savā izplūdinājumā atbilst harmonizētajām ES direktīvām, ES drošības standartiem un produkta specifikācijām standartiem. Ar mūsu neapstiprinātām izmaiņām iekārtā šī deklarācija zaudē savu derīgumu.</p>



<b>Deutschland / Germany</b>	<b>China</b>	<b>Georgia</b>	<b>Luxembourg</b>	<b>Singapore</b>
GARDENA Manufacturing GmbH Central Service Hans-Lorenzen-Straße 40 D-89079 Ulm Produktfragen: (+49) 731 490-123 Reparaturen: (+49) 731 490-290 service@gardena.com	Husqvarna (China) Machinery Manufacturing Co., Ltd. No. 1355, Jia Xin Rd., Ma Lu Zhen, Jia Ding Dist., Shanghai 201801 Phone: (+86) 21 59159629 Domestic Sales <a href="http://www.gardena.com.cn">www.gardena.com.cn</a>	ALD Group Belashvili 8 1159 Tbilisi	Magasins Jules Neuberg 39, rue Jacques Stas Luxembourg-Gasperich 2549 Case Postale No. 12 Luxembourg 2010 Phone: (+352) 40 14 01 api@neuberg.lu	Hy-Ray PRIVATE LIMITED 40 Jalan Pemimpin #02-08 Tat Ann Building Singapore 577185 Phone: (+65) 6253 2277 shiyng@hyray.com.sg
<b>Albania</b>	<b>Colombia</b>	<b>Great Britain</b>	<b>Mexico</b>	<b>Slovak Republic</b>
COBALT Sh.p.k. Rr. Siri Kodra 1000 Tirana	Husqvarna Colombia S.A. Calle 18 No. 68 D-31, zona Industrial de Montevideo Bogotá, Cundinamarca	Husqvarna UK Ltd Preston Road Aycliffe Industrial Park Newton Aycliffe County Durham DL5 6UP info.gardena@ husqvarna.co.uk	Newton Aycliffe County Durham DL5 6UP info.gardena@ husqvarna.co.uk	Husqvarna Česká s.r.o. Túrkova 2319/5b 149 00 Praha 4 – Chodov Bezplatná infolinika: 800 154 044 servis@sk.husqvarna.com
<b>Argentina</b>	<b>Costa Rica</b>	<b>Greece</b>	<b>Moldova</b>	<b>Slovenia</b>
Husqvarna Argentina S.A. Av.del Libertador 5954 – Piso 11 – Torre B (C1428ARP) Buenos Aires Phone: (+54) 11 5194 5000 info.gardena@ ar.husqvarna.com	Compania Exim Euroberoamericana S.A. Los Colegios, Moravia, 200 metros al Sur del Colegio Saint Francis – San José Phone: (+506) 297 68 83 exim_euro@racsa.co.cr	Π.ΠΑΠΑΔΟΠΟΥΛΟΣ ΑΕΒΕ Λεωφ. Αθηνών 92 Αθήνα Τ.Κ.104 42 Ελλάδα Τηλ. (+30) 210 51 93 100 info@papadopoulos.gr	Convel S.R.L. 290A Müncestri. 2002 Chisinau	Husqvarna Austria GmbH Industriezelle 36 4010 Linz Tel.: (+43) 732 77 01 01-485 service@gardena@ husqvarnagroup.com
<b>Australia</b>	<b>Croatia</b>	<b>Hungary</b>	<b>Netherlands</b>	<b>South Africa</b>
Husqvarna Australia Pty. Ltd. Locked Bag 5 Central Coast BC NSW 2252 Phone: (+61) 0 4352 7400 customer.service@ husqvarna.com.au	SILK ADRIA d.o.o. Josipa Lončara 3 10090 Zagreb Phone: (+385) 1 3794 580 silk.adria@zg.t-com.hr	Husqvarna Magyarország Kft. Ezred u. 1-3 1044 Budapest Telefon: (+36) 1 251-4161 vevszolglat@husqvarna@ husqvarna.hu	GARDENA Nederland B.V. Postbus 5017G 1305 AD ALMERE Phone: (+31) 36 52 10 00 info@gardena.nl	Husqvarna South Africa (Pty) Ltd Postnet Suite 250 Private Bag X6, Cascades, 3202 South Africa Phone: (+27) 33 846 9700 info@gardena.co.za
<b>Austria / Österreich</b>	<b>Cyprus</b>	<b>Iceland</b>	<b>Neth. Antilles</b>	<b>Spain</b>
Husqvarna Austria GmbH Industriezelle 36 4010 Linz Tel.: (+43) 732 77 01 01-485 service@gardena@ husqvarnagroup.com	Med Marketing 17 Digeni Akrita Ave P.O. Box 27017 1614 Nicosia	Å. Johnson & Kaaber Tunguhals 1 110 Reykjavík ooj@ojk.is	Jonka Enterprises N.V. Sta. Rosa Vega 196 P.O. Box 8200 Curacao Phone: (+599) 9 767 66 55 pgm@jonka.com	Husqvarna España S.A. Calle de Rivas nº 10 28052 Madrid Phone: (+34) 91 708 05 00 atencioncliente@gardena.es
<b>Azerbaijan</b>	<b>Czech Republic</b>	<b>Ireland</b>	<b>New Zealand</b>	<b>Suriname</b>
Firm Progress a. Aliyev Str. 26A 1052 Bakú	Husqvarna Česko s.r.o. Túrkova 2319/5b 149 00 Praha 4 – Chodov Bezplatná infolinika: 800 100 425 servis@cz.husqvarna.com	Husqvarna UK Ltd Preston Road Aycliffe Industrial Park Newton Aycliffe County Durham DL5 6UP info.gardena@ husqvarna.co.uk	Husqvarna New Zealand Ltd. PO Box 76-437 Manukau City 2241 Phone: (+64) 0 9 9202410 support.nz@husqvarna.co.nz	Agrofik n.v. Verlengde Hogestraat #22 Phone: (+597) 472426 agrofik@sr.net Pobox : 2006 Paramaribo Suriname – South America
<b>Belgium</b>	<b>Denmark</b>	<b>Italy</b>	<b>Norway</b>	<b>Sweden</b>
GARDENA Belgium NV / SA Sterrebeekstraat 163 1930 Zaventem Phone: (+32) 2 7 20 92 12 Mail: info@gardena.be	GARDENA / Husqvarna Consumer Outdoor Products Salgsafdelning Danmark Box 9003 S-200 39 Malmö info@gardena.dk	Husqvarna Italia S.p.A. Via Como 72 23868 VALMADRERA (LC) Phone: (+39) 0341.203.111 info@gardenaitalia.it	GARDENA Husqvarna Consumer Outdoor Products Salgskontor Norge Kleverveien 6 1540 Vestby info@gardena.no	Husqvarna AB S-561 82 Husqvarna info@gardena.se
<b>Bosnia / Herzegovina</b>	<b>Dominican Republic</b>	<b>Japan</b>	<b>Peru</b>	<b>Switzerland / Schweiz</b>
SILK TRADE d.o.o. Industrska zona Bulvaka bb 74260 Tešanj	BOSQUESA, S.R.L Carretera Santiago Licey Km. 5 ½ Esquina Copal II. Santiago	KAKUCHI Co. Ltd. Sumitomo Realty & Development Kojimachi BLDG., 8F 5-1 Nibannocy Chiyoda-ku Tokyo 100-0084 Phone: (+81) 33 264 4721 m_iishi@kaku-ichi.co.jp	Husqvarna Perú S.A. Jr. Ramón Cárcamo 710 Lima 1 Tel: (+51) 1320400 ext. 416 juan.remuzgo@ husqvarna.com	Husqvarna Schweiz AG Consumer Products Industriestrasse 10 5506 Mägenwil Phone: (+41) 60 887 37 90 info@gardena.ch
<b>Brazil</b>	<b>Ecuador</b>	<b>Kazakhstan</b>	<b>Poland</b>	<b>Turkey</b>
Husqvarna do Brasil Ltda Av. Francisco Matarazzo, 1400 – 1º andar São Paulo – SP CEP: 05001-903 Tel: 0800-112252 marketing.br.husqvarna@ husqvarna.com.br	Husqvarna Ecuador S.A. Arupos E-181 y de 10 de Agosto Quito, Pichincha Tel. (+593) 22800739 francisco.jacome@ husqvarna.com.ec	LAMED Co. 155/1, Tazhibayevi Str. 050060 Almaty IP Schmidt Abayavenue 3B 110 005 Kostanay	Poland Spółka z o.o. ul. Wysockiego 15 b 03-371 Warszawa Phone: (+48) 22 330 96 00 gardena@husqvarna.com.pl	GARDENA Dost Diş Ticaret Mümessiliklik A.Ş. Sanayi Cad. Adil Sokak No: 1/B Kartal 34873 İstanbul Phone: (+90) 216 38 93 939 info@gardena-dost.com.tr
<b>Bulgaria</b>	<b>Estonia</b>	<b>Korea</b>	<b>Portugal</b>	<b>Ukraine / Україна</b>
Хускварна България ЕООД Бул. „Андрей Янев“ № 72 1799 София Тел.: (+359) 02/975 3076 www.husqvarna.bg	Husqvarna Eesti OÜ Consumer Outdoor Products Kesk tee 10, Aaviku külja Raev vald Harju maakond 75305 Estonia kontakt.ejt@husqvarna.ee	Kyung Jin Trading CO., LTD. 107-4, SunDuk Bld., Yang-Jae-dong, Seocho-gu, Seoul, (zipcode: 137-891) Phone: (+82) 05274-6300	Husqvarna Portugal, SA Lagoa - Albarraque 2635 - 595 Rio de Mouro TOB : (+351) 21 922 85 30 Fax : (+351) 21 922 85 36 info@gardena.pt	ТОВ „Хускварна Україна“ вул. Васильківська, 34, офіс 204-т 03022, Київ Тел. (+38) 044 498 39 02 info@gardena.ua
<b>Canada / USA</b>	<b>Finland</b>	<b>Kyrgyzstan</b>	<b>Romania</b>	<b>Uruguay</b>
GARDENA Canada Ltd. 100 Summerlea Road Brampton, Ontario L6T 4X3 Phone: (+1) 905 792 9330 info@gardena-canada.com	Oy Husqvarna Ab Consumer Outdoor Products Lauttarehankatu 8 / BL 3 00581 HELSINKI info@gardena.fi	Alye Maki av. Moladaya Guardir J 3 720014 Bishkek	Madex International Srl Soseaua Odaii 117 -123, RO 013603 Bucuresti, S1 Phone: (+40) 21 352.76.03 madex@ines.ro	FELI SA Entre Ríos 1083 CP 11800 Montevideo – Uruguay Tel: (+598) 22 03 18 44 info@feliisa.com.uy
<b>Chile</b>	<b>France</b>	<b>Latvia</b>	<b>Russia / Россия</b>	<b>Venezuela</b>
Maquinarias Agroforestales Ltda. (Maga Ltda.) Santiago, Chile Avda. Chesterton # 8355 comuna Las Condes Phone: (+56) 2 202 4417 Dalton@maga.cl Zipcode: 7560330	Husqvarna France 9/11 Allée des pierres mayettes 92635 Gennevilliers Cedex France http://www.gardena.com/fr N° AZUR: 0 810 00 78 23 (Prix d'un appel local)	Husqvarna Latvija Consumer Outdoor Products Aķiņu iela 6 LV-1024 Rīga info@husqvarna.lv	ООО „Хускварна“ 141400, Московская обл., г. Химки, улица Ленинградская, владение 39, стр.6 Бизнес Центр „Химки Бизнес Парк“, помещение ОВО_04 http://www.gardena.ru	Corporación Casa y Jardín C.A. Av. Caroni, Edif. Trézmen, PB. Colinas de Bello Monte. 1050 Caracas. Tlf: (+58) 212 992 33 22 info@casayjardin.net.ve
<b>Temuco, Chile</b>	<b>Finland</b>	<b>Lithuania</b>	<b>Serbia</b>	
Avda. Valparaíso # 01466 Phone: (+56) 45 222 126 Zipcode: 4780441	Oy Husqvarna Lietuva Consumer Outdoor Products Ateities pl. 77C LT-52104 Kaunas centras@husqvarna.lt	UAB Husqvarna Lietuva Consumer Outdoor Products Ateities pl. 77C LT-52104 Kaunas centras@husqvarna.lt	Dormel d.o.o. Autoput zu Novi Sad bb 11273 Belgrade Phone: (+381) 11 84 88 12 miroslav.jejina@dormel.rs	8866-20 960.04/0216 © GARDENA Manufacturing GmbH D-89070 Ulm http://www.gardena.com