

SabreCut XT

Art. 9670799-xx

Remark: "xx" stands for customer and country variants.
The basic product number is before the hyphen.

EN Operator's manual
Telescopic Hedge Trimmer

FLYMO SabreCut XT

1. SAFETY	2
2. ASSEMBLY	6
3. OPERATION	6
4. MAINTENANCE	8
5. STORAGE	9
6. TROUBLESHOOTING	9
7. TECHNICAL DATA	9
8. ACCESSORIES	10
9. SERVICE/WARRANTY	10

Original instructions.



This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge,

unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety. Children should be supervised to ensure that they do not play with the product.

Intended use:

This FLYMO Telescopic Hedge Trimmer is used to cut hedges, shrubs and grass coverings in private domestic gardens and allotments.



DANGER! Risk of injury!

→ Do not use the unit to cut lawns/lawn edges, to chop up material or to make compost.

1. SAFETY

Important!

Read the operator's manual carefully before use and keep for future reference.

If not used properly this product can be dangerous. The warnings and safety instructions must be followed to ensure reasonable safety and efficiency in using this product. The operator is responsible for following the warnings and instructions in this manual and on the product. Never use the product unless the guards provided by the manufacturer are in the correct position.

Symbols on the product:



Read operator's manual.



Wear safety glasses and ear protection.



Do not let the unit become wet with rain or other moisture. Do not leave the unit outdoors while it is raining.



Disconnect the mains cable if the cable becomes damaged or cut.



Risk of fatal injury due to electric shock! Keep at least 10 m away from electricity lines.



Danger – Keep hands away from blade.

General Power Tool Safety Warnings



WARNING! Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire and / or serious injury.

Save all warnings and instructions for future reference. The term "power tool" in the warnings refers to your mains operated (corded) power tool or battery operated (cordless) power tool.

1) Work area safety

- Keep work area clean and well lit.**
Cluttered or dark areas invite accidents.
- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.
- Keep children and bystanders away while operating a power tool.**
Distractions can cause you to lose control.

2) Electrical safety

- Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adaptor plugs with earthed (grounded) power tools.**
Unmodified plugs and matching outlets will reduce risk of electric shock.
- Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
- Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
- Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** Damaged or entangled cords increase the risk of electric shock.

e) When operating a power tool outdoors, use an extension cord suitable for outdoor use.
Use of a cord suitable for outdoor use reduces the risk of electric shock.

f) If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply. *Use of an RCD reduces the risk of electric shock.*

3) Personal safety

a) Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.
A moment of inattention while operating power tools may result in serious personal injury.

b) Use personal protective equipment. Always wear eye protection. *Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.*

c) Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool. *Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.*

d) Remove any adjusting key or wrench before turning the power tool on. *A wrench or a key left attached to a rotating part of the power tools may result in personal injury.*

e) Do not overreach. Keep proper footing and balance at all times. *This enables better control of the power tool in unexpected situations.*

f) Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts. *Loose clothes, jewellery or long hair can be caught in moving parts.*

g) If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used. *Use of dust collection can reduce dust-related hazards.*

4) Power tool use and care

a) Do not force the power tool. Use the correct power tool for your application.
The correct power tool will do the job better and safer at the rate for which it was designed.

b) Do not use the power tool if the switch does not turn it on and off.
Any power tool that cannot be controlled with the switch is dangerous and must be repaired.

c) Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools.
Such preventive safety measures reduce the risk of starting the power tool accidentally.

d) Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool. *Power tools are dangerous in the hands of untrained users.*

e) Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. *If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.*

f) Keep cutting tools sharp and clean. *Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.*

g) Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.

Use of the power tool for operations different from those intended could result in a hazardous situation.

5) Service

Have your power tool serviced by a qualified repair person using only identical replacement parts. *This will ensure that the safety of the power tool is maintained.*

Hedge trimmer safety warnings:

- Keep all parts of the body away from the cutter blade. Do not remove cut material or hold material to be cut when blades are moving. Make sure the switch is off when clearing jammed material.

A moment of inattention while operating the hedge trimmer may result in serious personal injury.

- Carry the hedge trimmer by the handle with the cutter blade stopped. When transporting or storing the hedge trimmer always fit the cutting device cover.

Proper handling of the hedge trimmer will reduce possible personal injury from the cutter blades.

- Hold the power tool by insulated gripping surfaces only, because the cutter blade may contact hidden wiring or its own cord.
Cutter blades contacting a "live" wire may make exposed metal parts of the power tool "live" and could give the operator an electric shock.

- Keep cable away from the cutting area. *During operation the cable may be hidden in shrubs and can be accidentally cut by the blade.*

Additional Safety Recommendations

Warning! Small parts can be easily swallowed. *There is also a risk that the polybag can suffocate toddlers. Keep toddlers away when you assemble the product.*

Work area safety

Only use the unit in the manner and for the functions described in these instructions.

The operator or user is responsible for accidents or hazards occurring to other people or their property.

While operation and transport pay special attention to the hazard for third parties posed by the increased working radius when the telescopic tube is extended.

Risk of stumbling. While operation pay attention to the cable.

Warning! When wearing hearing protection, and due to the noise produced by the unit, the operator may not notice persons approaching.

Do not use the unit when a thunderstorm is approaching.
Do not use the unit nearby a water.

Electrical safety

The British Standards Institute recommend the use of a Residual Current Device (R.C.D.) with a tripping current of not more than 30 mA. Check your R.C.D. every time you use it.

Before use, examine cable for damage, replace it if there are signs of damage or ageing.

If the replacement of the supply cord is necessary, this has to be done by the manufacturer or his agent in order to avoid a safety hazard.

Do not use the unit if the electric cables are damaged or worn.

Immediately disconnect from the mains electricity supply if the cable is cut, or the insulation is damaged. Do not touch the electric cable until the electrical supply has been disconnected.

Your electric cable must be untangled, tangled cables can overheat and reduce the efficiency of your unit.

Always disconnect the mains cable before disconnecting any plug, cable connector or extension cable.

Switch off, remove plug from mains and examine electric supply cable for damage or ageing before winding cable for storage. Do not repair a damaged cable, send the unit to the next FLYMO service Center or dealer authorised by FLYMO.

Always wind cable carefully, avoiding kinking.

Use only on AC mains supply voltage shown on the product rating label.

Under no circumstances should an earth be connected to any part of the unit.

If the unit starts unintentionally when the mains plug is connected, disconnect the mains at once. Contact FLYMO Service to check the unit.

Warning! This product makes an electromagnetic field while it operates. This field may under some conditions interfere with active or passive medical implants. To decrease the risk of conditions that can possibly injure or kill, we recommend persons with medical implants to speak with their physician and the medical implant manufacturer before you operate the product.

Cables

Use only permitted extension cables as per HD 516.
→ Ask your electrical specialist.

Personal safety

 
Always wear suitable clothing, protective gloves, and stout shoes.

Avoid contact to the oil of the blade in particular when you react allergic with it.

Thoroughly inspect the area where the unit is to be used and remove all wires and other foreign objects.

All adjustments (inclining the blade head, altering the length of the telescopic tube) have to be made with the sheath in place, and the unit must not rest on the blade in the process.

Always hold the unit properly with both hands on both handles (A) and (B).



Before using the unit and after any impact, check for signs of wear or damage and repair as necessary.

Never attempt to use an incomplete unit or one with an unauthorised modification.

Power tool use and care

Know how to stop the unit quickly in an emergency.

Never hold the unit by the guard.

Do not use the unit if the protection equipments (protection cover, quick blade-stop) are damaged.

Do not use ladders whilst operating the unit.

Disconnect the mains cable:

- before leaving the unit unattended for any period;
- before clearing a blockage;
- before checking, cleaning or working on the appliance;
- if you hit an object. Do not use your unit until you are sure that the entire unit is in a safe operating condition;
- if the unit starts to vibrate abnormally. Check immediately. Excessive vibration can cause injury.
- before passing to another person.

Only use the unit between 0 – 40 °C.

Maintenance and storage



RISK OF INJURY!

Do not touch blades.

→ When finishing or interrupting work push up protection cover.

Keep all nuts, bolts and screws secure to be sure the unit is in safe working condition.

 
If the unit got hot during operation, let it cool down before storage.

2. ASSEMBLY

The hedger, blade, protective cover and the operation instructions are included in the scope of delivery.




To assemble the telescopic handle:

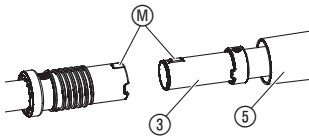

DANGER! Risk of physical injury!

Cut injury when the unit starts accidentally.

 → Before you assemble the unit, make sure that the mains cable is disconnected and the protective cover ① is slid over the blade ②.

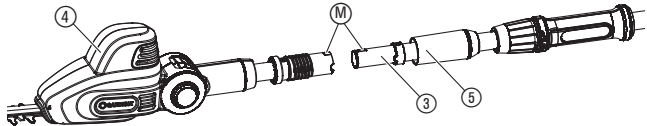


1. Slide the telescopic pipe ③ into the motor unit ④ until you reach the stop position. Ensure that the two markings (M) face each other.
2. Tighten the grey nut ⑤.

3. OPERATION



 To connect the hedge trimmer:

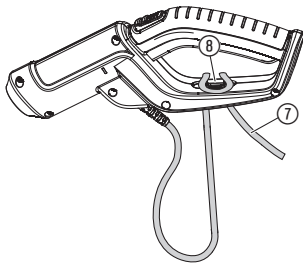

DANGER! Risk of physical injury!

Cut injury when the unit starts accidentally.

→ Before you connect, adjust or transport the unit, disconnect the mains cable and slide the protective cover ① over the blade ②.



DANGER! Risk of electric shock!

To avoid damage to the mains cable ⑥ the mains cable ⑦ must be inserted into the cable lock ⑧.

 
→ Before you operate the unit insert the mains cable ⑦ into the cable lock ⑧.

→ Never take hold of the protective cover ① when connecting the unit.


1. Loop the mains cable ⑦, insert the loop into the cable lock ⑧ and pull tight.
2. Connect the extension cable ⑦ into a 230 V mains socket.

Work positions:


The unit can be operated in 4 positions (illustration similar).

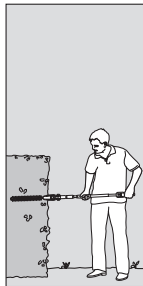

 
Side trimming:
Telescopic pipe retracted

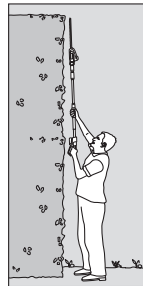

 Vertical trimming at high level:
Telescopic tube extended

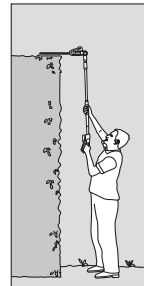

 Horizontal trimming at high level:
Motor unit tilted by 75°, telescopic pipe extended

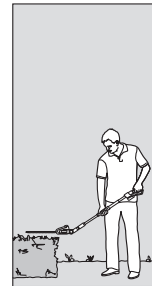

Trimming at low level:
Motor unit tilted by – 60°, telescopic pipe extended

 
To start the hedge trimmer:



DANGER! Risk of physical injury!

Risk of injury if the unit does not stop when you release the start button.

→ **Do not bypass the safety devices or switches. For example do not attach the starting lock-out ⑪ or start button ⑬ to the handle.**

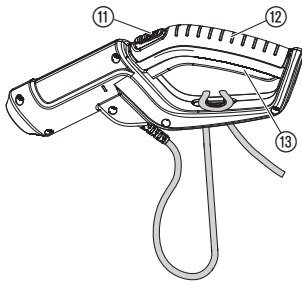

To start:

The unit is fitted with a starting lock-out ⑪ to prevent the unit from being turned on by accident.

1. Remove the protective cover ① from the blade ②.
2. Hold the telescopic pipe of the unit with one hand and the handle ⑫ with the other hand.
3. Push the starting lock-out ⑪ forwards and push the start button ⑬.

 
The unit will start.

4. Release the starting lock-out ⑪.

To stop:

1. Release the start button ⑬.
2. Slide the protective cover ① over the blade ②.


To tilt the motor unit:

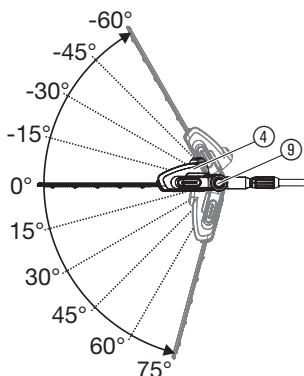

For cutting at high and low level, the motor unit (4) can be tilted at an angle of 75° to - 60° in 15° increments.

1. Keep the orange button (9) pressed.
2. Tilt the motor unit (4) in the required direction.
3. Release the orange button (9) and allow the motor unit (4) to engage.

 To extend the telescopic pipe:



For cutting at high and low heights, the telescopic pipe (3) can be continuously extended by up to 45 cm.

1. Loosen the orange nut (10).
2. Extend the telescopic pipe (3) to the required length.
3. Tighten the orange nut (10) again.

4. MAINTENANCE



To clean the hedge trimmer:



DANGER! Risk of physical injury!

Cut injury when the unit starts accidentally.

→ **Before you maintain the unit, make sure that the mains cable is disconnected and the protective cover (1) is slid over the blade (2).**



DANGER! Electric shock!

Risk of injury and risk of damage to property.

→ **Do not clean the unit with water or with a water jet (in particular high-pressure water jet).**

1. Clean the unit with a damp cloth.
2. Clean the airflow slots with a soft brush (do not use a screwdriver).
3. Lubricate the blade (2) with a low viscosity oil. Avoid contact with the plastic parts.

5. STORAGE

To put into storage:



Disposal:

(in accordance with
RL2012/19/EC/
S.I. 2013 No. 3113)



The product must be stowed away from children.

1. Disconnect the mains cable.
2. Clean the unit (see 4. MAINTENANCE) and slide the protective cover ① over the blade ②.
3. Stow the unit in a dry area where it has protection from frost.

The product must not be disposed of to normal household waste. It must be disposed of in line with local environmental regulations.

IMPORTANT!

→ Dispose of the product through or via your municipal recycling collection centre.

6. TROUBLESHOOTING



DANGER! Risk of physical injury!

Cut injury when the unit starts accidentally.

→ Before you troubleshoot the unit, make sure that the mains cable is disconnected and the protective cover ① is slid over the blade ②.

Problem	Possible Cause	Remedy
Unit does not start	Mains cable not connected or damaged.	→ Connect the mains cable or if necessary replace it.
	Blade blocked.	→ Remove obstacle.
Unit can no longer be stopped	Start button is stuck.	→ Disconnect the mains cable and loosen start button.
Hedge is not cleanly cut	Blade blunt or damaged.	→ Have blade replaced by FLYMO Service.



NOTE: For any other malfunctions please contact the FLYMO service department. Repairs must only be done by FLYMO service departments or specialist dealers approved by FLYMO.

7. TECHNICAL DATA

Telescopic Hedge Trimmer

**SabreCut XT
Art. 9670799-xx**

Motor power consumption	500 W
Mains voltage/Mains frequency	230 V / 50 Hz
Strokes	1,600/min.
Length of blade	48 cm
Tooth gap of blade	25 mm
Range of extension of telescopic tube	0 – 45 cm

Telescopic Hedge Trimmer

SabreCut XT Art. 9670799-xx

Weight	approx. 4.1 kg
Sound pressure level L_{pA} ¹⁾ Uncertainty k_{pA}	85 dB (A) 3.0 dB (A)
Sound power level L_{WA} ²⁾ Uncertainty k_{WA}	measured 95 dB (A) / guaranteed 97 dB (A) 2.0 dB (A)
Hand/arm vibration a_{vhw} ¹⁾	< 2.5 m/s ²

Measuring process complying with ¹⁾ EN 60745-2-15 ²⁾ RL 2000/14/EC/ S.I. 2001 No.1701



NOTE: The stated vibration emission value has been measured according to a standardized test procedure and can be used for comparison of one electric power tool with another. It can also be used for preliminary evaluation of exposure. The vibration emission value can vary during actual use of the electric power tool.

8. Service/Warranty

Service:

Please contact the address on the back page.

Warranty statement:

In the event of a warranty claim, no charge is levied to you for the services provided.

Husqvarna UK Ltd. grants a warranty for all original FLYMO new products for two years from the date of original purchase from the retailer, provided that the devices have been for private use only. This manufacturer's warranty does not apply to products acquired second hand. This warranty includes all significant defects of the product that can be proved to be material or manufacturing faults. This warranty is fulfilled by supplying a fully functional replacement product or by repairing the faulty product sent to us free of charge; we reserve the right to choose between these options. This service is subject to the following provisions:

- The product has been used for its intended purpose as per the recommendations in the operating instructions.
- Neither the purchaser nor a third party has attempted to open or repair the product.
- Only original FLYMO replacement parts and wear parts have been used for operation.

- Presentation of the receipt.

Normal wear and tear of parts and components (such as blades, blade fixing parts, turbines, light bulbs, V-belts/toothed belts, impellers, air filters, spark plugs), visual changes, wear parts and consumables are excluded from the warranty.

This manufacturer's warranty is limited to replacement and repair of products in accordance with the abovementioned conditions. The manufacturer's warranty does not constitute an entitlement to lodge other claims against us as a manufacturer, such as for damages. This manufacturer's warranty does **not**, of course, affect statutory and contractual warranty claims against the dealer/retailer.

The manufacturer's warranty is governed by the law of the Federal Republic of Germany.

In case of a warranty claim, please return the faulty product, together with a copy of the receipt and a description of the fault, with postage paid to the service address.

Consumables:

The blade and excentric drive are consumables and are not included in the guarantee.



Product liability

In accordance with the German Product Liability Act, we hereby expressly declare that we accept no liability for damage incurred from our products where said products have not been properly repaired by a FLYMO-approved service partner or where original FLYMO parts or parts authorised by FLYMO were not used.

EC DECLARATION OF CONFORMITY

The undersigned hereby certifies as the authorised representative of the manufacturer, Husqvarna AB, 561 82 Huskvarna, Sweden, that, when leaving our factory, the unit(s) indicated below is/are in accordance


with the harmonised EU guidelines, EU standards of safety and product specific standards. This certificate becomes void if the unit(s) is/are modified without our approval.

Description of the product:	Sabre Cut
Product type:	XT
Article-Number:	9670799-xx
CE-Directives:	2006/42/EC 2011/65/EU 2014/30/EU 2000/14/EC
Harmonised EN:	EN ISO 12000 EN 60745-1 EN 60745-2-15 EN ISO 10517
Deposited Documentation:	GARDENA Technical Documentation, M. Jäger, Hans-Lorensen-Str. 40, 89079 Ulm
Conformity Assessment according to:	2000/14/EG Procedure: Art. 14 Annex V
Noise level: measured / guaranteed	95 dB (A)/97 dB (A)
Ulm, 18.08.2021	
Authorised representative:	<div> Reinhard Pompe Vice President Products</div> <div> Wolfgang Engelhardt Vice President Supply Chain</div>

UKCA DECLARATION OF CONFORMITY (ONLY FOR UK)

The manufacturer: Husqvarna AB SE 561 82 Huskvarna, Sweden hereby certifies, when leaving our factory, the unit(s) indicated below is/are in accordance with the UK Regulations, designated standards of safety and

product specific designated standards. This certificate becomes void if the units are modified without our approval.

Description of the product:	Sabre Cut
Product type:	XT
Article number:	9670799-xx
UK regulations:	S.I. 2008/1597 S.I. 2012/3032 S.I. 2016/1091 S.I. 2001/1701
Designated standards:	EN ISO 12100 EN 6745-1 EN 60745-2-15 EN ISO 10517
Authorised Representative:	Husqvarna UK Limited
Deposited Documentation:	Preston Road, Aycliffe, County Durham UK DL5 6UP
Noise level: measured / guaranteed	95 dB(A) / 97 dB(A)
Conformity Assessment according to:	According to S.I. 2001/1701 Art. 11 Schedule 8
Aycliffe, 18.08.2021	
Authorised Representative:	 John Thompson Director

Service Address and Importer to

Great Britain

Husqvarna UK Ltd
Preston Road
Aycliffe Industrial Park
Newton Aycliffe
County Durham
DL5 6UP
Phone: +44 (0) 344 8444558
customer.services@husqvarna.co.uk

31000-85.960.01/0921
Husqvarna AB
S-561 82 Huskvarna
Sweden

Our policy of continuous improvement means that the specification of products may be altered from time to time without prior notice.
Copyright © 2021 Flymo S.A. All rights reserved.
Flymo® and other product and feature names are registered or unregistered trademarks of Flymo S.A.

