


EasiMow 300R  
Art. 9679870-xx

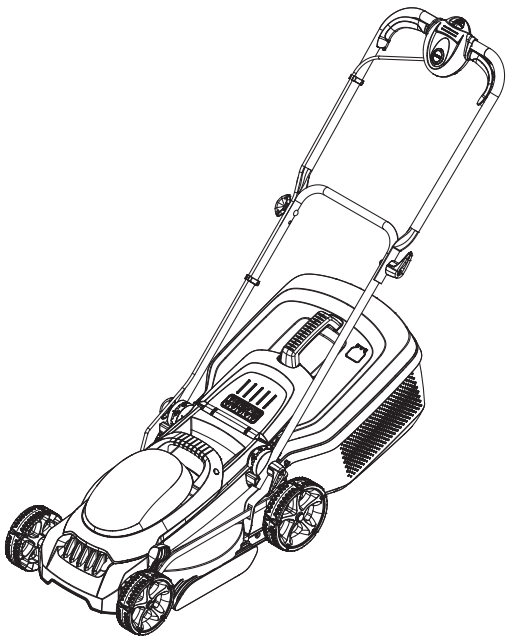


EasiMow 340R      EasiMow 380R  
Art. 9679871-xx    Art. 9679872-xx

**Remark:** “xx” stands for customer and country variants.  
The basic product number is before the hyphen.


**EN   Operator’s manual**  
Electric Lawnmower

---



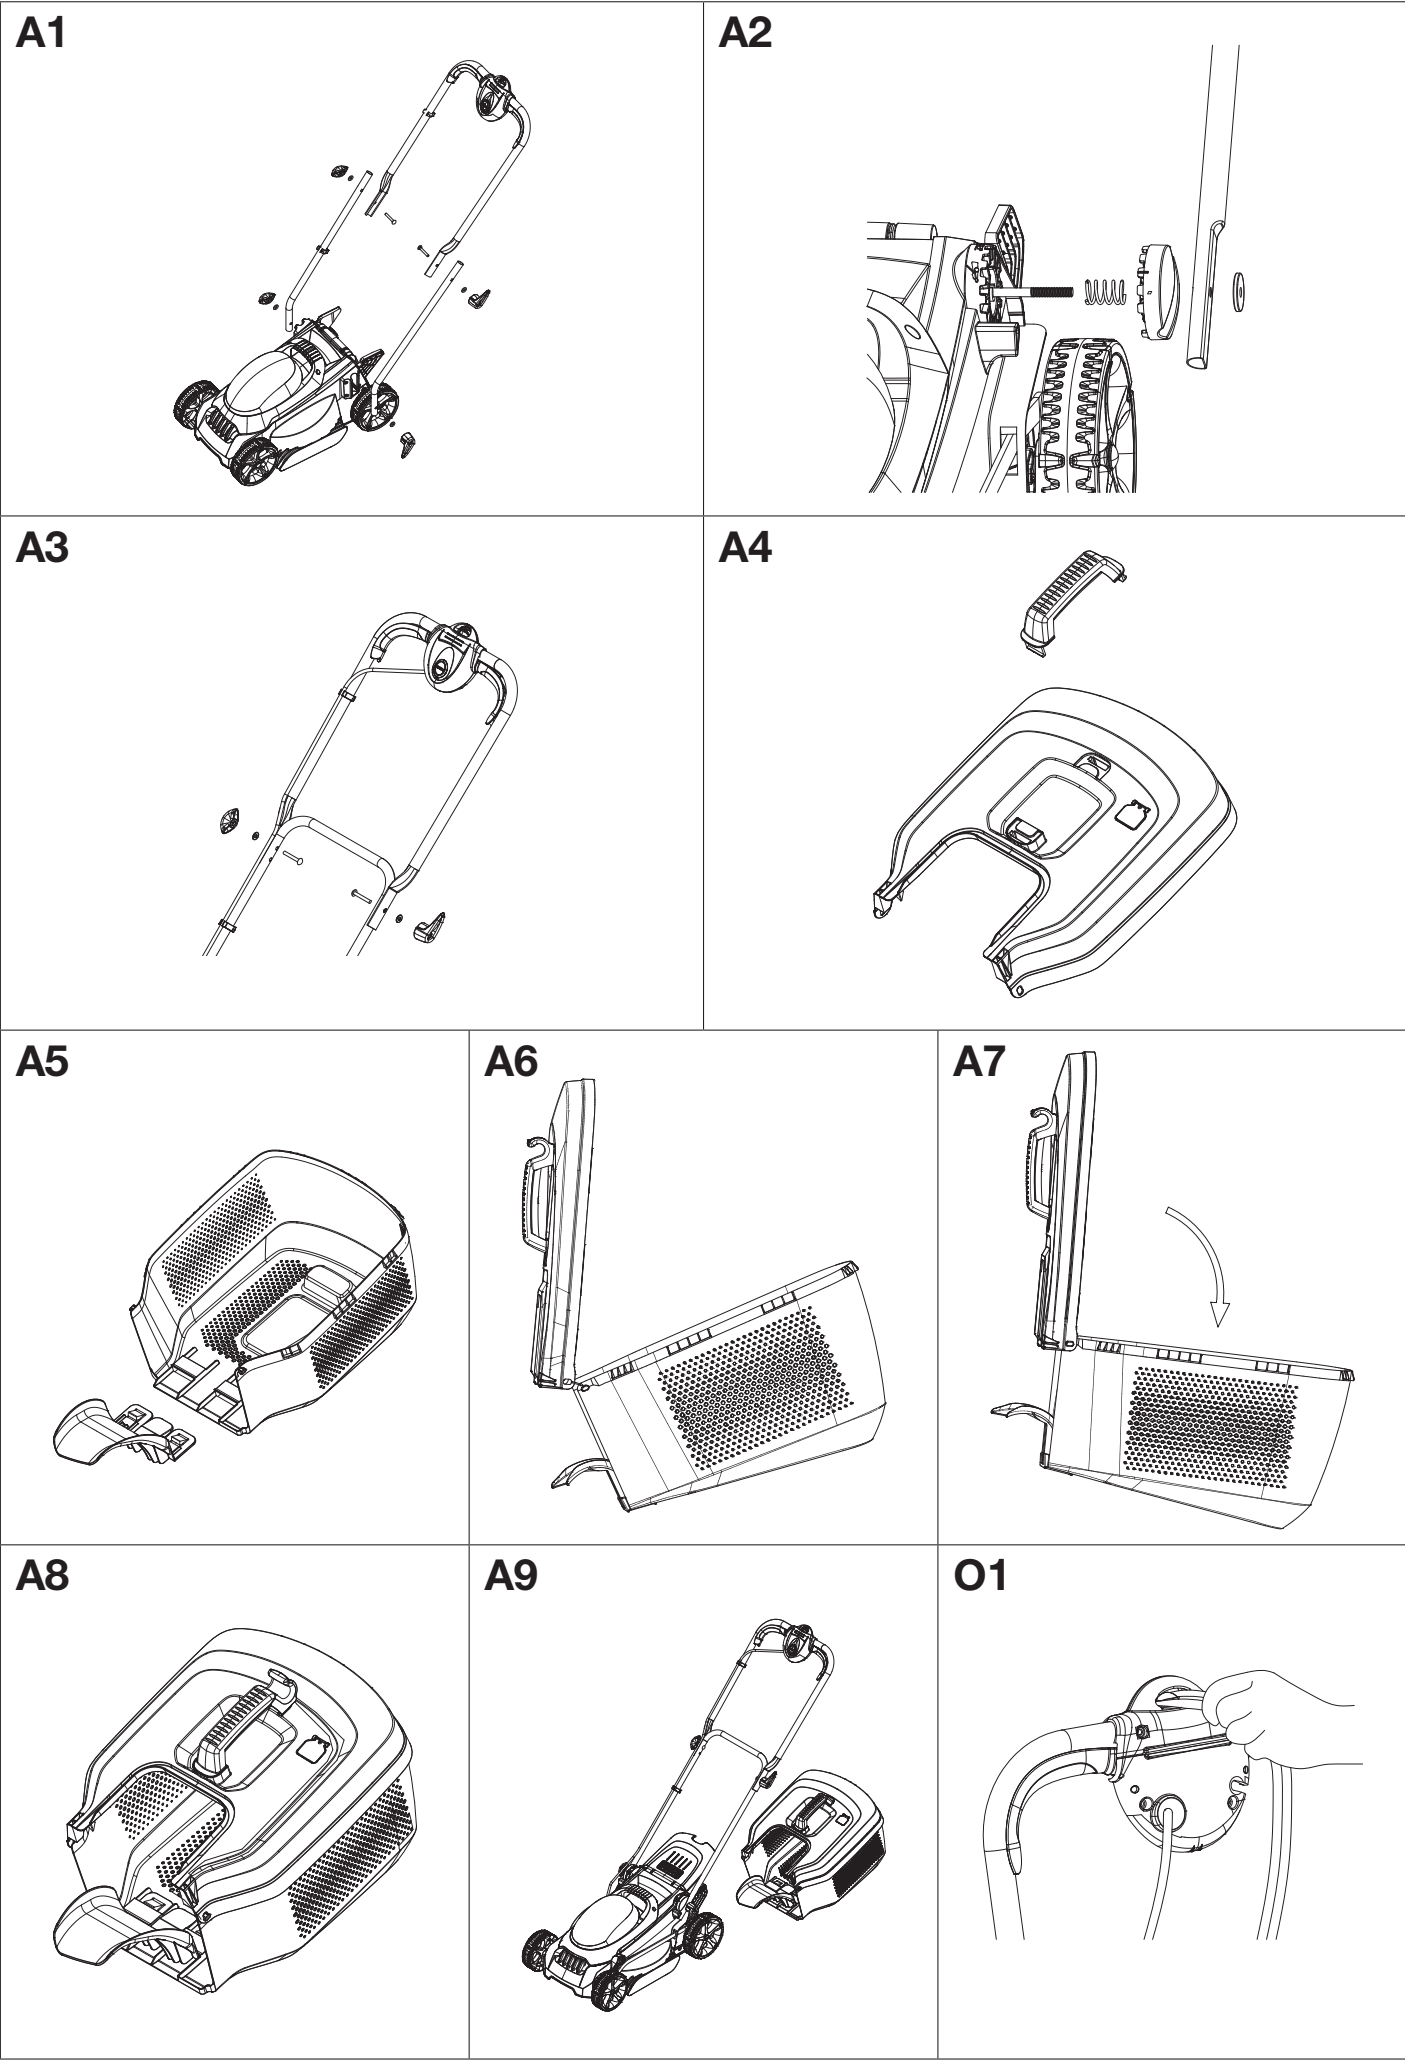



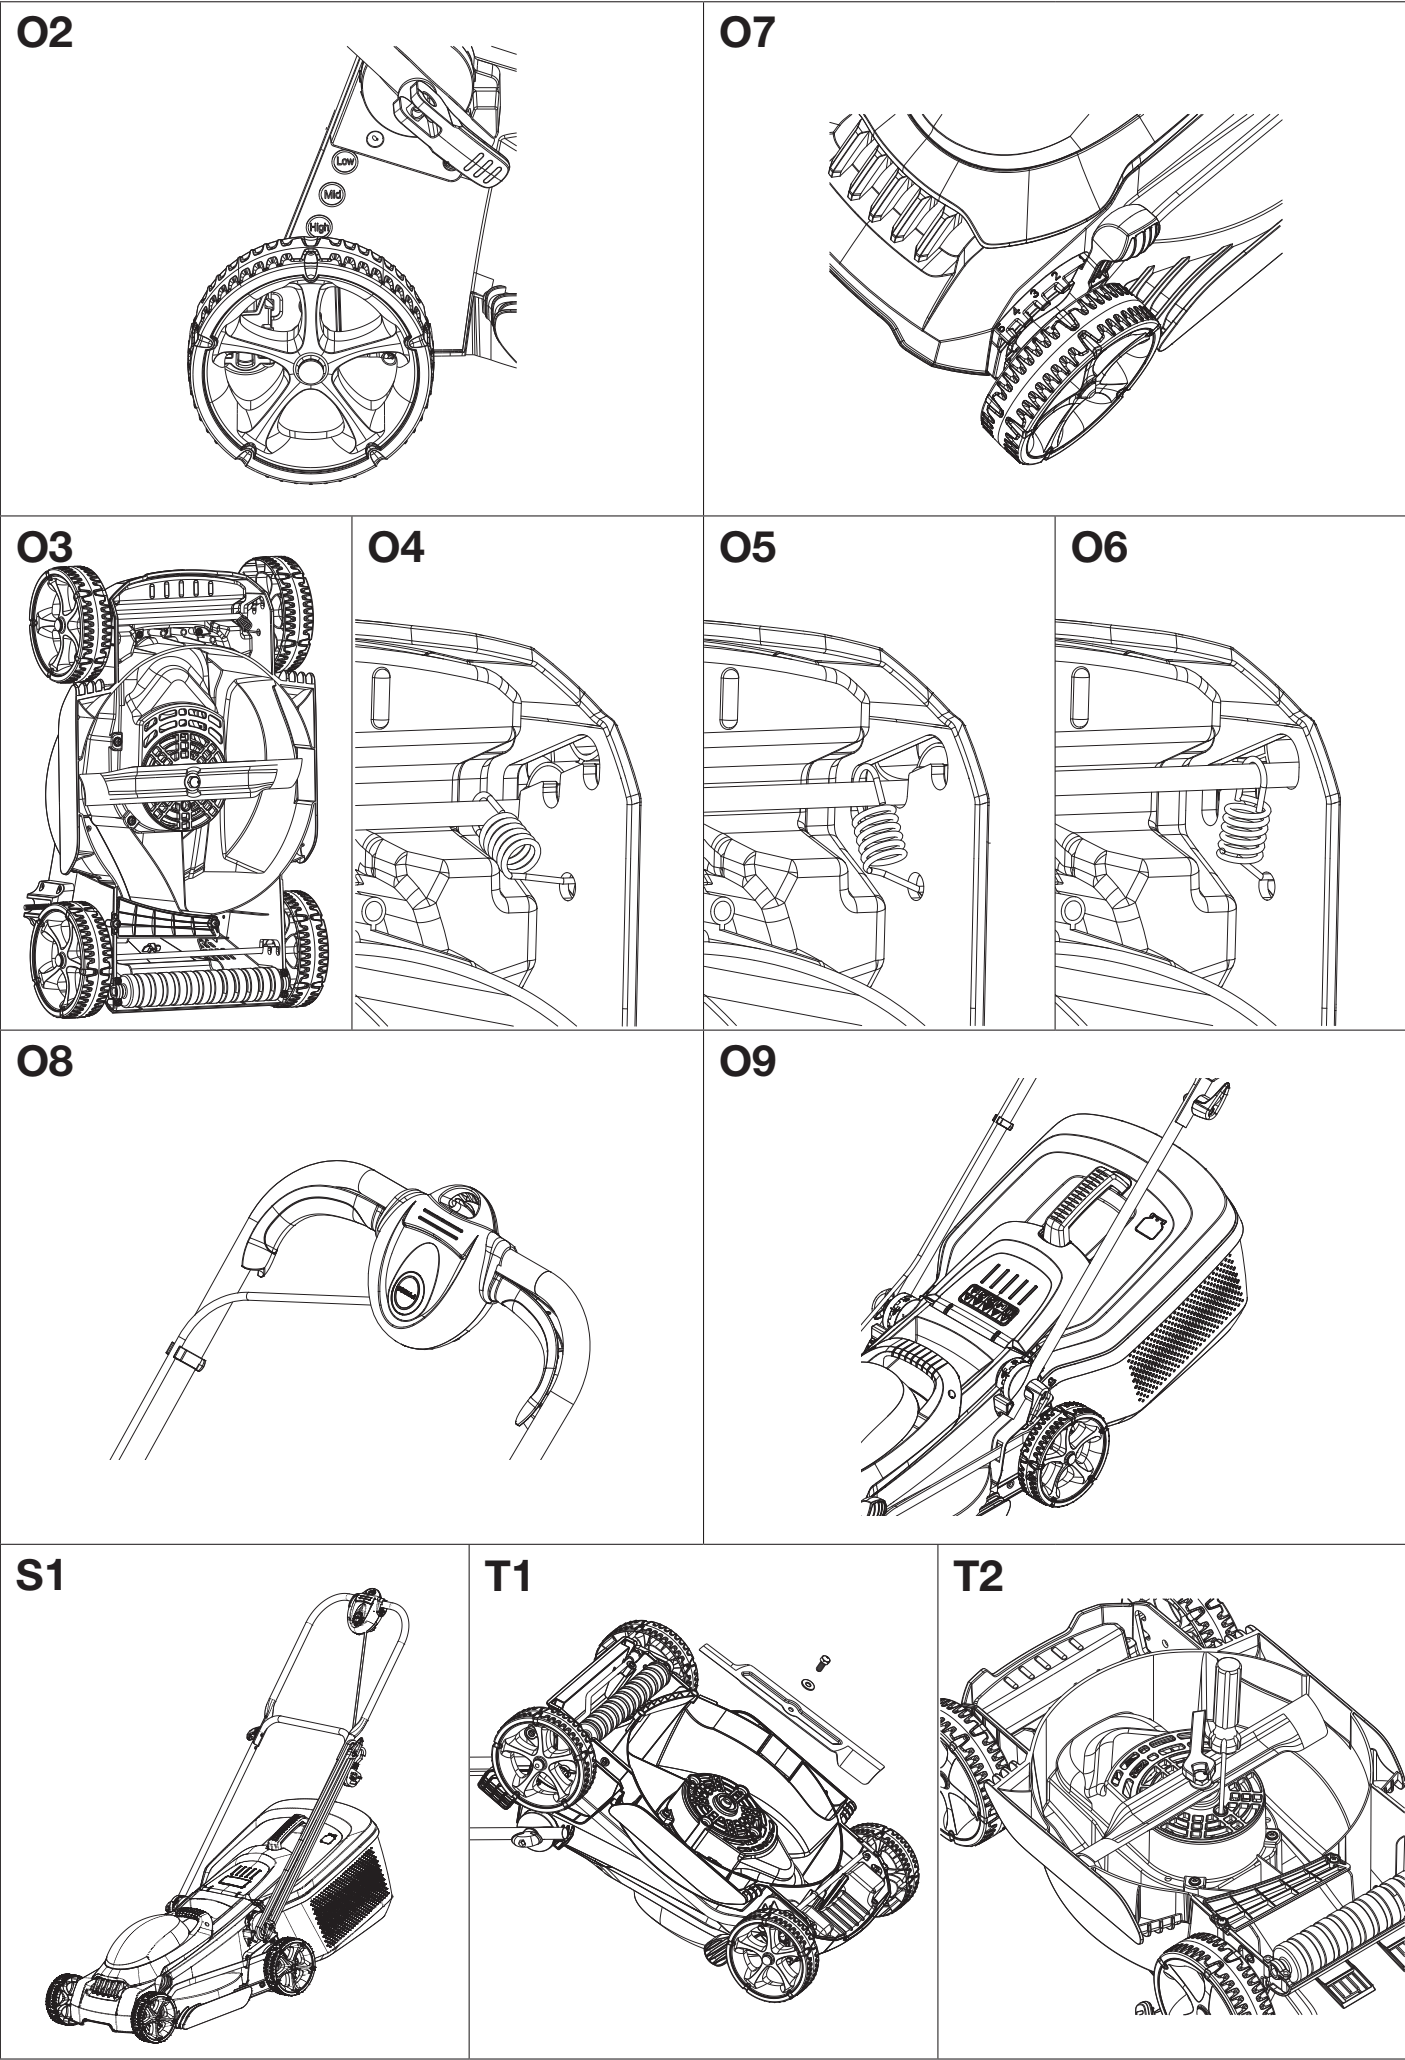



EN

1. SAFETY .....4

2. ASSEMBLY .....5

3. OPERATION .....5

4. MAINTENANCE .....6

5. STORAGE .....6


6. TROUBLESHOOTING .....6

7. TECHNICAL DATA .....7

8. ACCESSORIES .....7

9. SERVICE/WARRANTY.....7


Original instructions.

 This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety. Children should be supervised to ensure that they do not play with the product. The use of this product by young people under the age of 16 is not recommended.

Intended use:

The **FLYMO Lawnmower** is intended to mow lawn in private domestic gardens and allotments.

The product is not intended for long term use.



 **DANGER! Risk of injury!**

→ Do not use the product to cut bushes, hedges, shrubs, to cut of climbers or grass on roofs or balcony boxes, to chop up branches, twigs and to level irregularities in the soil. Do not use the product on a slope steeper than 20° maximum.



1. SAFETY

**IMPORTANT!**  
Read the operator's manual carefully before use and keep for future reference.



**Symbols on the product:**





Read operator's manual.





Keep bystanders away.



 
 
Beware of sharp blades. Blades continue to rotate after the motor is switched off.



Remove plug from mains before maintenance.





Not valid for the electric mower.



Secure the working area before starting to work. Watch out for hidden cables.



**General safety warnings**

 **Electrical safety**



**DANGER! Electric shock!**  
Risk of injury due to electric shock.

 → The product must be supplied through a residual current device (RCD) having a rated residual operating current not exceeding 30 mA.



**DANGER! Risk of physical injury!**  
Cut injury when the blade turns or the product starts accidentally.

→ Disconnect the product from the mains before you maintain or replace parts. Thereby the disconnected socket must be in the visual range.

**Cables**

If extension cables are used, these must comply with the minimum cross-sections in the table below:

Voltage	Cable length	Cross section
220 – 240 V/50 Hz	Up to 20 m	1.5 mm²
220 – 240 V/50 Hz	20 – 50 m	2.5 mm²

1. Mains cables and extensions are available from your local Approved Service Centre.
2. Only use extension cables specifically designed for outdoor use and which conform to one of the following specifications:  
Ordinary rubber (60245 IEC 53), Ordinary PVC (60227 IEC 53) or Ordinary PCP (60245 IEC 57).
3. If the connection lead is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Training

- a) Read the instructions carefully. Be familiar with the controls and the correct use of the machine.
- b) Never allow children or people unfamiliar with these instructions to use the machine. Local regulations can restrict the age of the operator.
- c) Never operate the machine while people, especially children, or pets are nearby.
- d) Keep in mind that the operator or user is responsible for accidents or hazards occurring to other people or their property.

Preparation

- a) While operating the machine always wear substantial footwear and long trousers. Do not operate the machine when barefoot or wearing open sandals. Avoid wearing clothing that is loose fitting or that hanging cords or ties.
- b) Thoroughly inspect the area where the machine is to be used and remove all objects which can be thrown by the machine.
- c) Before using, always visually inspect to see that the blade, blade bolt and the blade assembly are not worn or damaged. Replace worn or damaged components in set to preserve balance. Replace damaged or unreadable labels.
- d) Before use check the supply and extension cord for signs of damage or aging. If the cord becomes damaged during use, disconnect the cord from the supply immediately.  
DO NOT TOUCH THE CORD BEFORE DISCONNECTING THE SUPPLY.  
Do not use the machine if the cord is damaged or worn.

Operation

- a) Operate the machine only in daylight or in good artificial light.
- b) Avoid operating the machine in wet grass.
- c) Always be sure of your footing on slopes.
- d) Walk, never run.
- e) Mow across the face of slopes, never up and down.
- f) Exercise extreme caution when changing direction on slopes.
- g) Do not mow excessively steep slopes.
- h) Use extreme caution when reversing or pulling the machine towards you.
- i) Stop the blade(s) if the machine has to be tilted for transportation when crossing surfaces other than grass, and when transporting the machine to and from area to be used.
- j) Never operate the machine with defective guards or shields, or without safety devices, for example deflectors and/or grass collector, in place.
- k) Switch on the motor carefully according to instructions and with feet well away from the blade(s).
- l) Do not tilt the machine when switching on the motor, except if the machine has to be tilted for starting. In this case, do not tilt it more than absolutely necessary and lift only the part, which is away from the operator.
- m) Do not start the machine when standing in front of the discharge opening.
- n) Do not put hands or feet near or under rotating parts. Keep clear of the discharge opening at all times.
- o) Do not transport the machine while the power source is running.
- p,) Stop the machine, and remove plug from the socket. Make sure that all moving parts have come to a complete stop:
  - whenever you leave the machine,
  - before clearing blockages or unclogging chute,
  - before checking, cleaning or working on the machine,
  - after striking a foreign object. Inspect the machine for damage and make repairs before restarting and operating the machine;if the machine starts to vibrate abnormally (check immediately)
  - inspect for damage,
  - replace or repair any damaged parts,
  - check for and tighten any loose parts.

Maintenance and storage

- a) Keep all nuts, bolts, and screws tight to be sure the machine is in safe working condition.
- b) Check the grass collector frequently for wear or deterioration.
- c) Replace worn or damaged parts for safety.
- d) On machines with multi blade, take care as rotating one blade can cause other blades rotate.
- e) Be careful during adjustment of the machine to prevent entrapment of the fingers between moving blades and fixed parts of the machine.
- f) Always allow the machine to cool down before storing.



- g) When servicing the blades be aware that, even though the power source is switched off, the blades can still be moved.
- h) Use only genuine replacement parts and accessories.

#### Additional safety warnings

##### Electrical safety



#### **DANGER! Cardiac arrest!**

This product makes an electromagnetic field while it operates. This field may under some conditions interfere with active or passive medical implants. To decrease the risk of conditions that can possibly injure or kill, we recommend persons with medical implants to speak with their physician and the medical implant manufacturer before you operate the product.

Do not use under wet conditions.

Do not operate in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.

##### Personal safety



#### **DANGER! Risk of suffocation!**

Small parts can be easily swallowed. There is also a risk that the polybag can suffocate toddlers. Keep toddlers away when you assemble the product.

Do not use the start levers alternately.

Do not disassemble the product further than the delivery status.

Use gloves, wear slip resistant shoes and wear eye protection.

Do not overload the mower.

Never operate the product when you are tired, ill or under the influence of alcohol, drugs, or medicine.

Danger of slipping:

- in wet grass
- on steep slopes
- during transport

Be careful while going backwards.

## 2. ASSEMBLY



#### **DANGER! Risk of injury!**

**Cut injury when the product starts accidentally.**

→ **Disconnect the product from the mains and use gloves before you assemble the product.**

#### **To assemble the handle:**

##### **Only for 300R [Fig. A1]:**

1. Put the lower handles on the shafts.
2. Put the washers on the shafts.
3. On the left side, screw the wingknob onto the shaft.
4. On the right side, screw the cable hook onto the shaft.
5. Screw the lower handles tight with the wingknob and the cable hook.
6. Put the upper handle on the lower handles and slide the screws through the boreholes (there are 2 holes in the lower handle to choose the desired height).
7. Put the washers on the screws.
8. On the left side, screw the wingknob onto the shaft.
9. On the right side, screw the cable hook onto the shaft.
10. Attach the control cable with the cable clips.

##### **Only for 340R/380R [Fig. A2/A3]:**

1. Put the springs on the shafts.
2. Put the handle plates on the shafts.
3. Put the lower handle on the shafts.
4. Put the washers on the shafts.
5. On the left side, screw the wingknob onto the shaft.
6. On the right side, screw the cable hook onto the shaft.
7. Put the upper handle on the lower handle and slide the screws through the boreholes.
8. Put the washers on the screws.
9. On the left side, screw the wingknob onto the shaft.
10. On the right side, screw the cable hook onto the shaft.
11. Attach the control cable with the cable clips.

#### **To assemble the grass box [Fig. A4/A5/A6/A7/A8]:**

1. Push the grass box handle into the slots in the grass box cover until it audibly engages.
2. Slide the grass box tongue into the slots in the grass box until it audibly engages.
3. Align the grass box cover and the grass box locators.
4. Fold the grass box cover towards the grass box.
5. Push the grass box cover on the grass box. Make sure that all clips are snapped in correctly.

#### **To attach the grass box to the lawnmower [Fig. A9]:**

1. Lift the protective cover.
2. Attach the grass box to the hooks on the rear of the mower.

## 3. OPERATION



#### **DANGER! Risk of injury!**

**Cut injury when the product starts accidentally.**

→ **Wait for the blade to stop, disconnect the product from the mains and use gloves before you adjust or transport the product.**

#### **To connect the mower [Fig. O1]:**



#### **DANGER! Electric shock!**

**To avoid damage to the mains cable, the mains cable must be inserted into the cable lock.**

→ **Before you operate insert the mains cable into the cable lock.**

1. Loop the mains cable, insert the loop into the cable lock ⑨ and pull tight.
2. Connect the mains cable to the mains.

#### **To adjust the cutting height:**

For the first cut of the season, always cut on the highest cutting height possible, and gradually lower the cutting height over successive cuts to your desired height for the lawn.

#### **Only for 300R (in 3 positions) [Fig. O2/O3/O4/O5/O6]:**

The cutting height can be adjusted from 20 – 60 mm.

**Position 'Low' (20 mm):** Cutting height setting should only be used on well maintained 'manicured lawns' without excessive moss or thatch.

**Position 'Mid' (40 mm):** Cutting height setting is the suitable for most lawns.

**Position 'High' (60 mm):** Cutting height setting is used when you lawn has excessive growth such as following holidays or first cut of the season.

→ Move both axles to the desired position in the E-Gate. Make sure that both sides of the axle are in the same position. Make sure that both axles are in the same position.

#### **Only for 340R/380R (in 5 positions) [Fig. O7]:**

The cutting height can be adjusted from 20 – 60 mm (from rear to front).

**Position 1 (20 mm):** Cutting height setting should only be used on well maintained 'manicured lawns' without excessive moss or thatch.

**Position 2 (30 mm):** Cutting height setting is the suitable for most lawns.

**Position 3 (40 mm):** Cutting height setting is the suitable for most lawns.

**Position 4 (50 mm):** Cutting height setting is the suitable for most lawns.

**Position 5 (60 mm):** Cutting height setting is used when you lawn has excessive growth such as following holidays or first cut of the season.

1. Pull the lever to the wheel.
2. Move the lever to the desired position.
3. Release the lever and let it engage.

#### **To start the mower [Fig. O8]:**



#### **DANGER! Risk of injury!**

**Risk of injury if the product does not stop when you release the start lever.**

→ **Do not bypass the safety devices or switches. For example do not attach the start lever to the handle.**



#### To start:

**The mower is fitted with a two-handed safety device (start lever with starting lockout) to prevent the mower from being turned on by accident.**

There are two start levers. Either one has to be used to start.

1. Push the starting lockout with one hand and pull the start lever with the other hand.  
*The mower starts.*
2. Release the starting lockout.

**Only for 340R/380R [Fig. O9]: The level indicator opens during mowing. When it closes during mowing, the grass box is full and must be emptied.**

#### To stop:

- Release the start lever.  
*The mower stops.*

#### Tips to use the mower:

If grass residue is left in the discharge opening, pull the mower backwards about 1 m so that the grass residue can drop out downwards.

To produce a well-maintained lawn and optimise the cutting performance, we recommend to cut the lawn regularly once a week if possible. The lawn becomes denser if you cut it frequently.

After relatively long cutting intervals (holiday lawn), first of all cut in one direction with the highest cutting height and then cut in the crosswise direction with the required cutting height.

If possible, only cut the grass when it is dry, if the grass is damp, the cutting pattern will be uneven.

#### Rear Roller:

For lawnmowers fitted with a rear roller, it is possible to create a striped effect on the lawn. For the best stripe results, we recommend cutting on the lowest possible cutting height suited to your lawn. The stripe effect will fade in time between cuts.

## 4. MAINTENANCE



#### **DANGER! Risk of injury!**

**Cut injury when the product starts accidentally.**

- **Wait for the blade to stop, disconnect the product from the mains and use gloves before you maintain the product.**

#### To clean the mower:



#### **DANGER! Risk of injury!**

**Risk of injury and risk of damage to the product.**

- **Do not clean the product with water or with a water jet (in particular high-pressure water jet).**
- **Do not clean with chemicals including petrol or solvents. Some can destroy critical plastic parts.**

**The airflow slots must always be clean.**

#### To clean the underside of the mower:

The underside is easiest to clean after you mowed.

1. Lay the mower on its side carefully.
2. Clean the underside, the blade and the discharge opening with a brush (do not use sharp objects).

#### To clean the overside of the mower and the grass box:

1. Clean the overside with a damp cloth.
2. Clean the airflow slots and the grass box with a soft brush (do not use sharp objects).

## 5. STORAGE

#### To put into storage [Fig. S1]

**The product must be stored away from children.**

1. Disconnect the mower from the mains.
2. Clean the mower (see 4. MAINTENANCE).

3. Wrap the cable around the cable hooks.
4. Store the mower in a dry, enclosed and frost-free place.

#### Disposal:

(in accordance with RL2012/19/EC/S.I. 2013 No. 3113)



The product must not be disposed of to normal household waste. It must be disposed of in line with local environmental regulations.

#### IMPORTANT!

- Dispose of the product through or via your municipal recycling collection centre.

## 6. TROUBLESHOOTING



#### **DANGER! Risk of injury!**

**Cut injury when the product starts accidentally.**

- **Wait for the blade to stop, disconnect the product from the mains and use gloves before you troubleshoot the product.**

#### To replace the blade [Fig. T1/T2]:



#### **DANGER! Risk of injury!**

**Cut injury when the blade turns and it is damaged, bent, out of balance or has chipped edges.**

- **Do not use the mower when the blade is damaged, bent, out of balance or has chipped edges.**
- **Do not regrind the blade.**

The FLYMO spare parts are available from your FLYMO dealer or from the FLYMO service.

#### Only use an original FLYMO blade:

- **FLYMO replacement blade for 300R: Art. FLY 085**
- **FLYMO replacement blade for 340R: Art. FLY 086**
- **FLYMO replacement blade for 380R: Art. FLY 088**

1. Ensure the lawnmower is stopped and disconnected. Insert a screwdriver through the reinforced hole on the deck into the drive pulley wheel to stop the wheel from turning during the blade change.
2. Unscrew the blade bolt. Take care not to damage the drive pulley wheel when applying force.
3. Remove the blade bolt and the washer.
4. Remove the blade.
5. Put the new blade on the lawnmower.
6. Put the washer and the blade bolt on the lawnmower.
7. Screw the new blade tight with the blade bolt. Tightening torque is 15 – 20 Nm for the EasiMow 300R and EasiMow 340R and 20 – 25 Nm for the EasiMow 380R. Do not over-torque. Take care not to damage the drive pulley wheel when applying force.
8. Ensure the screwdriver is removed before attempting to turn on the machine.

Problem	Possible Cause	Remedy
<b>Mower does not start</b>	Mains cable is disconnected or damaged.	→ Connect the mains cable or if necessary let it be replaced by an authorised specialist dealer or the FLYMO Service.
	Motor is blocked.	→ Remove the obstacle. Start again.
<b>Engine is jammed and makes a noise</b>	Motor is blocked.	→ Remove the obstacle. Start again.
	Cutting height is too low.	→ Raise the cutting height.
<b>Loud noises, the mower is rattling</b>	Screws on engine, its fixing or on the mower chasing are loose.	→ Let the screws be tightened by an authorised specialist dealer or the FLYMO Service.
<b>Mower runs unevenly or vibrates strongly</b>	Blade is damaged/worn or the blade mounting is released.	→ Replace the blade.
	Blade is very dirty.	→ Clean the blade.
<b>Lawn is not cleanly mowed</b>	Blade is blunt or damaged.	→ Replace the blade.
	Cutting height is too low.	→ Raise the cutting height.




**For any other malfunctions please contact the Husqvarna UK Ltd. Customer Service. Repairs must only be done by Husqvarna UK Ltd. service departments or specialist dealers approved by FLYMO.**



## 7. TECHNICAL DATA

<i>Electric Lawnmower</i>	Unit	Value EasiMow 300R 9679870-xx	Value EasiMow 340R 9679871-xx	Value EasiMow 380R 9679872-xx
Rated power	W	1000	1400	1600
Mains voltage	V (AC)	230	230	230
Mains frequency	Hz	50	50	50
Speed of rotation cutting blade	R/min	3550	3350	3500
Cutting width	cm	30	34	38
Cutting height adjustment	mm	20 – 60 (3 positions)	20 – 60 (5 positions)	20 – 60 (5 positions)
Volume of grass box	l	30	35	45
Weight	kg	8.5	10.8	12.4
Sound pressure level $L_{pA}^{1)}$ Uncertainty $k_{pA}$	dB (A)	88.4 3	87.5 3	89.3 3
Sound power level $L_{WA}^{2)}$ : measured/guaranteed Uncertainty $k_{WA}$	dB (A)	89 / 91 2.0	90 / 91 1.0	94 / 95 1.0
Hand/arm vibration $a_{vhw}^{1)}$ Uncertainty $k_{vhw}$	$m/s^2$	3.7 1.5	< 2.5 1.5	< 2.5 1.5

Measuring process complying with: <sup>1)</sup> EN 60335-2-77 <sup>2)</sup> RL 2000/14/EC/S.I. 2001 No.1701



**NOTE:** The stated vibration emission value has been measured according to a standardized test procedure and can be used for comparison of one electric power tool with another. It can also be used for preliminary evaluation of exposure. The vibration emission value can vary during actual use of the electric power tool.

## 8. ACCESSORIES

<b>FLYMO Replacement Blade for 300R</b>	As replacement for blunt blade.	<b>Art. FLY 085</b>
<b>FLYMO Replacement Blade for 340R</b>	As replacement for blunt blade.	<b>Art. FLY 086</b>
<b>FLYMO Replacement Blade for 380R</b>	As replacement for blunt blade.	<b>Art. FLY 088</b>

## 9. SERVICE/WARRANTY

### Service:

Please contact the address on the back page.

### Warranty statement:

In the event of a warranty claim, no charge is levied to you for the services provided.

Husqvarna UK Ltd. grants a warranty for all original FLYMO new products for two years from the date of original purchase from the retailer, provided that the devices have been for private use only. This manufacturer's warranty does not apply to products acquired second hand. This warranty includes all significant defects of the product that can be proved to be material or manufacturing faults. This warranty is fulfilled by supplying a fully functional replacement product or by repairing the faulty product sent to us free of charge; we reserve the right to choose between these options. This service is subject to the following provisions:

- The product has been used for its intended purpose as per the recommendations in the operating instructions.
- Neither the purchaser nor a third party has attempted to open or repair the product.
- Only Original FLYMO replacement parts and wear parts have been used for operation.
- Presentation of the receipt.

Normal wear and tear of parts and components (such as blades, blade fixing parts, turbines, light bulbs, V-belts/toothed belts, impellers, air filters, spark plugs), visual changes, wear parts and consumables are excluded from the warranty.

This manufacturer's warranty is limited to replacement and repair of products in accordance with the abovementioned conditions. The manufacturer's warranty does not constitute an entitlement to lodge other claims against us as a manufacturer, such as for damages. This manufacturer's warranty does **not**, of course, affect statutory and contractual warranty claims against the dealer/retailer.

The manufacturer's warranty is governed by the law of the Federal Republic of Germany.

In case of a warranty claim, please return the faulty product, together with a copy of the receipt and a description of the fault, with postage paid to the service address.

### Consumables:

The blade and the wheels are consumables and are not included in the warranty.





## PRODUCT LIABILITY

In accordance with the German Product Liability Act, we hereby expressly declare that we accept no liability for damage incurred from our products where said products have not been properly repaired by a FLYMO-approved service partner or where original FLYMO parts or parts authorised by FLYMO were not used.

## EC DECLARATION OF CONFORMITY


The undersigned hereby certifies as the authorized representative of the manufacturer, Husqvarna AB, 561 82 Huskvarna, Sweden, that, when leaving our factory, the unit(s) indicated below is/are in accordance with the harmonised EU guidelines, EU standards of safety and product specific standards. This certificate becomes void if the unit(s) is/are modified without our approval.

Description of the product:	<b>Mower EasiMow</b>
Product type:	<b>300R 340R 380R</b>
Article-Number:	<b>9679870-xx 9679871-xx 9679872-xx</b>
CE-Directives:	<b>2006/42/EC 2014/30/EU 2011/65/EU 2000/14/EC</b>
Harmonised EN:	<b>EN ISO 12100 EN 60335-1 EN 60335-2-77</b>
Deposited Documentation:	<b>GARDENA Technical Documentation, M. Jäger, 89079 Ulm</b>
Conformity Assessment according to:	<b>2000/14/EC Procedure: art. 14 Annex VI</b>
Noise level: measured / guaranteed	<b>9679870-xx: 89 dB(A) / 91 dB(A) 9679871-xx: 90 dB(A) / 91 dB(A) 9679872-xx: 94 dB(A) / 95 dB(A)</b>
Ulm, 09.09.2021 Authorised representative:	<div> <b>Reinhard Pompe</b> Vice President Products</div> <div> <b>Wolfgang Engelhardt</b> Vice President Supply Chain</div>



# UKCA DECLARATION OF CONFORMITY (ONLY FOR UK)

The manufacturer: Husqvarna AB SE 561 82 Huskvarna, Sweden hereby certifies, when leaving our factory, the unit(s) indicated below is/are in accordance with the UK Regulations, designated standards of safety and product specific designated standards. This certificate becomes void if the units are modified without our approval.

Description of the Product:	Mower EasiMow
Product type:	300R 340R 380R
Article Number:	9679870-xx 9679871-xx 9679872-xx
UK regulations:	S.I. 2008/1597 S.I. 2016/1091 S.I. 2012/3032 S.I. 2001/1701
Designated Standards:	EN ISO 12100 EN 60335-1 EN 60335-2-77
Authorised Representative:	Husqvarna UK Limited
Deposited Documentation:	Preston Road, Aycliffe, County Durham UK DL5 6 UP
Noise level: measured / guaranteed	967 98 70-xx: 89 dB(A) / 91 dB(A) 967 98 71-xx: 90 dB(A) / 91 dB(A) 967 98 72-xx: 94 dB(A) / 95 dB(A)
Conformity Assessment according to:	According to S.I. 2001/1701 Art, 11 Schedule 9
Aycliffe, 09.09.2021 Authorised Representative:	 John Thompson Director



Service Address and Importer to

**Great Britain**

Husqvarna UK Ltd  
Preston Road  
Aycliffe Industrial Park  
Newton Aycliffe  
County Durham  
DL5 6UP  
Phone: +44 (0) 344 8444558  
customer.services@husqvarna.co.uk

21048-85.960.02/0921  
Husqvarna AB  
S-561 82 Huskvarna  
Sweden



Our policy of continuous improvement means that the specification of products may be altered from time to time without prior notice.  
Copyright © 2021 Flymo S.A. All rights reserved.  
Flymo® and other product and feature names are registered or unregistered trademarks of Flymo S.A.