



EasyCut 40/18V P4A

Art. 14733


01

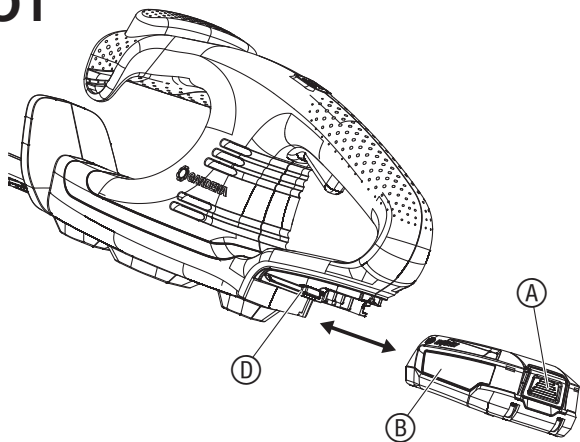


02

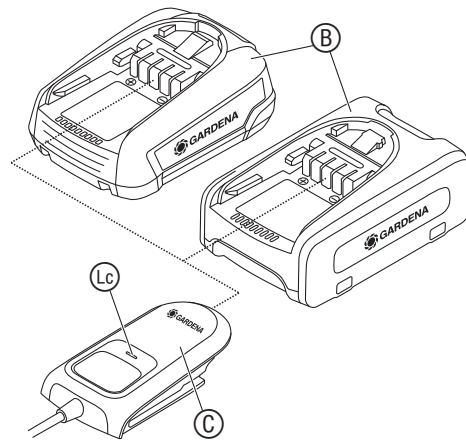


03

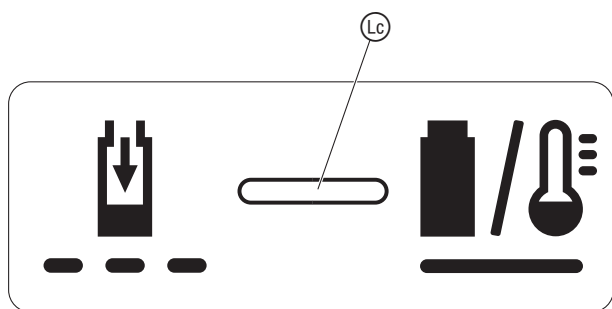


04

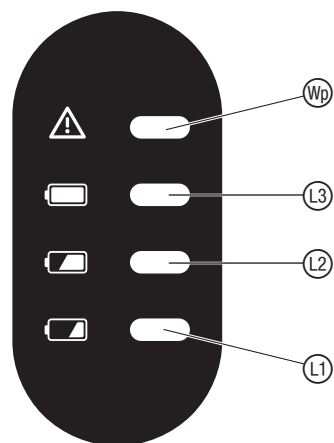


05

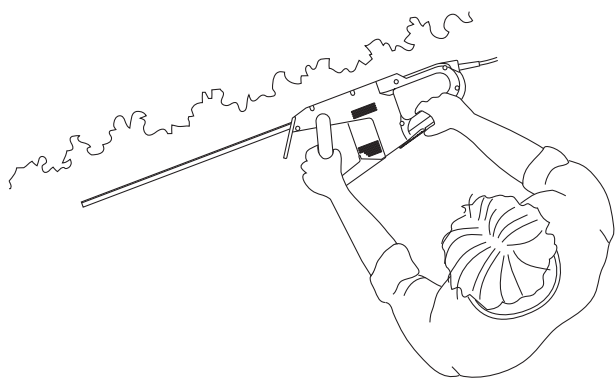


06

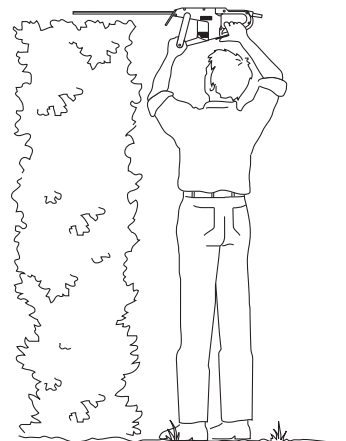

07

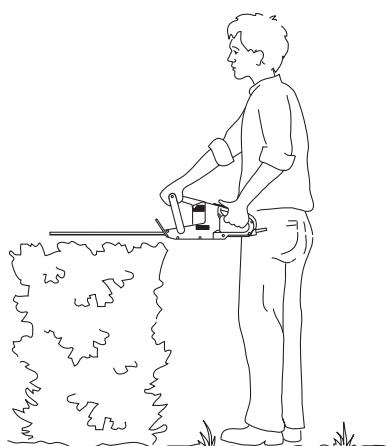

08

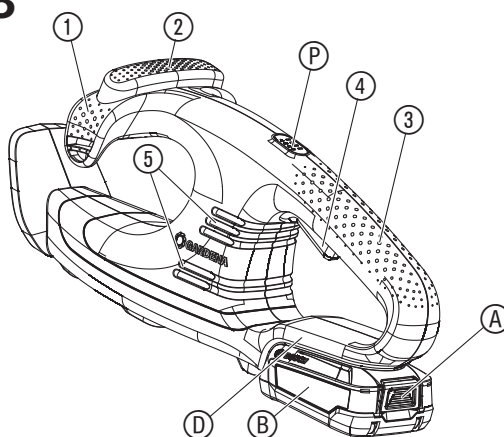

EN Battery Hedge Trimmer

1. SAFETY 4

2. OPERATION..... 6

3. MAINTENANCE 6

4. STORAGE 7


5. TROUBLESHOOTING 7

6. TECHNICAL DATA 7

7. ACCESSORIES 7

8. SERVICE/WARRANTY..... 7

Translation of the original instructions.

 This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety. Children should be supervised to ensure that they do not play with the product. The use of this product by young people under the age of 16 is not recommended.

Intended use:

The **GARDENA Hedge Trimmer** is intended to cut hedges, shrubs and grass coverings in private domestic gardens and allotments.

The product is not intended for long term use.





DANGER! Risk of physical injury!

→ Do not use the product to cut lawns/lawn edges, to chop up material or to make compost.


1. SAFETY

IMPORTANT!
Read the operator’s manual carefully before use and keep for future reference.


Symbols on the product:




Read operator’s manual.




Danger – Keep hands away from blade.




Do not expose to rain.



For the charger:
Remove plug from the mains immediately if the cable is damaged or cut.




Wear eye and ear protection.



Remove the Battery before cleaning or maintenance.

General safety warnings

General machine safety warnings



WARNING!

Read all safety warnings, instructions, illustrations and specifications provided with this machine. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.
The term “machine” in the warnings refers to your mains operated (corded) machine or battery operated (cordless) machine.

1) Work area safety

a) Keep work area clean and well lit. Cluttered or dark areas invite accidents.

b) Do not operate machines in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.
Machines create sparks which may ignite the dust or fumes.

- c) Keep children and bystanders away while operating a machine.
Distractions can cause you to lose control.
- 2) Electrical safety**
- a) Machine plugs must match the outlet. Never modify the plug in any way. Do not use any adaptor plugs with earthed (grounded) machines.
Unmodified plugs and matching outlets will reduce risk of electric shock.
- b) Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- c) Do not expose machines to rain or wet conditions.
Water entering a machine will increase the risk of electric shock.
- d) Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the machine. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
- e) When operating a machine outdoors, use an extension cord suitable for outdoor use.
Use of a cord suitable for outdoor use reduces the risk of electric shock.
- f) If operating a machine in a damp location is unavoidable, use a residual current device (RCD) protected supply.
Use of an RCD reduces the risk of electric shock.
- 3) Personal safety**
- a) Stay alert, watch what you are doing and use common sense when operating a machine. Do not use a machine while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating machines may result in serious personal injury.
- b) Use personal protective equipment. Always wear eye protection. Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- c) Prevent unintentional starting. Ensure the switch is in the OFF-position before connecting to power source and/or battery pack, picking up or carrying the machine.
Carrying machines with your finger on the switch or energising machines that have the switch on invites accidents.
- d) Remove any adjusting key or wrench before turning the machine on. A wrench or a key left attached to a rotating part of the machines may result in personal injury.
- e) Do not overreach. Keep proper footing and balance at all times.
This enables better control of the machine in unexpected situations.
- f) Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts.
Loose clothes, jewellery or long hair can be caught in moving parts.
- g) If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of dust collection can reduce dust-related hazards.
- h) Do not let familiarity gained from frequent use of machines allow you to become complacent and ignore machine safety principles.
A careless action can cause severe injury within a fraction of a second.
- 4) Machine use and care**
- a) Do not force the machine. Use the correct machine for your application. The correct machine will do the job better and safer at the rate for which it was designed.
- b) Do not use the machine if the switch does not turn it on and off. Any machine that cannot be controlled with the switch is dangerous and must be repaired.
- c) Disconnect the plug from the power source and/or the battery pack from the machine before making any adjustments, changing accessories, or storing machines. Such preventive safety measures reduce the risk of starting the machine accidentally.
- d) Store idle machines out of the reach of children and do not allow persons unfamiliar with the machine or these instructions to operate the machine. Machines are dangerous in the hands of untrained users.
- e) Maintain machines. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the machine’s operation. If damaged, have the machine repaired before use. Many accidents are caused by poorly maintained machines.
- f) Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- g) Use the machine, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed. Use of the machine for operations different from those intended could result in a hazardous situation.
- h) Keep handles and grasping surfaces dry, clean and free from oil and grease. Slippery handles and grasping surfaces do not allow for safe handling and control of the machine in unexpected situations.
- 5) Battery tool use and care**
- a) Recharge only with the charger specified by the manufacturer.
A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- b) Use machines only with specifically designated battery packs.
Use of any other battery packs may create a risk of injury and fire.
- c) When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.
Shorting the battery terminals together may cause burns or a fire.

d) Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.

Liquid ejected from the battery may cause irritation or burns.

e) Do not use a battery pack or tool that is damaged or modified.

Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.

f) Do not expose a battery pack or tool to fire or excessive temperature.
Exposure to fire or temperature above 130 °C may cause explosion.

g) Follow all charging instructions and do not charge the battery pack or tool outside the temperature range specified in the instructions.
Charging improperly or at temperatures outside the specified range may damage the battery and increase the risk of fire.

6) Service

a) Have your machine serviced by a qualified repair person using only identical replacement parts.

This will ensure that the safety of the machine is maintained.

b) Never service damaged battery packs. *Service of battery packs should only be performed by the manufacturer or authorised service providers.*

Hedge trimmer safety warnings

a) Keep all parts of the body away from the blade. Do not remove cut material or hold material to be cut when blades are moving. Blades continue to move after the switch is turned off. A moment of inattention while operating the hedge trimmer may result in serious personal injury.

b) Carry the hedge trimmer by the handle with the blade stopped and taking care not to operate any power switch.
Proper carrying of the hedge trimmer will decrease the risk of inadvertent starting and resultant personal injury from the blades.

c) When transporting or storing the hedge trimmer, always fit the blade cover. *Proper handling of the hedge trimmer will decrease the risk of personal injury from the blades.*

d) When clearing jammed material or servicing the unit, make sure all power switches are off and the battery pack is removed or disconnected.
Unexpected actuation of the hedge trimmer while clearing jammed material or servicing may result in serious personal injury.

e) Hold the hedge trimmer by insulated gripping surfaces only, because the blade may contact hidden wiring.

Blades contacting a "live" wire may make exposed metal parts of the hedge trimmer "live" and could give the operator an electric shock.

f) Keep all power cords and cables away from cutting area.
Power cords or cables may be hidden in hedges or bushes and can be accidentally cut by the blade.

g) Do not use the hedge trimmer in bad weather conditions, especially when there is a risk of lightning.

This decreases the risk of being struck by lightning.

Search hedges and bushes for hidden objects (e.g. wire fences and hidden wires).

The use of a residual current device (RCD) with a trip current of 30 mA or less is recommended.

Hold the hedge trimmer with both hands on both handles.

The hedge trimmer is intended for use when the user is standing on the ground and not on a ladder or other unstable surface.

Additional safety warnings

Battery safety



Read all the safety and general instructions.

Failure to observe the safety and general instructions may result in electric shock, fire and/or serious injury.

Store these instructions in a safe place.


Only use the charger if you can fully evaluate all functions and carry them out without restrictions, or if you have received corresponding instructions.

→ **Supervise children during use, cleaning and maintenance.**

This will ensure that children do not play with the charger.

→ **Charge only lithium-ion batteries of the POWER FOR ALL system type PBA 18V with a capacity of 1.5 Ah or more (5 battery cells or more). The battery voltage must match the battery charging voltage of the charger. Do not charge any non rechargeable batteries.**

Otherwise there is a risk of fire and explosion.

→  **Do not expose the charger to rain or wet conditions.**
Water entering a power tool will increase the risk of electric shock.

→ **Keep the charger clean.** *Dirt poses a risk of electric shock.*

→ **Always check the charger, cable and plug before use. Stop using the charger if you discover any damage. Do not open the charger yourself, and have it repaired only by a qualified specialist using only original replacement parts.**

Damaged chargers, cables and plugs increase the risk of electric shock.

→ **Do not operate the charger on an easily ignited surface (e.g. paper, textiles, etc.) or in a flammable environment.**

There is a risk of fire due to the charger heating up during operation.

→ *In order to avoid safety hazards, if the power supply cord needs to be replaced, this must be done by GARDENA or by a customer service centre that is authorised to repair GARDENA power tools.*

→ **Do not operate the product while it is charging.**

Products sold in GB only: Your product is fitted with an BS 1363/A approved electric plug with internal fuse (ASTA approved to BS 1362). If the plug is not suitable for your socket outlets, it should be cut off and an appropriate plug fitted in its place by an authorised customer service agent. The replacement plug should have the same fuse rating as the original plug. The severed plug must be disposed of to avoid a possible shock hazard and should never be inserted into a mains socket elsewhere.

→ **These safety warnings apply only for lithium-ion batteries of the POWER FOR ALL system PBA 18V.**

→ **Only use the battery with products of the POWER FOR ALL system manufacturers.** *This is the only way in which you can protect the battery against dangerous overload.*

→ **Recharge only with the charger specified by the manufacturer.**

A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.

→ **The battery is supplied partially charged.**

To ensure full battery capacity, fully charge the battery in the charger before using your power tool for the first time.

→ **Keep battery packs out of the reach of children.**

→ **Do not open the battery.** *There is a risk of short-circuiting.*

→ **In case of damage and improper use of the battery, vapours may be emitted. The battery can set alight or explode.**

Ensure the area is well ventilated and seek medical attention should you experience any adverse effects. The vapours may irritate the respiratory system.

→ **If used incorrectly or if the battery is damaged, flammable liquid may be ejected from the battery. Contact with this liquid should be avoided. If contact accidentally occurs, rinse off with water. If the liquid comes into contact with your eyes, seek additional medical attention.**

Liquid ejected from the battery may cause irritation or burns.

→ **If the battery is damaged liquid can be ejected and cover nearby surfaces. Check affected parts.** *Clean these parts or change them if necessary.*

→ **Do not short-circuit the battery pack. When the battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.**

Shorting the battery terminals together may cause burns or a fire.

→ **The battery contacts can be hot after use. Be careful of the hot contacts when remove the battery.**

→ **The battery can be damaged by pointed objects such as nails or screwdrivers or by force applied externally.** *An internal short circuit may occur, causing the battery to burn, smoke, explode or overheat.*

→ **Never service damaged battery packs.**

Service of battery packs should only be performed by the manufacturer or authorized service providers.



Protect the battery against heat, e.g. against continuous intense sunlight, fire, dirt, water and moisture.



There is a risk of explosion and short-circuiting.

→ **Only operate and store the battery at an ambient temperature between -20 °C and +50 °C.** *Do not leave the battery in your car in the summer, for example. At temperatures of <0 °C some devices may experience a loss of power.*

→ **Only charge the battery at an ambient temperature which is between 0 °C and +45 °C.** *Charging outside of this temperature range can increase the risk of damage to the battery and pose a fire hazard.*

→ **After use, allow the battery to cool down for at least 30 minutes before charging or storing.**

Electrical safety



DANGER! Cardiac arrest!

This product makes an electromagnetic field while it operates. This field may under some conditions interfere with active or passive medical implants. To decrease the risk of conditions that can possibly injure or kill, we recommend persons with medical implants to speak with their physician and the medical implant manufacturer before you operate the product.

Remove battery in case of emergency.

Only use the battery product between -10 °C and 40 °C.

Thoroughly inspect the area where the product is to be used and remove all wires and other foreign objects.

In case of an unintended start (e.g. due to a welded switch) disconnect the battery immediately from device and let the product repaired by the GARDENA service.

Disconnect the product from the mains and disconnect the battery if the product starts to vibrate abnormally. Check immediately. Excessive vibration can cause injury.

Do not use the product near water.

Do not operate next to swimming pools or garden ponds.

Protect the electrical contacts of the battery from moisture.

Personal safety



DANGER! Risk of suffocation!


Small parts can be easily swallowed. There is also a risk that the polybag can suffocate toddlers. Keep toddlers away when you assemble the product.

Know how to stop the product quickly in an emergency.


Avoid contact with the oil of the blade, allergic reaction is possible.

Only work in the daylight or when visibility is good.
Check your product before each use. Always visually inspect your Hedge Trimmer before each use. Check that the ventilation slots are not obstructed in any way.
If the product gets hot whilst in operation, let it cool down before storage.
Warning! When wearing hearing protection, and due to the noise produced by the product, the operator may not notice persons approaching.
Always wear suitable clothing, protective gloves, and stout shoes.
Always ensure that you have a secure foothold whilst working.

2. OPERATION

**DANGER! Risk of physical injury!**
Cut injury when the product starts accidentally.
→ Wait for the blade to stop, remove the battery and slide the protective cover over the blade before you transport the product.

To charge the battery [Fig. 01/02/03]:

**CAUTION!**
Note the mains voltage! The voltage of the power source must match the voltage specified on the rating plate of the charger.

 
Thanks to the intelligent charging process, the charge condition of the battery is automatically detected and then charged up with the optimal charge current depending on battery temperature and voltage.
In this way, the battery is treated with care and remains permanently fully charged when it is stored in the charger.
1. Push the locking button (A) and remove the battery (B) from the battery holder (D).
2. Connect the battery charger (C) into a mains socket.
3. Slide the battery charger (C) onto the battery (B).

When the battery charge indicator (L) at the charger flashes green the battery is being charged.
When the battery charge indicator (L) at the charger illuminates permanently green the battery is completely charged
(Charging time, see 6. TECHNICAL DATA).
4. Examine the charge status regularly while you charge.
5. When the battery (B) is completely charged, you can disconnect the battery (B) from the charger (C).

Meaning of the indication elements:


Indication on the charger [Fig. 03]:

Flashing of the Battery Charge Indicator (L)



The charging procedure is indicated by **flashing** of the battery charge indicator (L).
Note: The charging procedure is only possible when the battery temperature is within the allowable charging temperature range, see 6. TECHNICAL DATA.

Continuous Lighting of the Battery Charge Indicator (L)



Continuous lighting of the battery charge indicator (L) indicates that the battery is fully charged or that the temperature of the battery is not within the allowable charging temperature range and can therefore not be charged.
When the battery is not inserted, **continuous lighting** of the battery charge indicator (L) indicates that the mains plug is inserted in the socket outlet and that the battery charger is ready for operation.

Battery charge status indication (P) on the product [Fig. 04/08]:
After starting the product, the battery charge status indication (P) is displayed for 5 seconds.


Battery charge status	Battery charge status indication
67 – 100 % charged	(1), (2) and (3) illuminate green
34 – 66 % charged	(1) and (2) illuminate green
11 – 33 % charged	(1) illuminates green
0 – 10 % charged	(1) flashes green

If the LED (1) flashes green, the battery must be charged.
If the error LED (W) is illuminated or flashing, see 5. TROUBLESHOOTING.

Work positions:

The hedge trimmer can be operated in 3 positions.
– **Side trimming [Fig. 05]**
– **High trimming [Fig. 06]**
– **Low trimming [Fig. 07]**


To start the hedge trimmer [Fig. 01/08]:

**DANGER! Risk of physical injury!**
Risk of injury if the product does not stop when you release the start levers.
→ Do not bypass the safety devices or switches. For example do not attach the start levers to the handle.


To start:
The product is provided with a two-handed safety device (2 start levers) to prevent the product from being turned on by accident.
1. Put the battery (B) into the battery holder (D) until it audibly engages.
2. Remove the protective cover from the blade.
3. Hold the front handle (1) with one hand and pull the front start lever (2).
4. Hold the main handle (3) with the other hand and pull the rear start lever (4).
The hedge trimmer starts and the battery charge status indication (P) is displayed for 5 seconds.

To stop:
1. Release the two start levers (2)/(4).
The hedge trimmer stops.
2. Slide the protective cover over the blade.
3. Push the locking button (A) and remove the battery (B) from the battery holder (D).

3. MAINTENANCE

**DANGER! Risk of physical injury!**
Cut injury when the product starts accidentally.
→ Wait for the blade to stop, remove the battery and slide the protective cover over the blade before you maintain the product.

To clean the Hedge Trimmer [Fig. 08]:

**DANGER! Risk of physical injury!**
Risk of injury and risk of damage to the product.
→ Do not clean the product with water or with a water jet (in particular high-pressure water jet).
→ Do not clean with chemicals including petrol or solvents. Some can destroy critical plastic parts.

The airflow slots must always be clean.
1. Clean the hedge trimmer with a damp cloth.
2. Clean the airflow slots (5) with a soft brush (do not use a screwdriver).
3. Lubricate the blade with a low viscosity oil (e.g. GARDENA Maintenance Oil Art. 2366).
Avoid contact with the plastic parts.

To clean the battery and the battery charger:

Make sure that the surface and the contacts of the battery and the battery charger always are clean and dry before you connect the battery charger.
Do not use running water.
→ **Battery charger:** Clean the contacts and the plastic parts with a soft and dry cloth.
→ **Battery:** Occasionally clean the ventilation slots and the terminals on the battery using a soft brush that is clean and dry.

4. STORAGE

To put into storage:

The product must be stored away from children.

1. Slide the protective cover over the blade.
2. Remove the battery.
3. Charge the battery.
4. Clean the hedge trimmer, the battery and the battery charger (see 3. MAINTENANCE).
5. Store the hedge trimmer, the battery and the battery charger in a dry, enclosed and frost-free place.

Disposal:

(in accordance with RL2012/19/EC/S.I. 2013 No. 3113)



The product must not be disposed of to normal household waste. It must be disposed of in line with local environmental regulations.

IMPORTANT!

→ Dispose of the product through or via your municipal recycling collection centre.

Disposal of the battery:



The battery contains lithium-ion cells that should not be disposed of with normal household waste at the end of its life.

Li-ion

IMPORTANT!

- Dispose of the batteries through or via your municipal recycling collection centre.
1. Discharge the lithium-ion cells completely (contact the GARDENA Service).
 2. Protect the contacts on the lithium-ion cells against short circuits.
 3. Dispose of the lithium-ion cells properly.

5. TROUBLESHOOTING



DANGER! Risk of physical injury!

Cut injury when the product starts accidentally.

→ Wait for the blade to stop, remove the battery and slide the protective cover over the blade before you troubleshoot the product.

Problem	Possible Cause	Remedy
Hedge trimmer can no longer be stopped	Start lever is stuck.	→ Remove the battery and loosen the start lever.
Hedge is not cleanly cut	Blade is blunt or damaged.	→ Let the blade be replaced by the GARDENA Service.
Hedge trimmer vibrates severely	Blade is damaged.	→ Switch off the product and let the blade be replaced.
Hedge trimmer does not start or stops. Error-LED (red) is flashing green [Fig. 04]	Battery is empty.	→ Charge the battery.
Hedge trimmer does not start or stops. Error-LED (red) is illuminated red [Fig. 04]	Battery temperature is outside the permissible temperature range.	→ Wait until the battery temperature is between 0 °C – + 45 °C again.
	There are drops of water or moisture between the battery contacts on the hedge trimmer.	→ Remove the water drops/moisture with a dry cloth.
	Engine is blocked.	→ Remove the obstacle. Start again.
Hedge trimmer does not start or stops. Error-LED (red) is flashing red [Fig. 04]	Product is defective.	→ Contact the GARDENA Service.
Hedge trimmer does not start or stops. Error-LED (red) is not illuminated [Fig. 04]	Battery is not put completely into the battery holder.	→ Put the battery completely into the battery holder until it audibly engages.

Problem	Possible Cause	Remedy
Hedge trimmer does not start or stops. Error-LED (red) is not illuminated [Fig. 04]	Battery is defective.	→ Replace the battery.
	Product is defective.	→ Contact the GARDENA Service.
Charging is not possible. Battery charge indicator (green) is continuously illuminated [Fig. 03]	The battery is not connected (correctly).	→ Connect the battery to charger correctly.
	Battery contacts are dirty.	→ Clean the battery contacts (e.g. by connecting and disconnecting the battery several times. Replace the battery if necessary.
	Battery temperature is outside the permissible charging temperature range.	→ Wait until the battery temperature is between 0 °C – + 45 °C again.
	Battery is defective.	→ Replace the battery.
Battery charge indicator (green) is not illuminated [Fig. 03]	Mains plug of the charger is not (correctly) plugged in.	→ Insert the mains plug into the mains socket (completely).
	Socket outlet, mains cable or charger is defective.	→ Check the mains voltage. Let the charger be checked if necessary by an authorised specialist dealer or the GARDENA Service.



NOTE: For any other malfunctions please contact the GARDENA service department. Repairs must only be done by GARDENA service departments or specialist dealers approved by GARDENA.

6. TECHNICAL DATA

Battery Hedge Trimmer	Unit	Value (Art. 14733)
Strokes	1/min	2400
Length of blade	cm	40
Tooth gap of blade	mm	16
Weight (without Battery)	g	1890
Sound pressure level L_{pA} ¹⁾ Uncertainty k_{pA}	dB (A)	77 3.0
Sound power level L_{WA} ²⁾ : measured/ guaranteed Uncertainty k_{WA}	dB (A)	86 / 88 2.3
Hand/arm vibration a_{vhw} ¹⁾ Uncertainty k_{vhw}	m/s ²	1.3 1.5

Measuring process complying with: ¹⁾ 62841-4-2 ²⁾ RL 2000/14/EC / S.I. 2001 No.1701



NOTE: The stated vibration emission value has been measured according to a standardised test procedure and can be used for comparison of one electric power tool with another. It can also be used for preliminary evaluation of exposure. The vibration emission value can vary during actual use of the electric power tool.

7. ACCESSORIES

GARDENA Maintenance Oil	Extends the life of the blade and the battery idling time.	Art. 2366
GARDENA System Battery PBA 18V/45 P4A PBA 18V/72 P4A	Battery for additional duration or for replacement.	Art. 14903 Art. 14905
GARDENA Battery Quick Charger AL 1830 CV P4A	Charger for fast charging the POWER FOR ALL System Batteries PBA 18V..W-..	Art. 14901

8. SERVICE/WARRANTY

Service:

Please contact the address on the enclosed warranty card.

Warranty statement:

The warranty is only granted according to the warranty conditions printed on the enclosed warranty card.

Consumables:

The blade and eccentric drive are consumables and are not included in the warranty.

Deutschland/Germany GARDENA Manufacturing GmbH Central Service Hans-Lorenser-Straße 40 D-89079 Ulm Produktfragen: (+49) 731 490-123 Reparaturen: (+49) 731 490-290 service@gardena.com http://www.gardena.com	Costa Rica Exim CIA Costa Rica Calle 25A, B°. Montelegre Zapote San José Costa Rica Phone: (+506) 2221-5654 (+506) 2221-5659 eximcostancia@gmail.com	Ireland Liffey Distributors Ltd. 309 NW Business Park, Ballycoolen 15 Dublin Phone: (+353) 1 824 2600 info@liffeyd.com	Netherlands Husqvarna Nederland B.V. GARDENA Division Postbus 50131 1305 AC ALMERE Phone: (+31) 36 521 00 10 info@gardena.nl	South Africa Husqvarna South Africa (Pty) Ltd Lifestyle Business Park – Ground Floor Block A Cnr Beyers Naude Drive and Ysterhout Road Randpark Ridge, Randburg Phone: (+27) 10 015 5750 service@gardena.co.za
Albania KRAFT SHPK Autostrada Tirane-Durres Km 7 1051 Tirane Phone: (+355) 69 877 7821 info@kraft.al	Croatia Husqvarna Austria GmbH Industriezeile 36 4010 Linz Phone: (+43) 732 77 01 01-485 service.gardena@husqvarnagroup.com	Israel HAGARIN LTD. 2 Nahal Harif St. 8122201 Yavne internet@hagarin.co.il Phone: (+972) 8-932-0400	Neth. Antilles Jonka Enterprises N.V. Sta. Rosa Weg 196 P.O. Box 8200 Curaçao Phone: (+599) 9 767 66 55 info@jonka.com	Spain Husqvarna España S.A. Calle de Rivas nº 10 28052 Madrid Phone: (+34) 91 708 05 00 atencioncliente@gardena.es
Argentina ROBERTO C. RUMBO S.R.L. Predio Norlog Lote 7 Benavidez, ZC: 1621 Buenos Aires ventas@rumbosrl.com.ar	Cyprus Pantelis Papadopoulos S.A. 92 Athinon Avenue Athens 10442 Greece Phone: (+30) 21 0519 3100 infocyp@papadopoulos.com.gr	Italy Husqvarna Italia S.p.A. Via Santa Vecchia 15 23868 VALMADRERA (LC) Phone: (+39) 0341.203.111 assistenza.italia@it.husqvarna.com	New Zealand Husqvarna New Zealand Ltd. PO Box 76-437 Manukau City 2241 Phone: (+64) (0) 9 9202410 support.nz@husqvarna.co.nz	Sri Lanka Hunter & Company Ltd. 130 Front Street Colombo Phone: 94-11 232 81 71 hunters@eureka.lk
Armenia AES Systems LLC Marshal Babajanyan Avenue 56/2 0022 Yerevan Phone: (+374) 60 651 651 masisohanyan@cloud.com	Czech Republic Gardena Service Center Vrbno c/o Husqvarna Manufacturing CZ s.r.o. Jesenická 146 79326 Vrbno pod Prádemem Phone: 800 100 425 servis@gardena.cz	Japan Husqvarna Zenoh Co. Ltd. Japan 1-9 Minamidai, Kawagoe 350-1165 Saitama Japan gardena-jp@husqvarnagroup.com	North Macedonia Sinpeks d.o.o. Ul. Kravarski Pat Bb 7000 Bitola Phone: (+389) 47 20 85 00 sinpeks@mt.net.mk	Suriname Deto Handelmaatschappij N.V. Kerkkampweg 72-74 P.O. Box: 12782 Paramaribo Suriname Phone: (+597) 438050 info@deto.sr
Australia Husqvarna Australia Pty. Ltd. Locked Bag 5 Central Coast BC NSW 2252 Phone: (+ 61) (0) 2 4352 7400 customer.service@husqvarna.com.au	Denmark GARDENA DANMARK Lejrevej 19, st. 3500 Værløse Tlf.: (+45) 70 26 47 70 husqvarna@husqvarna.dk www.gardena.com/dk	Kazakhstan TOO "Ламэд" Russian Адрес: Қазақстан, г. Алматы, ул. Тажибаевой, 155/1 Тел.: (+7) (727) 355 64 00 (+7) (700) 355 64 00 lamed@lamed.kz	Norway Husqvarna Norge AS Gardena Division Trøskenveien 36 1708 Sarpsborg info@gardena.no	Sweden Husqvarna AB / GARDENA Sverige Drottninggatan 2 561 82 Huskvarna Sverige Phone: (+46) (0) 36-14 60 02 info@gardena.se
Austria/Österreich Husqvarna Austria GmbH Industriezeile 36 4010 Linz Tel.: (+43) 732 77 01 01-485 service.gardena@husqvarnagroup.com	Dominican Republic BOSQUESA, S.R.L. Carretera Santiago Licey Km. 5 ½ Esquina Copal II. Santiago De Los Caballeros 51000 Dominican Republic Phone: (+1) 809-562-0476 contacto@bosquesa.com.do	Korea Kyung Jin Trading Co., Ltd 107-4, Sunduk Bld, Yangjae-Dong Seocho-Gu 137-891 Seoul Phone: (+82) 2 574 6300 kjh@kjh.co.kr	Northern Cyprus Mediterranean Home & Garden No 150 Alsancak, Karaoglanoglu Caddesi Gime Phone: (+90) 392 821 33 80 info@medgardener.com	Switzerland/Schweiz Husqvarna Schweiz AG Consumer Products Industriestrasse 10 5506 Mägeren Phone: (+41) (0) 62 887 37 90 info@gardena.ch
Azerbaijan Progres Xüsusi Firması Aliyar Aliyev 212, Baku, Azerbaijan Sales: +994 70 328 07 14 Aftersales: +994 77 326 07 14 www.progress-garden.az info@progress-garden.az	Egypt Universal Agencies Co 26, Abdel Hamid Lofly St. Giza Phone: 37615757 https://gardeningegypt.com/ hany.masoud@univag.org	Kuwait Palms Agro Production Co Al Rai- Fourth Ring Road – Block 56. P.O Box: 1976 Safat 13020 Al-Rai Phone: 24730745 info@palms-kw.com	Oman General Development Services PO 1475, PC - 111 Seeb 111 Oman Phone: 96824582816 gdsoman@gdsoman.com	Taiwan Hong Ying Trading Co.,Ltd. No. 46 Wu-Kun-Wu Road New Taipei City Phone: (+886) (02) 2298 1486 salesgd1@7friends.com.tw
Bahrain M.H. Al-Mahroos BUILDING 208, BLOCK 356, ROAD 328 Salhiya Phone: +973 1740 8090 almahroos@almahroos.com	Estonia Husqvarna Eesti OÜ Valdeku 132 EE-11216 Tallinn info@gardena.ee	Kyrgyzstan O'So Ayla Maki Av. Molodaya Guardia 83 720014 Bishkek Phone: (+996) 312 322115	Paraguay Agrofield SRL AV. CHOFERES DEL CHACO 1449 C/ 25 DE MAYO Asunción Phone: (+595) 21 608 656 consultas@agrofield.com.py	Thailand Spica Co. Ltd 243/2 Onnuh Rd., Prawat Bangkok 10250 Thailand Phone: (+66) (0)2721 7373 surapong@spica-siam.com
Belarus/Беларусь ООО «Мастер Гарден» 220118, г. Минск, улица Шаранговича, дом 7а Тел. (+375) 17 257 00 33 mg@mastergarden.by	France Husqvarna France 9/11 Allée des pierres mayettes 92635 Gennevilliers Cedex France http://www.gardena.com/fr N° AZUR: 0 810 00 78 23 (Prix d'un appel local)	Latvia Husqvarna Latvija SIA Ulbrokas 19A LV-1021 Riga info@gardena.lv	Peru Sierras y Herramientas Forestal SAC Av. Las Gaviotas 833, Chorrillos Lima Phone: (+51) 1 2520252 supervisorventas1@siersac.com www.siersac.com	Tajikistan ARIERS JV LLC 39, Ayni Street, 734024 Dushanbe, Tajikistan
Belgium Husqvarna Belgium nv Gardena Division Leuvensesteenweg 542 Planet II E 1930 Zaventem België	Finland Oy Husqvarna Ab Gardena Division Lautatarhankatu 8 B / PL 3 00581 HELSINKI www.gardena.fi	Lebanon Technomec Saifra Highway (Beirut – Tripoli) Center 622 Mezher Bldg. P.O.Box 215 Jounieh Phone: (+961) 9 853527 (+961) 3 855481 tecnomec@idm.net.lb	Philippines Royal Dragon Traders Inc 10 Linaw Street, Barangay Saint Peter Quezon City 1114 Philippines Phone: (+63) 2 7426893 aida.fernandez@rdti.com.ph	Tunisia Société du matériel agricole et maritime Nouveau port de peche de Stax Bp 33 Stax 3065 Tunisia Phone: (+216) 98 419 047 / (+216) 74 497 614 www.smatmtunisia.com
Bosnia/Herzegovina Silk Trade d.o.o. Poslovnja Zona Vila Br. 20 Phone: (+387) 61 165 593 info@silkttrade.com.ba	Georgia Transporter LLC #70, Belashvili street 0159 Tbilisi, Georgia Number: (+995) 322 14 71 71 info@transporter.com.ge www.transporter.com.ge	Lithuania UAB Husqvarna Lietuva Ateities pl. 77C LT-52104 Kaunas info@gardena.lt	Poland Gardena Service Center Vrbno c/o Husqvarna Manufacturing CZ s.r.o. Jesenická 146 79326 Vrbno pod Prádemem Czech Republic Phone: (22) 336 78 90 servis@gardena.pl	Turkey Dost Bahçe Yunus Mah. Adil Sk. No:3 Kartal İstanbul 34873 Turkey Phone: (+90) 216 389 39 39 info@dostbahce.com.tr www.dostbahce.com.tr
Brazil Nordtech Maquinas e Motores Ltd. Avenida Juscelino Kubitschek de Oliveira Curitiba 3003 Brazil Phone: (+55) 41 3595-9600 contato@nordtech.com.br www.nordtech.com.br	Greece Π.ΠΑΠΑΔΟΠΟΥΛΟΣ ΑΕΒΕ Λεωφ. Αθηνών 32 Αθήνα Τ.Κ.104 42 Ελλάδα Τηλ. (+30) 210 5193 100 info@papadopoulos.com.gr	Luxembourg Magasins Jules Neuberg 39, rue Jacques Stas Luxembourg-Gasperich 2549 Case Postale No. 12 Luxembourg 2010 Phone: (+352) 40 14 01 api@neuberg.lu	Romania Madex International Srl Soseaua Odaii 117 - 123, RO 013603 București, S1 Phone: (+40) 21 352 7603 madex@ines.ro	Turkmenistan I.E. Orazmuhammedov Nurmuhammet 80 Ataturk, BERKARAR Shopping Center, Ground floor, A770, Ashgabat 744000 Phone: (+993) 12 468859 Mob: (+993) 62 222887 info@jayhyzmat.com / belgiyev@jayhyzmat.com www.jayhyzmat.com
Bulgaria AGROLAND България АД бул. 8 Декември, № 13 Офис 5 1700 Студентски град София Тел.: (+359) 24 66 6910 info@agroland.eu	Hong Kong Tung Tai Company 151-153 Hoi Bun Road Kwun Tong, Kowloon Hong Kong Phone: (+852) 3583 1662 admin@tungtaico.com	Malaysia Glomedic International Sdn Bhd Jalan Ruang No. 30 Shah Alam, Selangor 40150 Malaysia Phone: (03)-7734 7997 oase@glomedic.com.my	Russia/Россия ООО „Хускварна“ 141400, Московская обл., г. Химки, улица Ленинградская, владение 39, стр.6 Бизнес Центр „Химки Бизнес Парк“, помещение ОВ02_04 http://www.gardena.ru	UAE Al-Futtaim ACE Company L.L.C Building, Al Rebat Street Festival City, Dubai 7880 UAE Phone: (+971) 4 206 6700 ace@alfuttaim.ae
Canada/USA GARDENA Canada Ltd. 100 Summerlea Road Brampton, Ontario L6T 4X3 Phone: (+1) 905 792 93 30 info@gardenacanada.com	Hungary Husqvarna Magyarországi Kft. Ezred u. 1 – 3 1044 Budapest Phone: (+36) 1 251-4161 vevoszolgalat.husqvarna@husqvarna.hu	Malta I.V. Portelli & Sons Ltd. 85, Triq San Pawl Rabat - RBT 1240 Phone: (+356) 2145 4289	Saudi Arabia SACO Takhassusi Main Road P.O. Box: 86387 Riyadh 12863 40011 Saudi Arabia Phone: (966) 11 482 8877 webmaster@saco-ksa.com	Ukraine/Україна АТ «Альцест» вул.Петропавлівська 4 08130, Київська обл. Києво-Святошинський р-н, с. Петропавлівська Борщагілка Україна Тел.: (+38) 0 800 503 000
Chile REPRESENTACIONES JCE S.A. 2286 Avenida General Oscar Bonilla Concepcion Phone: (+ 56) 2 2414 2600 contacto@jce.cl	Iceland BYKO ehf. Skenmuvegi 2a 200 Kópavogur Phone: (+354) 515 4000 byko@byko.is	Mexico AFOSA Av. Lopez Mateos Sur # 5019 Col. La Calma 45070 Zapopan, Jalisco, Mexico Phone: (+52) 33 3818-3434 isolis@afosa.com.mx	Singapore Hy-Ray PRIVATE LIMITED 40 Jalan Pemimpin #02-08 Tat Ann Building Singapore 577185 Phone: (+65) 6253 2277 info@thray.com.sg	Uruguay FELI SA Entre Rios 1083 11800 Montevideo Phone: (+598) 2203 1844 info@felisa.com.uy
China Husqvarna (Shanghai) Management Co., Ltd. 富世华 (上海) 管理有限公司 3F, Beng Square B, No207, Song Hong Rd., Chang Ning District, Shanghai, PRC. 200335 上海市长宁区淞虹路207号明 基广场B座3楼, 邮编: 200335	India B K RAMAN AND CO Plot No. 185, Industrial Area, Phase-2, Ram Darbar Chandigarh 160002 India Phone: (+91) 98140 06530 raman@jaganhardware.com	Moldova Convel SRL Republica Moldova, mun. Chisinau, sos. Muncești 284 Phone: (+373) 22 857 126 www.convel.md	Slovak Republic Gardena Service Center Vrbno c/o Husqvarna Manufacturing CZ s.r.o. Jesenická 146 79326 Vrbno pod Prádemem Phone: 0800 154044 servis@gardena.sk	Uzbekistan AGROHOUSE MChJ O'zbekiston, 111112 Toshkent viloyati Toshkent tumani Hasanboy QFY, THAY yqasida Phone: (+998)-93-5414141 (+998)-71-2096868 info@agro.house www.agro.house
Colombia Equipos de Toyama Colombia SAS Cra. 68 D № 25 B 86 Of. 618 Edificio Torre Central Bogota Phone: +57 (1) 703 9520 +57 (1) 703 9522 servicioalcliente@toyama.com.co www.toyama.com.co	Iraq Alishehni Alakhdar Company Al-Faysaleeh, Near Estate Bank Mosul Phone: (+964) 78 18 18 46 75	Mongolia Soyolj Gardening Shop Nami Rd Ulaanbaatar 14230 Mongolia Phone: +976 7777 5080 soyolj@maginet.mn	Slovenia Husqvarna Austria GmbH Industriezeile 36 4010 Linz Phone: (+43) 732 77 01 01-485 service.gardena@husqvarnagroup.com	Vietnam Vision Joint Stock Company No. 09, Lot E2/D21, Ton That Thuyet Street, Dich Vong Hai Commune Cau Giay District, Hanoi Phone: (+8424)-38462833/34 quynhnm@visionjsc.com.vn
Costa Rica Exim CIA Costa Rica Calle 25A, B°. Montelegre Zapote San José Costa Rica Phone: (+506) 2221-5654 (+506) 2221-5659 eximcostancia@gmail.com	Morocco Proekip 64 Rue de la Participation Casablanca-Roches Noires 20303 Morocco Phone: (+212) 661342107 hicham.hafani@proekip.ma	Norway Husqvarna Norge AS Gardena Division Trøskenveien 36 1708 Sarpsborg info@gardena.no	Portugal Husqvarna Portugal, SA Lagoa - Albarraq 2635 - 595 Rio de Mouro Phone: (+351) 21 922 85 30 Fax : (+351) 21 922 85 36 info@gardena.pt	Uruguay FELI SA Entre Rios 1083 11800 Montevideo Phone: (+598) 2203 1844 info@felisa.com.uy