

C 1060 profi  
Art. 1815

- E** Manual de instrucciones  
Programador de riego

---

- P** Instruções de utilização  
Computador de rega

---

- D** Betriebsanleitung  
Bewässerungscomputer

---

- GB** Operating Instructions  
Water Computer

---

- PL** Instrukcja obsługi  
Sterownik nawadniania

E

P

D

GB

PL

# GARDENA Water Computer

## C 1060 profi

---

*Welcome to the Garden of GARDENA...*



Translation of the original instructions from German. Please read these operating instructions carefully and observe the notes given. Use these instructions to familiarise yourself with the Water Computer and its proper use as well as the notes on safety.



For safety reasons, children and young people under 16 as well as anyone who is not familiar with these operating instructions must not use the Water Computer.

### **Contents**

→ Please keep these operating instructions in a safe place.

|   |     |
|---|-----|
| 1. Where to Use Your GARDENA Water Computer .....   | 83  |
| 2. For Your Safety .....                            | 83  |
| 3. Function .....                                   | 85  |
| 4. Putting Your Water Computer into Operation ..... | 88  |
| 5. Programming .....                                | 91  |
| 6. Automatic Water Distributor (optional) .....     | 99  |
| 7. Cleaning .....                                   | 102 |
| 8. Trouble-Shooting .....                           | 102 |

|   |     |
|---|-----|
| 9. Putting Your Water Computer out of Operation ..... | 105 |
| 10. Accessories .....                                 | 105 |
| 11. Technical Data .....                              | 106 |
| 12. Service .....                                     | 107 |

## 1. Where to Use Your GARDENA Water Computer

---

### *Intended use*

The GARDENA Water Computer C 1060 profi is intended for private use in domestic and hobby gardens, exclusively for outdoor use, to control sprinklers and watering systems.

### *Please note*



**The GARDENA Water Computer must not be used for industrial purposes or in conjunction with chemicals, foodstuffs, easily flammable and explosive materials.**

## 2. For Your Safety

---

### *Battery:*

To ensure the Water Timer runs safely, only a 9V alkaline manganese battery (alkaline)

type IEC 6LR61 must be used.

The battery must be exchanged in time to prevent the Water Computer failing due to a low battery when you are away for longer periods of time. Make sure that the time the battery has been in operation and the time you are planning to be away does not add up to more than a year.

### **Setting up**

**Warning!** The Water Computer must not be used indoors.

→ Only use the Water Computer outdoors. The Water Computer may only be set up vertically with the sleeve nut to the top to prevent water penetrating into the battery compartment.

The minimum water output to ensure that the Water Computer functions correctly is 20-30 l/h. For example, at least 10 x 2-litre Drip Heads are required to control the Micro-Drip-System.

At high temperatures (over 60 °C at the display) the LCD display may extinguish. This does not affect the program in any way. When the computer cools down the LCD display illuminates again.

The max. temperature for the water flow is 40 °C.

→ Only use clear fresh water.

The minimum operating pressure is 0,5 bar, the maximum operating pressure is 12 bar.

Avoid tensile strain.

→ Do not pull the hose connected to the Water Computer.

### **Programming**

→ Program the Water Computer with the tap turned off.

In this way you can avoid getting wet when trying out the manual On/Off function (man. On/Off). You can remove the control unit from the housing to program the Water Computer.


### 3. Function

This GARDENA Water Computer C 1060 profi allows you to water your garden completely automatically any time you choose up to 6 times a day, whether you are using a sprinkler, a sprinkler system installation or a drip-head watering system.

Your Water Computer waters your garden completely automatically according to the program you choose. You can use your Water Computer to water your garden early in the morning or late at night when water evaporates the least or when you are on holiday.

You simply program the watering start, watering time and watering day(s) or cycles.

#### Key-operated functions

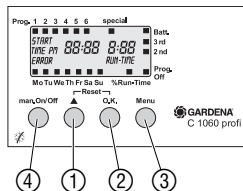


#### Key

#### Key-operated function

- |               |   |
|---------------|---|
| ① ▲           | Changes or moves on the input data. (If the ▲-key is held down, the figures change very quickly.) |
| ② O.K.        | Confirms the values set with the ▲-key.   |
| ③ Menu        | Changes to the next program level.  |
| ④ man. On/Off | For switching the water throughput on or off manually.  |

## Displays

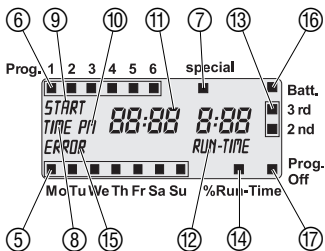

| Display                                 | Description   |
|---|---|
| ⑤ <b>Weekdays (Mo, Tu,...)</b>          | Current weekday or programmed watering days.  |
| ⑥ <b>Prog.</b>                          | Program selected (1 to 6).  |
| ⑦ <b>special</b>                        | Only for controlling the Automatic Water Distributor Art.-No. 1198.   |
| ⑧ <b>TIME</b>                           | Flashes when in input mode for the current data (hours, minutes, day of the week).  |
| ⑨ <b>START</b>                          | Flashes when in input mode for watering start time.   |
| ⑩ <b>PM</b>                             | Display for 12-h-clock (e. g. in USA, Canada).  |
| ⑪ <b>(Time / Start time)</b>            | Current time / Watering start time (display 13 h = 1 pm; e. g. in USA, Canada).   |
| ⑫ <b>RUN TIME</b>                       | Watering time (flashes when in input mode).   |
| ⑬ <b>3<sup>rd</sup>, 2<sup>nd</sup></b> | Watering cycles (3 <sup>rd</sup> every 3 <sup>rd</sup> day / 2 <sup>nd</sup> every 2 <sup>nd</sup> day).                  |
| ⑭ <b>% Run-Time</b>                     | Budget function: the watering time of all watering programs can be reduced centrally in intervals of 10% from 100% to 0%. |
| ⑮ <b>ERROR</b>                          | Error message for the <b>special</b> function if watering programs overlap.   |

## Display levels

- ⑩ **Batt.** If the battery indicator begins to flash, the battery is almost flat and watering programs will no longer run. Any valves that are still open are closed again even if the battery is almost flat.  
The battery indicator is reset as soon as you replace the battery with a new one.
- ⑪ **Prog. Off** Watering program inactive  
(Budget function: 0%)

The four display levels


- Level 1: **Normal display**
- Level 2: **Enter the current time and day of the week**
- Level 3: **Insert watering programs**
- Level 4: **% Run-Time / Prog. Off**

can be selected one after the other by pressing the **Menu**-key.

You can change display level at any time, even during programming. All the program data which have been confirmed up to that point with the **O.K.**-key are stored.


## 4. Putting Your Water Computer into Operation

### Insert battery:

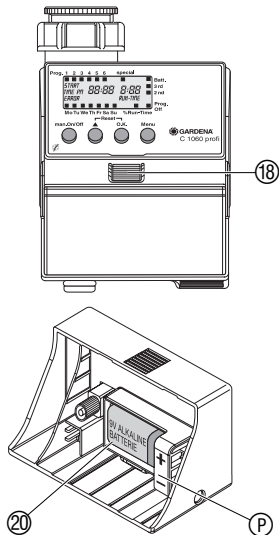

This Water Computer must only be powered by a 9V alkaline manganese (alkaline) battery type IEC 6LR61.

1. Press unlock button (18) and pull control unit (19) out of the Water Computer housing.
2. Insert battery (20) into battery compartment.  
Ensure that the battery polarity (P) is correct.  
*The display shows all the LCD-symbols for 2 seconds and then moves to the time / day of week level.*
3. Re-insert control unit (19) in housing.

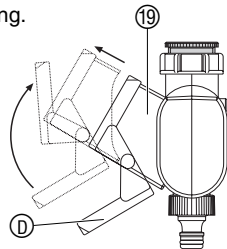


### Programming aid:

→ Stick the self-adhesive programming aid on the inside of the display cover (D).

The display cover can be folded up to protect the display against the weather.



### Connect Water Computer:

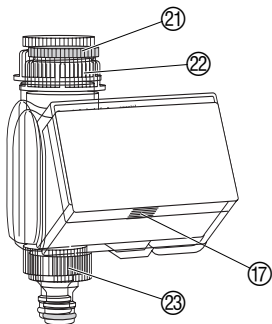


The Water Computer is fitted with a sleeve nut ② for taps with G 1" (33.3 mm) thread. The adaptor supplied ① allows the Water Computer to be connected to taps with a G 3/4" thread (26.5 mm).

### Connect Water Computer to water tap with G 1" (33.3 mm) thread:

1. Screw sleeve nut ② of the Water Computer on to the tap thread by hand (do not use pliers).
2. Screw tap connector ③ on to the Water Computer.

### Connect Water Computer to tap with G 3/4" (26.5 mm) thread:

1. Screw adaptor ① on to the tap manually (do not use pliers).
2. Screw sleeve nut ② of the Water Computer on to the adaptor thread ① by hand (do not use pliers).
3. Screw tap connector ③ on to the Water Computer.

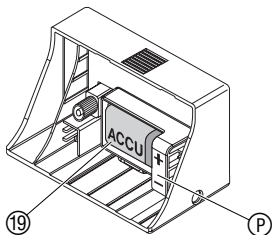


Before you start entering the watering data in the computer we recommend that you write the data on one of the **watering plans in the appendix** to maintain more of an overview.

### Example :

| Program<br>PROG | Starting time<br>START TIME | Watering time<br>RUN TIME | Watering days / Watering cycles |    |    |    |    |    |    |                 |                 |   |
|-----------------|-----------------------------|---------------------------|---------------------------------|----|----|----|----|----|----|-----------------|-----------------|---|
|                 |                             |                           | Mo                              | Tu | We | Th | Fr | Sa | So | 2 <sup>nd</sup> | 3 <sup>rd</sup> |   |
| 1               | 7:30                        | 0:30                      | X                               |    | X  |    |    |    | X  |                 |                 |   |
| 2               | 19:00                       | 0:20                      |                                 | X  |    |    |    | X  |    |                 |                 |   |
| 3               | 22:30                       | 1:10                      | X                               |    |    |    | X  |    |    |                 | X               |   |
| 4               | 4:00                        | 0:15                      |                                 |    |    |    |    |    |    |                 |                 | X |
| 5               | -                           | -                         |                                 |    |    |    |    |    |    |                 |                 |   |
| 6               | -                           | -                         |                                 |    |    |    |    |    |    |                 |                 |   |

### Connect soil moisture or rain sensor (optional):

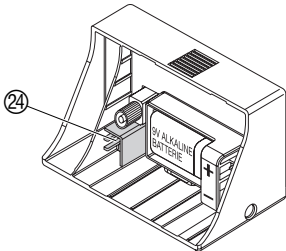


In addition to time-based watering, it is also possible to include the soil moisture or rain sensor in the watering programs.

If the soil is moist enough, the program will be stopped, or a program will be prevented from starting. Manual operation via **man. On/Off** is unaffected by this.

1. Place soil moisture sensor **in** the watered area  
– or –  
place rain sensor (with extension cable if necessary) **outside** the watered area.
2. Insert the sensor in the sensor connection ②<sup>4</sup> of the Water Computer.

### Fit anti-theft device (optional):

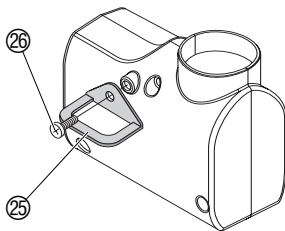

To secure your Water Computer against theft, you can obtain the GARDENA anti-theft device art. no. **1815-00.791.00** from GARDENA Service.


1. Screw clamp ②⑤ with screw ②⑥ firmly to the back of the Water Computer.
2. Use clamp e.g. for fixing a chain.

It is no longer possible to remove the screw after it has been screwed in.

## 5. Programming

The control unit ①⑨ can be removed from the housing for programming by pressing the unlock button ①⑧ and programming can be undertaken whilst you are moving around (see 4. Putting Your Water Computer into Operation “Insert battery”).



### Set current time and day of week:



1.

1. Press **Menu**-key (not necessary if the battery has just been inserted).

*The hours display and **TIME** flash.*



2. Set the time in hours with the ▲-key (example: **9** hours) and confirm with the **O.K.**-key.

*TIME and the minutes display flash.*

3. Set the time in minutes with the ▲-key (example: **30** minutes) and confirm with the **O.K.**-key.

*TIME and the day of the week display flash.*

4. Set the day of the week with the ▲-key (example: ■ **Sa** Saturday) and confirm with the **O.K.**-key.

*The display moves to the message **Insert watering programs** and program memory setting **1** flashes.*


### **Enter watering programs:**

You must reset your Water Computer before selecting the special function (see 6. Automatic Water Distributor).


- **Reset:** Keep ▲-key and **O.K.**-key pressed simultaneous for 2 seconds.

Up to 6 watering programs can be inserted – **or** – the **special** function can be selected.


Prog. 1 2 3 4 5 6 special




Prog. 1 2 3 4 5 6 special



Prog. 1 2 3 4 5 6 special



Prog. 1 2 3 4 5 6 special



1. Press **Menu**-key twice  
(not necessary if the current time and day of the week has been entered).

*Program memory setting 1 flashes.*

2. **Only if the Automatic Water Distributor is used:**

Select **special**-function with the **▲**-key and confirm with the **O.K.**-key (continue with step 4).

*Program memory setting 1 is selected automatically, **START TIME** and the hours section flash on the display.*


3. Select program memory setting with the **▲**-key  
(example: **Prog. 3** ■ program 3) and confirm with the **O.K.**-key.

***START TIME** and the hours section flash on the display.*

4. Set the hours for starting the watering time with the **▲**-key  
(example: **6** hours) and confirm with the **O.K.**-key.

***START TIME** and the minutes section flash on the display.*

Prog. 1 2 3 4 5 6 special




5.

5. Set the minutes for starting the watering time with the ▲-key (example: **20** minutes) and confirm with the **O.K.**-key.

**RUN TIME** and the hours for the watering time flash on the display.

Prog. 1 2 3 4 5 6 special




6.

6. Set the hours for the watering time with the ▲-key (example: **0** hours) and confirm with the **O.K.**-key.

**RUN TIME** and minutes for the watering time flash on the display.


Prog. 1 2 3 4 5 6 special



7.

7. Set watering time minutes with the ▲-key (example: **10** minutes) and confirm with the **O.K.**-key.

Watering cycle ■ **3<sup>rd</sup>** flashes on the display.



Mo Tu We Th Fr Sa Su


3<sup>rd</sup>  
2<sup>nd</sup>

**8 (a)**

8. (a) Select watering cycle with the ▲-key (example: ■ **2<sup>nd</sup>**) and confirm with the **O.K.**-key (**2<sup>nd</sup>/3<sup>rd</sup>**: watering every 2<sup>nd</sup> day / 3<sup>rd</sup> day).

*The display returns to step 3 and the next highest program memory setting flashes.*

– or –

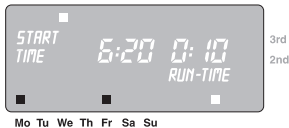


8. (b)

8. (b) Select respective watering days with the ▲-key (example: ■ **Mo**, ■ **Fr** Monday and Friday) and confirm with the **O.K.**-key. Press ▲-key until the ■ over **Su** disappears.

*The display returns to step 3 and the next highest program memory setting flashes.*

→ If you would like to water your garden every day, press the **OK** button to confirm each day one after another.

**Activate watering programs :**

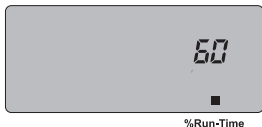

10.

When the program has been created for program memory setting 6, the display moves to the message % **Run-Time / Prog. Off.**

You must select the **Run-Time** percentage you wish to activate before the watering programs can run.

9. Press **Menu**-key 3 times (not necessary if the program has just been compiled for program memory setting 6).
10. Select the percentage (see **Budget Function**) for the programmed watering time using the ▲ key (e.g. **60% Run-Time**) and then confirm your selection by pressing the **O.K.** key.
- The display moves to the **normal display.***


Programming the Water Computer has now been completed, i.e. the built-in valve opens/closes entirely automatically and thus undertakes watering at the programmed times.

Programmed watering time



%Run-Time

Watering program deactivated



Prog  
Off

### **Read / modify watering programs :**

### **Manual operation :**

### **Budget-Function (% Run-Time) :**

The times of all stored watering programmes can be reduced centrally in intervals of 10%, from 100% down to 10%, without having to change each interval programme. This is ideal if you wish to water your garden less in the Autumn than in the Summer.

|                 |   |
|-----------------|---|
| <b>10 - 100</b> | <b>% Run-Time = Watering program active</b> |
|-----------------|---|

|          |  |
|----------|--|
| <b>0</b> | <b>Prog. Off = Watering program inactive</b> |
|----------|--|

**Note:** If you change the watering time percentage, your Water Computer will still display the watering time you originally programmed for the individual watering programs.


If a program has already been set on one of the 6 program memory settings, this can be modified without having to compile it from the beginning again.

1. Press **Menu**-key twice.  
*Program memory setting 1 flashes.*
2. Press **O.K.**-key to move to the next program step – or – modify program data with the **▲**-key and confirm with the **O.K.**-key.


The valve can be **opened or closed manually at any time**. A program-controlled open valve can also be closed early without changing the program data (start time, watering duration and watering days).



1.



2.




1. Press **man. On/Off**-key to open the valve manually (or to close an open valve).  
***RUN TIME** and the watering time in minutes (set to **30** minutes in the works) flash for 5 seconds on the display.*
2. Whilst the watering time in minutes is flashing, the watering duration can be modified with the **▲**-key (between **0:00** and **0:59**) (example: **10** minutes).  
*The valve is opened.*
3. Press **man. On/Off**-key to close the valve early.  
*The valve is closed.*

The manual watering time can only be changed using the attached control unit. The amended manual opening period is stored, i.e. each time the valve is opened manually in future the modified opening period is preset. If the manual opening period is amended to **0:00**, the valve is closed and also remains closed after the **man. On/Off**-key is pressed (child lock).

If the valve has been opened manually and a programmed start of a watering period overlaps the manual opening period, the programmed starting time is suppressed.

**Example:** The valve is **opened** at **9.00 a.m. manually**, the opening period is 30 minutes. A program with a **start time (START TIME)** between **9.00 and 9.30 a.m.** will not be undertaken in this case.

## Reset

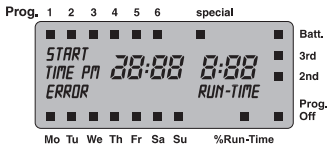

The factory settings are restored.

→ Press ▲-key and **O.K.**-key simultaneously for 2 seconds.

*All the LCD symbols are displayed for 2 seconds and the display moves to the normal display.*

- All the program data are set to zero.
- The manual watering period is set to **0:30** again.
- The time and day of the week are retained.

## Important notes:

If no entry is made during programming for a period of more than 60 seconds, the normal display reappears.

With overlapping programs and identical watering days, the 1<sup>st</sup> watering starting time has priority and other programs are not initiated.

## Example:


| Program<br>PROG | Starting time<br>START TIME | Watering time<br>RUN TIME | Watering days / Watering cycles |    |    |    |    |    |    |                 |                 |  |
|-----------------|-----------------------------|---------------------------|---------------------------------|----|----|----|----|----|----|-----------------|-----------------|--|
|                 |                             |                           | Mo                              | Tu | We | Th | Fr | Sa | So | 2 <sup>nd</sup> | 3 <sup>rd</sup> |  |
| 1               | 4:00                        | 0:40                      | X                               | X  |    |    |    |    |    |                 |                 |  |
| 2               | 4:30                        | 1:00                      | X                               |    |    |    |    |    |    |                 |                 |  |

The first program is run on Monday, the 2<sup>nd</sup> program is cancelled.

## 6. Automatic Water Distributor (optional)

---

### **Function**

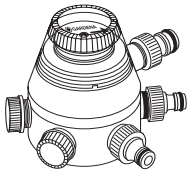

Connecting the **GARDENA Automatic Water Distributor (Art. No. 1198)** allows you to control up to 6 watering lines with the Water Computer C 1060 profi.

Each of the 6 watering lines can only be actuated once a day. This is ideal where there is an insufficient amount of water or where individual areas of the garden have varying water requirements. It allows all watering lines to be operated one after another.

### **Programming**

Using the **special** function, your Water Computer C 1060 profi is able to take into account the special requirements of the Automatic Water Distributor, when programming.

### **Special function**

If program data have already been inserted beforehand, a **RESET** must be undertaken before the **special** function can be set.

→ Keep **▲**-key and **O.K.**-key pressed simultaneously for 2 seconds.

To ensure the Automatic Water Distributor switches safely there must be at least a 30 minute break between the programs entered in the Water Computer.

When you have confirmed the **special** function with **O.K.** and have entered the data for the first program (see 5. Programming) all the programmes which follow will be pre-programmed automatically.

The pre-programming takes into consideration the 30 minute break required between the programs as well as a minimum watering time of 30 seconds (display: **1** min.).

This watering time is required to allow the Automatic Water Distributor to switch to the next outlet and to ensure that the order of the watering programs to the appropriate watering line is retained.

The watering days entered for the watering program are valid for all other watering programs.

### **Error message (ERROR)**

You can alter the watering starting times and watering times pre-programmed by the Water Computer to meet your personal requirements. However, if you do not take into account the break times mentioned above, any changes you make are not accepted and an error message appears on the display (**ERROR**).

Since it is very easy for watering times to overlap slightly, especially when the beginnings and ends of programs are very close together, it is sensible to RESET the Water Computer and to re-enter the watering data to prevent an error message appearing.

### **On/Off Prog.**

If the watering programs are switched off after you have confirmed the **special** function (status indicator on **Off Prog.**) all the programs which begin in this time are shortened to the minimum watering time of 30 seconds (display: **1** min.) This ensures that the order of the watering programs to the appropriate outlet of the Automatic Water Distributor is retained.

***Soil Moisture Sensor/  
Rain Sensor***

By briefly opening the water flow the outlets on the Automatic Water Distributor are switched further so that when the watering programs are reactivated (**% Run-Time**) the original order of the outlets for the required watering program is retained.


When using the Water Computer C 1060 prof together with the Automatic Water Distributor, **Soil Moisture Sensor (Art. No. 1188)** or **Rain Sensor electronic (Art. No. 1189)** please note the following:

If the **special** function is activated and the Soil Moisture or Rain Sensor indicates sufficient moisture, watering is interrupted. The watering time of following watering programs is shortened to 30 seconds (display: **1** min.) until the Soil Moisture / Rain Sensor allows the watering programs to be resumed. The watering time originally entered then begins.

Shortening the watering time when the soil is sufficiently moist ensures that the automatic water distributor is switched to the next outlet and therefore ensures that the correct order of the watering program for the respective distributor outlet is retained.

## 7. Cleaning

---

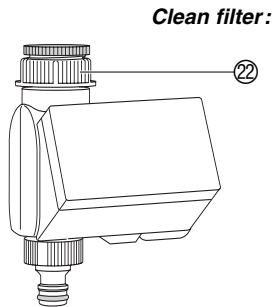

The filter should be checked regularly and cleaned when necessary.

1. Unscrew sleeve nut ② of the Water Computer by hand from the tap thread (do not use pliers).
2. Remove filter from sleeve nut ② and clean.
3. Screw sleeve nut ② of the Water Computer back on to the thread of the tap by hand (do not use pliers).

## 8. Trouble-Shooting

---

| Fault              | Possible Cause                | Remedy   |
|--------------------|-------------------------------|--|
| No display appears | Battery inserted incorrectly. | → Check polarity markings match (+/-).   |
|                    | Flat battery.                 | → Insert new (alkaline) battery.<br>→ Check function by operating manually ( <b>man. On/Off</b> ). |

| Fault   | Possible Cause  | Remedy  |
|---|---|---|
| <b>No display appears</b>                                     | Temperature on the display is higher than 60 °C.                      | Display appears after temperature has dropped.<br>→ Check function by operating manually. ( <b>man. On/Off</b> ). |
| <b>Programs cannot be entered</b>                             | The current time and the day of the week were not entered completely. | → Enter time and day of week (see 5. Programming).  |
| <b>Manual opening via the man. On/Off-key is not possible</b> | Low battery power, <b>Batt.</b> indicator flashes                     | → Insert new (alkaline) battery   |
|   | Manual watering period is set to <b>0:00</b> .                        | → Set manual watering period to a figure greater than <b>0:00</b> (see 5. Programming).                           |
|   | Tap turned off.   | → Turn tap on.  |
| <b>Watering program is not being undertaken (no watering)</b> | Watering program has not been entered completely.                     | → Read off watering program and modify if necessary.  |
|   | <b>Programs deactivated (Prog. Off).</b>                              | → Activate program ( <b>% Run-Time</b> ).   |
|   | Program entry/modification during or just before the start pulse.     | → Make program entry/modification outside the programmed start times.   |

| <b>Fault</b>  | <b>Possible Cause</b>   | <b>Remedy</b>  |
|---|---|--|
| <b>Watering program is not being undertaken (no watering)</b> | Valve was opened manually previously.                               | → Avoid possible program overlaps.                               |
|   | Tap turned off.   | → Turn on tap.   |
|   | Program overlap (1 <sup>st</sup> watering start time has priority). | → Enter new watering program without overlaps.                   |
|   | Soil moisture or rain sensor reports sufficient moisture.           | → If dry, check setting/ location of soil moisture/ rain sensor. |
|   | <b>Batt.</b> indicator flashes because battery is almost flat.      | → Insert new (alkaline) battery                                  |
| <b>Water Computer does not close</b>                          | Minimum quantity of water drawn is less than 20 l/h.                | → Connect more drip heads  |

If you have any other problems with your Water Computer, please contact GARDENA Service.



## 9. Putting Your Water Computer out of Operation

---

### **Over-wintering / storage:**



1. Press **Menu**-key 3 times, select **Prog. Off** with the **▲**-key and confirm with the **O.K.**-key.  
*The watering programs are deleted.*
2. Store your Water Computer in a dry place where it is protected from frost.

### **Disposal:**

*(in accordance with  
RL2002/96/EC)*



The product must not be added to normal household waste. It must be disposed of properly.

Please return flat batteries to a GARDENA dealer or dispose of them properly at your nearest recycling centre. Only dispose of batteries when they are **flat**.

## 10. Accessories

---

### **Automatic control with:**

GARDENA Soil Moisture Sensor

**Art. No. 1188**

GARDENA Rain Sensor electronic

**Art. No. 1189**

GARDENA Automatic Water Distributor

**Art. No. 1198**

## 11. Technical Data

---

|  |   |
|--|---|
| <b>Min./max. operating pressure:</b>                         | 0,5 bar / 12 bar  |
| <b>Minimum flow rate:</b>                                    | 20 l/h  |
| <b>Flow medium:</b>  | Clear fresh water   |
| <b>Max. medium temperature:</b>                              | 40 °C   |
| <b>Number of program-controlled watering cycles per day:</b> | Up to 6   |
| <b>Watering duration per program:</b>                        | 1 min. to 9 hours 59 min.                                   |
| <b>Battery required:</b>                                     | 1 × 9V alkaline manganese (alkaline) battery type IEC 6LR61 |
| <b>Operating time of the battery:</b>                        | approx. 1 year  |

## 12. Service

---

### *Warranty*

GARDENA guarantees this product for 2 years (from date of purchase). This guarantee covers all serious defects of the unit that can be proved to be material or manufacturing faults.

Under warranty we will either replace the unit or repair it free of charge if the following conditions apply:

- The unit must have been handled properly and in keeping with the requirements of the operating instructions.
- Neither the purchaser or a non-authorized third party have attempted to repair the unit.

Damage caused by frost is not covered by the warranty.

This manufacturer's guarantee does not affect the user's existing warranty claims against the dealer/seller.

If you have any problems with your Water Computer, please contact our Customer Service or return the defective unit together with a short description of the problem directly to one of the GARDENA Service Centres listed on the back of this leaflet.

**E** **Responsabilidad de productos**

Advertimos que conforme a la ley de responsabilidad de productos no nos responsabilizamos de daños causados por nuestros aparatos, siempre y cuando dichos daños hayan sido originados por arreglos o reparaciones indebidas, por recambios con piezas que no sean piezas originales GARDENA o bien piezas autorizadas por nosotros, así como en aquellos casos en que la reparación no haya sido efectuada por un Servicio Técnico GARDENA o por un técnico autorizado. Lo mismo es aplicable para las piezas complementarias y accesorios.

**P** **Responsabilidade sobre o produto**

Queremos salientar que segundo a lei da responsabilidade do fabricante, nós não nos responsabilizaremos por danos causados pelo nosso equipamento, quando estes ocorrerem em decorrência de reparações inadequadas ou da substituição de peças por peças não originais da GARDENA, ou peças não autorizadas. A responsabilidade tornar-se-à nula também depois de reparações realizadas por oficinas não autorizadas pela mbém depois de reparações realizadas por oficinas não autorizadas pela GARDENA. Esta restrição valerá também para peças adicionais e acessórios.

**D** **Produkthaftung**

Wir weisen ausdrücklich darauf hin, dass wir nach dem Produkthaftungsgesetz nicht für durch unsere Geräte hervorgerufene Schäden einzustehen haben, sofern diese durch unsachgemäße Reparatur verursacht oder bei einem Teileaustausch nicht unsere Original GARDENA Teile oder von uns freigegebene Teile verwendet werden und die Reparatur nicht vom GARDENA Service oder dem autorisierten Fachmann durchgeführt wird. Entsprechendes gilt für Ergänzungsteile und Zubehör.

**GB** **Product Liability**

We expressly point out that, in accordance with the product liability law, we are not liable for any damage caused by our units if it is due to improper repair or if parts exchanged are not original GARDENA parts or parts approved by us, and, if the repairs were not carried out by a GARDENA Service Centre or an authorised specialist. The same applies to spare parts and accessories.

**PL** **Odpowiedzialność za produkt**

Zwracamy Państwa uwagę na fakt, iż nie odpowiadamy za szkody wyrządzone przez nasze urządzenia, jeżeli powstały one na skutek nieodpowiedniej naprawy albo zastosowania podczas wymiany nieoryginalnych części GARDENA lub części nie polecanych przez nas oraz jeżeli naprawa nie została dokonana przez serwis GARDENA lub autoryzowanego fachowca. Podobne ustalenia obowiązują w przypadku części uzupełniających lub osprzętu.

**E** **Declaración de conformidad de la UE**

El que suscribe GARDENA Manufacturing GmbH, Hans-Lorenser-Str. 40, D-89079 Ulm, declara que la presente mercancía, objeto de la presente declaración, cumple con todas las normas de la UE, en lo que a normas técnicas, de homologación y de seguridad se refiere. En caso de realizar cualquier modificación en la presente mercancía sin nuestra previa autorización, esta declaración pierde su validez.

**P** **Certificado de conformidade da UE**

Os abaixo mencionados GARDENA Manufacturing GmbH, Hans-Lorenser-Str. 40, D-89079 Ulm, por este meio certificam que ao sair da fábrica o aparelho abaixo mencionado está de acordo com as directrizes harmonizadas da UE, padrões de segurança e de produtos específicos. Este certificado ficará nulo se a unidade for modificada sem a nossa aprovação.

**D** **EU-Konformitätserklärung Maschinenverordnung (9. GSGVO) / EMVG / Niedersp. RL**

Der Unterzeichnete GARDENA Manufacturing GmbH, Hans-Lorenser-Str. 40, D-89079 Ulm, bestätigt, dass das nachfolgend bezeichnete Gerät in der von uns in Verkehr gebrachten Ausführung die Anforderungen der harmonisierten EU-Richtlinien, EU-Sicherheitsstandards und produktspezifischen Standards erfüllt. Bei einer nicht mit uns abgestimmten Änderung des Gerätes verliert diese Erklärung ihre Gültigkeit.

**GB** **EU Certificate of Conformity**

The undersigned GARDENA Manufacturing GmbH, Hans-Lorenser-Str. 40, D-89079 Ulm, hereby certifies that, when leaving our factory, the unit indicated below is in accordance with the harmonised EU guidelines, EU standards of safety and product specific standards. This certificate becomes void if the unit is modified without our approval.

**PL Deklaracja zgodności Unii Europejskiej**

Niżej podpisany GARDENA Manufacturing GmbH, Hans-Lorenser-Str. 40, D-89079 Ulm, potwierdza, że poniżej opisane urządzenie w wykonaniu wprowadzonym przez nas do obrotu spełnia wymogi zharmonizowanych wytycznych Unii Europejskiej, standardów bezpieczeństwa Unii Europejskiej i standardów specyficznych dla danego produktu. W przypadku wprowadzenia zmian nie uzgodnionych z nami wyjaśnienie to traci swoją ważność.

|                              |                       |          |                |
|------------------------------|-----------------------|----------|----------------|
| Descripción de la mercancía: | Programador de riego  | Typ:     | Art. Nº:       |
| Descrição do aparelho:       | Computador de rega    | Type :   | Art. Nº:       |
| Bezeichnung des Gerätes:     | Bewässerungscomputer  | Modello: | Art.-Nr.: 1815 |
| Description of the unit:     | Water Computer        | Type:    | Art. No.:      |
| Opis urządzenia:             | Sterownik nawadniania | Typ:     | Nr art.:       |

|                    |             |                                       |      |
|--------------------|-------------|---------------------------------------|------|
| Normativa UE:      |             | Colocación del distintivo CE:         |      |
| Directrizes da UE: | 2004/108/EC | Ano de marcação pela CE:              |      |
| EU-Richtlinien:    |             | Anbringungsjahr der CE-Kennzeichnung: | 1998 |
| EU directives:     | 93/68/EC    | Year of CE marking:                   |      |
| Dyrektywy UE:      |             | Rok nadania znaku CE:                 |      |



Thomas Heint

|                   |                         |
|-------------------|-------------------------|
| Ulm, 17.07.1998   | Dirección Técnica       |
| Ulm, 17.07.1998   | Director Técnico        |
| Ulm, 17.07.1998   | Technische Leitung      |
| Ulm, 17.07.1998   | Technical Dept. Manager |
| Ulm, 17.07.1998r. | Kierownictwo Techniczne |

| <b>PROG</b> | <b>START TIME</b> | <b>RUN TIME</b> | <b>Mo</b> | <b>Tu</b> | <b>We</b> | <b>Th</b> | <b>Fr</b> | <b>Sa</b> | <b>So</b> | <b>2<sup>nd</sup></b> | <b>3<sup>rd</sup></b> |
|-------------|-------------------|-----------------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------------------|-----------------------|
| 1           |                   |                 |           |           |           |           |           |           |           |                       |                       |
| 2           |                   |                 |           |           |           |           |           |           |           |                       |                       |
| 3           |                   |                 |           |           |           |           |           |           |           |                       |                       |
| 4           |                   |                 |           |           |           |           |           |           |           |                       |                       |
| 5           |                   |                 |           |           |           |           |           |           |           |                       |                       |
| 6           |                   |                 |           |           |           |           |           |           |           |                       |                       |

| <b>PROG</b> | <b>START TIME</b> | <b>RUN TIME</b> | <b>Mo</b> | <b>Tu</b> | <b>We</b> | <b>Th</b> | <b>Fr</b> | <b>Sa</b> | <b>So</b> | <b>2<sup>nd</sup></b> | <b>3<sup>rd</sup></b> |
|-------------|-------------------|-----------------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------------------|-----------------------|
| 1           |                   |                 |           |           |           |           |           |           |           |                       |                       |
| 2           |                   |                 |           |           |           |           |           |           |           |                       |                       |
| 3           |                   |                 |           |           |           |           |           |           |           |                       |                       |
| 4           |                   |                 |           |           |           |           |           |           |           |                       |                       |
| 5           |                   |                 |           |           |           |           |           |           |           |                       |                       |
| 6           |                   |                 |           |           |           |           |           |           |           |                       |                       |

| <b>PROG</b> | <b>START TIME</b> | <b>RUN TIME</b> | <b>Mo</b> | <b>Tu</b> | <b>We</b> | <b>Th</b> | <b>Fr</b> | <b>Sa</b> | <b>So</b> | <b>2<sup>nd</sup></b> | <b>3<sup>rd</sup></b> |
|-------------|-------------------|-----------------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------------------|-----------------------|
| 1           |                   |                 |           |           |           |           |           |           |           |                       |                       |
| 2           |                   |                 |           |           |           |           |           |           |           |                       |                       |
| 3           |                   |                 |           |           |           |           |           |           |           |                       |                       |
| 4           |                   |                 |           |           |           |           |           |           |           |                       |                       |
| 5           |                   |                 |           |           |           |           |           |           |           |                       |                       |
| 6           |                   |                 |           |           |           |           |           |           |           |                       |                       |

| <b>PROG</b> | <b>START TIME</b> | <b>RUN TIME</b> | <b>Mo</b> | <b>Tu</b> | <b>We</b> | <b>Th</b> | <b>Fr</b> | <b>Sa</b> | <b>So</b> | <b>2<sup>nd</sup></b> | <b>3<sup>rd</sup></b> |
|-------------|-------------------|-----------------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------------------|-----------------------|
| 1           |                   |                 |           |           |           |           |           |           |           |                       |                       |
| 2           |                   |                 |           |           |           |           |           |           |           |                       |                       |
| 3           |                   |                 |           |           |           |           |           |           |           |                       |                       |
| 4           |                   |                 |           |           |           |           |           |           |           |                       |                       |
| 5           |                   |                 |           |           |           |           |           |           |           |                       |                       |
| 6           |                   |                 |           |           |           |           |           |           |           |                       |                       |



| <b>PROG</b> | <b>START TIME</b> | <b>RUN TIME</b> | <b>Mo</b> | <b>Tu</b> | <b>We</b> | <b>Th</b> | <b>Fr</b> | <b>Sa</b> | <b>So</b> | <b>2<sup>nd</sup></b> | <b>3<sup>rd</sup></b> |
|-------------|-------------------|-----------------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------------------|-----------------------|
| 1           |                   |                 |           |           |           |           |           |           |           |                       |                       |
| 2           |                   |                 |           |           |           |           |           |           |           |                       |                       |
| 3           |                   |                 |           |           |           |           |           |           |           |                       |                       |
| 4           |                   |                 |           |           |           |           |           |           |           |                       |                       |
| 5           |                   |                 |           |           |           |           |           |           |           |                       |                       |
| 6           |                   |                 |           |           |           |           |           |           |           |                       |                       |

| <b>PROG</b> | <b>START TIME</b> | <b>RUN TIME</b> | <b>Mo</b> | <b>Tu</b> | <b>We</b> | <b>Th</b> | <b>Fr</b> | <b>Sa</b> | <b>So</b> | <b>2<sup>nd</sup></b> | <b>3<sup>rd</sup></b> |
|-------------|-------------------|-----------------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------------------|-----------------------|
| 1           |                   |                 |           |           |           |           |           |           |           |                       |                       |
| 2           |                   |                 |           |           |           |           |           |           |           |                       |                       |
| 3           |                   |                 |           |           |           |           |           |           |           |                       |                       |
| 4           |                   |                 |           |           |           |           |           |           |           |                       |                       |
| 5           |                   |                 |           |           |           |           |           |           |           |                       |                       |
| 6           |                   |                 |           |           |           |           |           |           |           |                       |                       |

| <b>PROG</b> | <b>START TIME</b> | <b>RUN TIME</b> | <b>Mo</b> | <b>Tu</b> | <b>We</b> | <b>Th</b> | <b>Fr</b> | <b>Sa</b> | <b>So</b> | <b>2<sup>nd</sup></b> | <b>3<sup>rd</sup></b> |
|-------------|-------------------|-----------------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------------------|-----------------------|
| 1           |                   |                 |           |           |           |           |           |           |           |                       |                       |
| 2           |                   |                 |           |           |           |           |           |           |           |                       |                       |
| 3           |                   |                 |           |           |           |           |           |           |           |                       |                       |
| 4           |                   |                 |           |           |           |           |           |           |           |                       |                       |
| 5           |                   |                 |           |           |           |           |           |           |           |                       |                       |
| 6           |                   |                 |           |           |           |           |           |           |           |                       |                       |

| <b>PROG</b> | <b>START TIME</b> | <b>RUN TIME</b> | <b>Mo</b> | <b>Tu</b> | <b>We</b> | <b>Th</b> | <b>Fr</b> | <b>Sa</b> | <b>So</b> | <b>2<sup>nd</sup></b> | <b>3<sup>rd</sup></b> |
|-------------|-------------------|-----------------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------------------|-----------------------|
| 1           |                   |                 |           |           |           |           |           |           |           |                       |                       |
| 2           |                   |                 |           |           |           |           |           |           |           |                       |                       |
| 3           |                   |                 |           |           |           |           |           |           |           |                       |                       |
| 4           |                   |                 |           |           |           |           |           |           |           |                       |                       |
| 5           |                   |                 |           |           |           |           |           |           |           |                       |                       |
| 6           |                   |                 |           |           |           |           |           |           |           |                       |                       |

**Deutschland / Germany**

GARDENA  
Manufacturing GmbH  
Service Center  
Hans-Lorenser-Straße 40  
D-89079 Ulm  
Produktfragen:  
(+49) 731 490-123  
Reparaturen:  
(+49) 731 490-290  
service@gardena.com

**Argentina**

Argensem® S.A.  
Calle Colonia Japonesa s/n  
(1625) Loma Verde  
Escobar, Buenos Aires  
Phone: (+54) 34 88 49 40 40  
info@argensem.com.ar

**Australia**

Nylex Consumer Products  
50-70 Stanley Drive  
Somerton, Victoria, 3062  
Phone: (+61) 1800 658 276  
spare.parts@nylex.com.au

**Austria / Österreich**

GARDENA  
Österreich Ges.m.b.H.  
Stettnerweg 11-15  
2100 Korneuburg  
Tel.: (+43) 22 62 7 45 45 36  
kundendienst@gardena.at

**Belgium**

GARDENA Belgium NV/SA  
Sterrebeekstraat 163  
1930 Zaventem  
Phone: (+32) 2 720 92 12  
Mail: info@gardena.be

**Brazil**

Palash Comércio e  
Importação Ltda.  
Rua América Brasileira,  
2414 - Chácara Sto Antonio  
São Paulo - SP - Brasil -  
CEP 04715-005  
Phone: (+55) 11 5181-0909  
eduardo@palash.com.br

**Bulgaria**

DENEX LTD.  
2 Luis Ahalier Str. - 7th floor  
Sofia 1404  
Phone: (+359) 2 958 18 21  
office@denex-bg.com

**Canada**

GARDENA Canada Ltd.  
100 Summerlea Road  
Brampton, Ontario L6T 4X3  
Phone: (+1) 905 792 93 30  
info@gardenacanada.com

**Chile**

Antonio Martinic y Cia Ltda.  
Cassillas 272  
Centro de Cassillas  
Santiago de Chile  
Phone: (+56) 2 20 10 708  
garfar\_cl@yahoo.com

**Costa Rica**

Compania Exim  
Euroiberoamericana S.A.  
Los Colegios, Moravia,  
200 metros al Sur del Colegio  
Saint Francis - San José  
Phone: (+506) 297 68 83  
exim\_euro@racsa.co.cr

**Croatia**

KLIS d.o.o.  
Stanciceva 79, 10419 Vukovina  
Phone: (+385) 1 622 777 0  
gardena@klis-trgovina.hr

**Cyprus**

FARMOKIPIKI LTD  
P.O. Box 7098  
74, Digeni Akrita Ave.  
1641 Nicosia  
Phone: (+357) 22 75 47 62  
condam@spidernet.com.cy

**Czech Republic**

GARDENA spol. s r.o.  
Řípská 20 a, č.p. 1153  
627 00 Brno  
Phone: (+420) 800 100 425  
gardena@gardenabrno.cz

**Denmark**

GARDENA Norden AB  
Salgsafdeling Danmark  
Box 9003, S-200 39 Malmö  
info@gardena.dk

**Finland**

Habitec Oy  
Martinkyläntie 52  
01720 Vantaa

**France**

GARDENA  
PARIS NORD 2  
69, rue de la Belle Etoile  
BP 57080  
ROISSY EN FRANCE  
95948 ROISSY CDG CEDEX  
Tél. (+33) 0826 101 455  
service.consommateurs@  
gardena.fr

**Great Britain**

GARDENA UK Ltd.  
27-28 Brenkley Way  
Blezard Business Park  
Seaton Burn  
Newcastle upon Tyne  
NE13 6DS  
info@gardena.co.uk

**Greece**

Agrokip  
Psomadopoulos S.A.  
Ifaistou 33A  
Industrial Area Koropi  
194 00 Athens Greece  
V.A.T. EL093474846  
Phone: (+30) 210 66 20 225  
service@agrokip.gr

**Hungary**

GARDENA  
Magyarország Kft.  
Késmárk utca 22  
1158 Budapest  
Phone: (+36) 80 20 40 33  
gardena@gardena.hu

**Iceland**

Ó. Johnson & Kaaber  
Tunguhalsi 1  
110 Reykjavik  
ooj@ojk.is

**Ireland**

Michael McLoughlin & Sons  
Hardware Limited  
Long Mile Road  
Dublin 12

**Italy**

GARDENA Italia S.p.A.  
Via Donizetti 22  
20020 Lainate (Mi)  
Phone: (+39) 02.93.94.79.1  
info@gardenaitalia.it

**Japan**

KAJUICHI Co. Ltd.  
Sumitomo Realty &  
Development Kojimachi  
BLDG., 8F  
5-1 Nibanncyo, Chiyoda-ku  
Tokyo 102-0084  
Phone: (+81) 33 264 4721  
m\_ishihara@kaku-ichi.co.jp

**Luxembourg**

Magasins Jules Neuberger  
39, rue Jacques Stas  
Luxembourg-Gasperich 2549  
Case Postale No. 12  
Luxembourg 2010  
Phone: (+352) 40 14 01  
api@neuberger.lu

**Netherlands**

GARDENA Nederland B.V.  
Postbus 50176  
1305 AD ALMERE  
Phone: (+31) 36 521 00 00  
info@gardena.nl

**Neth. Antilles**

Jonka Enterprises N.V.  
Sta. Rosa Weg 196  
P.O. Box 8200, Curaçao  
Phone: (+599) 9 767 66 55  
pgm@jonka.com

**New Zealand**

NYLEX New Zealand Limited  
Building 2, 118 Savill Drive  
Mangere, Auckland  
Phone: (+64) 0800 22 00 88  
spare.parts@nylex.com.au

**Norway**

GARDENA Norden AB  
Salgskontor Norge  
Karihaugveien 89  
1086 Oslo  
info@gardena.no

**Poland**

GARDENA Polska Sp. z o.o.  
Szymanów 9 d  
05-532 Baniocza  
Phone: (+48) 22 727 56 90  
gardena@gardena.pl

**Portugal**

GARDENA Portugal Lda.  
Recta da Granja do Marquês  
Edif. GARDENA Algueirão  
2725-596 Mem Martins  
Phone: (+351) 21 922 85 30  
info@gardena.pt

**Romania**

MADEX INTERNATIONAL SRL  
Soseaua Odaii 117-123,  
Sector 1, București, RO 013603  
Phone: (+40) 21 352 76 03  
madex@ines.ro

**Russia / Россия**

ООО ГАРДЕНА РУС  
123007, г. Москва  
Хорошевское шоссе, д. 32А  
Тел.: (+7) 495 647 25 10  
info@gardena-rus.ru

**Singapore**

Hy - Ray PRIVATE LIMITED  
40 Jalan Pemimpin  
Building 2, 118 Savill Drive  
Mangere, Auckland  
Phone: (+65) 6253 2277  
hyray@singnet.com.sg

**Slovak Republic**

GARDENA Slovensko, s.r.o.  
Panónska cesta 17  
851 04 Bratislava  
Phone: (+421) 263 453 722  
info@gardena.sk

**Slovenia**

GARDENA d.o.o.  
Brodišče 15  
1236 Trzin  
Phone: (+386) 1 580 93 32  
servis@gardena.si

**South Africa**

GARDENA  
South Africa (Pty.) Ltd.  
P.O. Box 11534  
Vorna Valley 1686  
Phone: (+27) 11 315 02 23  
sales@gardena.co.za

**Spain**

GARDENA IBÉRICA S.L.U.  
C/ Basauri, nº 6  
La Florida  
28023 Madrid  
Phone: (+34) 91 708 05 00  
atencioncliente@gardena.es

**Sweden**

GARDENA Norden AB  
Försäljningskontor Sverige  
Box 9003  
200 39 Malmö  
info@gardena.se

**Switzerland / Schweiz**

GARDENA (Schweiz) AG  
Bitzberg 1  
8184 Bachenbülach  
Phone: (+41) 848 800 464  
info@gardena.ch

**Turkey**

GARDENA / Dost Diş Ticaret  
Müessillik A.Ş. Sanayi  
Çad. Adil Sokak No. 1  
Kartal - İstanbul  
Phone: (+90) 216 38 93 939  
info@gardena-dost.com.tr

**Ukraine / Украина**

ALTSEST JSC  
4 Petropavlivska Street  
Petropavlivska, Borschahivka  
Town, Kyivo Svyatoshyn Region  
08130, Ukraine  
Phone: (+380) 44 459 57 03  
upyr@altsest.kiev.ua

**USA**

Melnor Inc.  
3085 Shawnee Drive  
Winchester, VA 22604  
Phone: (+1) 540 722-9080  
service\_us@melnor.com

1815-29.960.07/0507  
© GARDENA  
Manufacturing GmbH  
D-89070 Ulm  
http://www.gardena.com